

VVT Zone II Controller

Installation and Start-up Guide





Verify that you have the most current version of this document from www.hvacpartners.com, the **Carrier Partner Community** website, or your local Carrier office.

Important changes are listed in **Document revision history** at the end of this document.

©2024 Carrier. All rights reserved.



Contents

Introduction	1
What is a VVT Zone II?	1
Specifications	2
Linkage.....	5
Safety Considerations	6
Field-supplied hardware	7
Installing the VVT Zone II	8
Mounting the VVT Zone II	8
To mount the controller and actuator	8
Wiring the VVT Zone II for power	12
To wire the controller for power.....	12
Addressing the VVT Zone II	13
Wiring for communications	13
Wiring specifications for BACnet MS/TP and ARC156.....	14
To wire the controller to the BACnet network	14
Wiring devices to the VVT Zone II's Rnet port	14
Wiring specifications	15
To wire ZS sensors to the controller.....	15
To wire the Wireless Adapter for wireless sensors.....	16
To wire an Equipment Touch to the VVT Zone II	18
To wire the TruVu™ ET Display	18
Wiring devices to the VVT Zone II's Act Net port	20
Wiring sensors to the VVT Zone II's inputs	21
Wiring specifications	22
To wire the T55 sensor to the controller.....	22
To wire the Supply Air Temperature sensor to the controller	22
To wire a Duct Air Sensor to the controller	23
To wire the CO2 sensor to the controller	23
To wire the Relative Humidity sensor to the controller	25
Wiring a remote occupancy sensor	26
Wiring equipment to outputs	26
Wiring specifications	27
Wiring diagram legend	27
Single duct only	28
Single duct 2-position hot water.....	28
Single duct modulating hot water	29
Single duct SCR electric heat	29
Single duct combination base board and ducted heat.....	30
Single duct staged electric heat.....	31
Fan box 2-position hot water	32
Fan box modulating hot water - ducted or baseboard	33
Fan box SCR electric heat.....	34
Fan box combination baseboard and ducted heat	35
Fan box 2-stage electric heat	36
Wiring field-supplied actuators to the analog output.....	36
Start-up	39
Configuring the VVT Zone II's properties	39
Configuring ZS Sensors	41
Performing system checkout	42
Commissioning the VVT Zone II	42
Balancing the system	43
Step 1: Prepare for balancing	43

Step 2: Balance each zone.....	44
Step 3: Set the system static pressure.....	45
Sequence of operation	46
Temperature sensors	46
Zone airflow control.....	47
Zone reheat control	47
Demand control ventilation (DCV) and dehumidification using optional sensors.....	49
Occupancy.....	50
Alarms	50
Demand limiting	51
Linkage.....	52
Linkage modes and operation.....	53
Zone Environmental Index.....	54
To adjust the driver properties.....	55
Driver	55
Device	56
Notification Classes.....	56
Calendars	57
Common Alarms	58
Specific Events	58
Switches, Jumpers, Options	59
Act Net Network Details	59
Troubleshooting	60
LED's	60
To get the serial number	61
To restore factory defaults	61
To replace the battery.....	62
Compliance	63
FCC Compliance.....	63
CE and UKCA Compliance	63
BACnet Compliance.....	63
Appendix A: VVT Zone II Points/Properties	64
Status.....	64
Unit Configuration.....	65
Setpoints	67
Setpoints for ZS and wireless sensors	73
Alarm Configuration	74
Service Configuration	76
Maintenance.....	82
Alarms	85
Linkage.....	86
I/O Points.....	88
Appendix B: VVT terminal modes.....	92
Appendix C: ZS Sensor display for VVT Zone II	94
Appendix D: BACnet points list.....	95
Document revision history	98



Introduction

What is a VVT Zone II?

The VVT Zone II (#OPN-VTZC-02), a component of the i-Vu® Control System, controls zone temperature in single duct, fan powered, Variable Volume and Temperature (VVT®) applications.


NOTE The VVT Zone II is available in both English or Metric units. The metric version has (-M) appended to the part number. Everything in this document applies to both versions.

The VVT Zone II with actuator maintains zone temperature by operating the terminal fan and regulating the flow of conditioned air into the space. Buildings with diverse loading conditions can be supported by controlling the air source heating and cooling sources or supplemental heat. The VVT Zone II provides dedicated control functions for single duct and fan box terminals with modulating heat, up to 3 stages of ducted heat, or combination baseboard and ducted heat.

The i-Vu Control System uses linkage to exchange data between the zone terminals and their air source to form a coordinated HVAC system. The system's air source controller, zone controllers, and bypass controller are linked so that their data exchange can be managed by one zone controller configured as the VVT Master.

You can disconnect the actuator from the controller and mount them separately, connecting them with just the actuator cable or using an additional extension cable, up to a maximum distance of 300 feet.

The following illustration shows the VVT Zone II in a typical i-Vu® Control System.

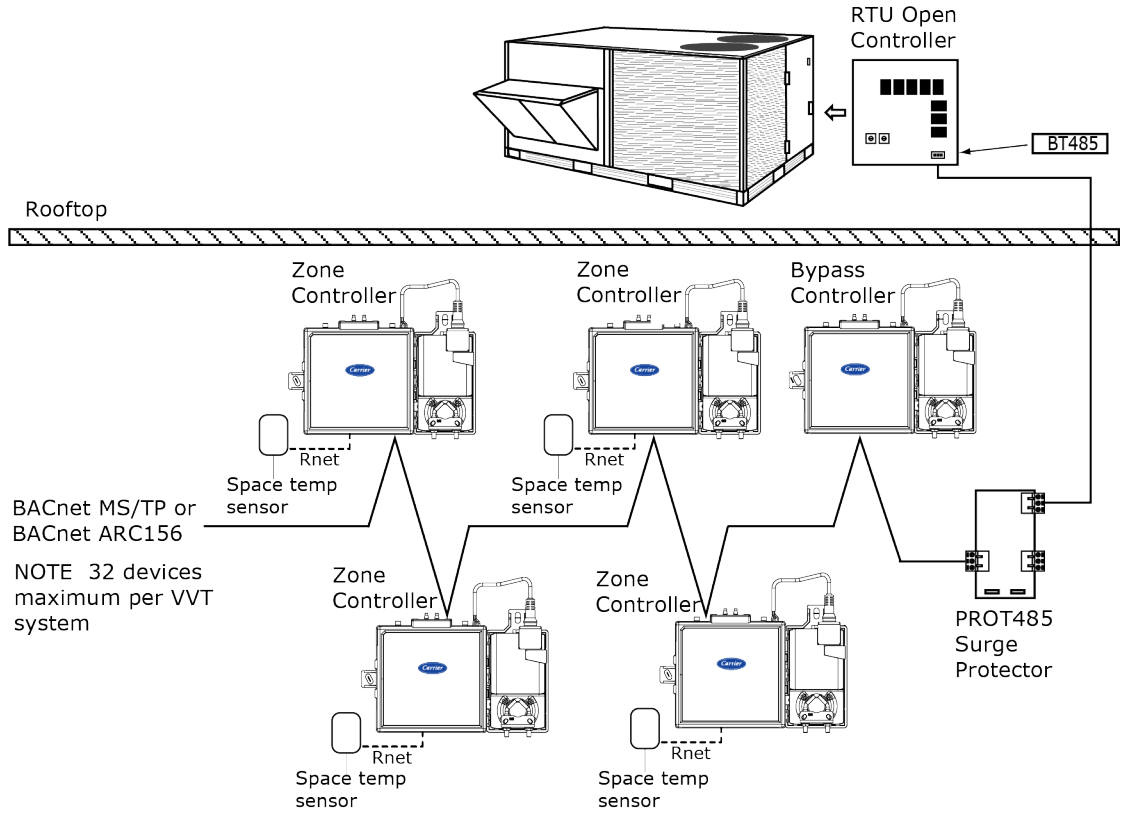



NOTE This document gives instructions for field-installation of a VVT Zone II in an i-Vu® Control System. However, VVT Zone IIs are available factory-mounted to Carrier’s round and rectangular dampers. Damper assemblies have an integrated duct temperature sensor.


Specifications

Driver	drv_vvtopn02
Power	24 Vac ±10%, 50–60 Hz 14 VA power consumption 26 Vdc (25 V min, 28.8 V max), 3W Single Class 2 source only, 100 VA or less

Power consumption*		
If this feature is unused	power consumption is reduced by (VA):	NOTES
+12V_RNET	10	Power consumption scales linearly with current loading on the +12V_RNET port (0 to 260 mA)
AO1	1	"Unused" = open circuit or no physical load on hardware
AO2	1	
ActNET Power	-	Be aware that loading on the ActNET port is additional to on-board consumption and rating.

*The VVT Zone II is rated for a 50VA power supply. This table addresses power consumption, not power rating.

Actuator	Belimo brushless DC motor, torque 45 inch-pounds (5 Nm), runtime 154 seconds
Act Net port	To connect the actuator cable and the VVT Zone II
BACnet port	For communication with the controller network using BACnet ARC156 (156 kbps) or BACnet MS/TP (9600 bps – 76.8 kbps)
Rnet port	<ul style="list-style-type: none"> Supports up to 5 wireless and/or ZS sensors, and one Equipment Touch or TruVu™ ET Display. Supplies 12 Vdc/200 mA power to the Rnet at an ambient temperature of 77 °F (25 °C) with a 24 Vac nominal power source. NOTE Ambient temperature and power source fluctuations may reduce the power supplied by the Rnet port. <p>NOTE If the total power required by the sensors on the Rnet exceeds the power supplied by the Rnet port, use an external power source. The Wireless Adapter, Equipment Touch, or TruVu™ ET Display must be powered by an external power source. See the specifications in each device's Installation and Start-up Guide to determine the power required.</p>
Local Access port	For system start-up and troubleshooting using Field Assistant
Thermistor inputs	Accepts Precon type II thermistors (10kOhm at 77 °F [25 °C]) Range: -50 °F (-45.5 °C) to 250 °F (121.1 °C)
Dry contact inputs	A 3.3 Vdc wetting voltage used to detect the contact position, resulting in a 0.3 mA maximum sense current when the contacts are closed.
Voltage inputs	0-5 Vdc. Input impedance is approximately 30 kOhms
Input resolution	10 bit A/D
Binary outputs	3 binary outputs, relay contact rated at 1 A max. @ 24 Vac/Vdc. Configured normally open.
Analog output	1 analog output, 0–10 Vdc (5 mA max). The controlled device must have a minimum of 2000 Ohms resistance measured from its input to ground and must share the same ground as the controller.
Output resolution	8 bit D/A
Battery	10-year Lithium CR2032 battery retains the following data for a maximum of 10,000 hours during power outages: control programs, editable properties, schedules, and trends.

Protection	<p>Built-in surge and transient protection for power and communications in compliance with EN61000-6-1.</p> <p>Incoming power and network connections are protected by non-replaceable internal solid-state polyswitches that reset themselves when the condition that causes a fault returns to normal.</p> <p>The power, network, input, and output connections are also protected against transient excess voltage/surge events lasting no more than 10 msec.</p> <p> CAUTION To protect against large electrical surges on serial EIA-485 networks, place a PROT485 at each place wire enters or exits the building.</p>
BT485 connector	Attach a BT485 (not included) to a controller at the beginning and end of a network segment to add bias and to terminate a network segment.
Status indicators	LEDs indicate status of communications, running, errors, power, and digital outputs
Environmental operating range	32 to 130°F (0 to 54.4°C), 10–90% relative humidity, non-condensing
Storage temperature range	-24 to 140°F (-30 to 60°C), 0 to 90% relative humidity, non-condensing
Physical	Fire-retardant plastic ABS, UL94-5VA
Controller and actuator overall dimensions	Width: 8.9 in. (22.7 cm) Height: 5.9 in. (15.0 cm)
Controller and actuator mounting dimensions	7.1 in. (18.0 cm) from left side controller mounting hole centerline to actuator mounting hole centerline
Controller overall dimensions	Width: 6.4 in. (16.3 cm) Height: 5.7 in. (14.5 cm) Depth: 2.1 in. (5.3 cm)
Controller mounting dimensions	5.3 in. (13.4 cm) from left side controller mounting hole centerline to right side controller mounting hole centerline
Actuator overall dimensions	Width: 3.0 in. (7.6 cm) Height: 5.9 in. (15.0 cm) Depth: 2.5 in. (6.4 cm)
Actuator mounting dimensions	4.4 in. (11.2 cm) from shaft centerline to actuator mounting hole centerline
Panel depth	2.5 in. (6.4 cm) minimum
Shaft dimensions	Minimum shaft diameter: .25 in. (.64 cm) Maximum shaft diameter: .63 in. (1.59 cm) Minimum shaft length: 1.75 in. (4.45 cm)
Weight	1.8 lbs (0.82 kg)
BACnet support	Conforms to the BACnet Advanced Application Controller (B-AAC) Standard Device Profile as defined in ANSI/ASHRAE Standard 135-2012 (BACnet) Annex L, Protocol Revision 9
Listed by	UL-916 (PAZX), cUL-916 (PAZX7), FCC Part 15-Subpart B, Class B, CE

Compliance

Europe:  Mark, UK: 
EN50491-5-2:2009; Part 5-2: EMC requirements for HBES/BACS used in residential, commercial and light industry environment
RoHS Compliant: 2015/863/EU
REACH Compliant
Australia and New Zealand:  RCM Mark, AS/NZS IEC 61000-6-3


Linkage

The i-Vu® Control System uses linkage to exchange data between the zone terminals and their air source to form a coordinated HVAC system. The system's air source controller and zone controllers are linked so that their data exchange can be managed by one zone controller configured as the VVT Master.


A VVT Master can have a maximum of 32 slave zone controllers reporting to it. An MS/TP network is limited to a maximum of 60 controllers, but a VVT Master can have controllers from other networks as slaves.

A linked VVT system can be as simple as a single MS/TP network with a VVT Master and slaves, or it can be as complex as multiple MS/TP networks with slaves on other networks. See the following examples.

EXAMPLE #1: A simple network. The VVT Master exchanges data between the slave controllers and the RTU controller. The linked controllers on an MS/TP network must be sequentially addressed, and the VAV Master must have the highest address.

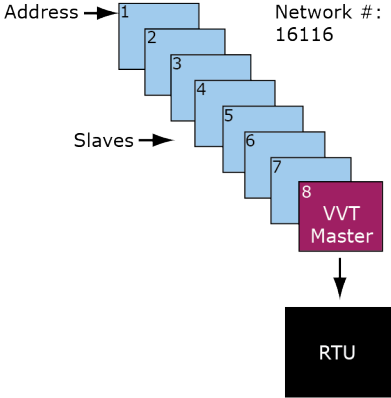

EXAMPLE #2: The above network plus slave controllers on other networks.

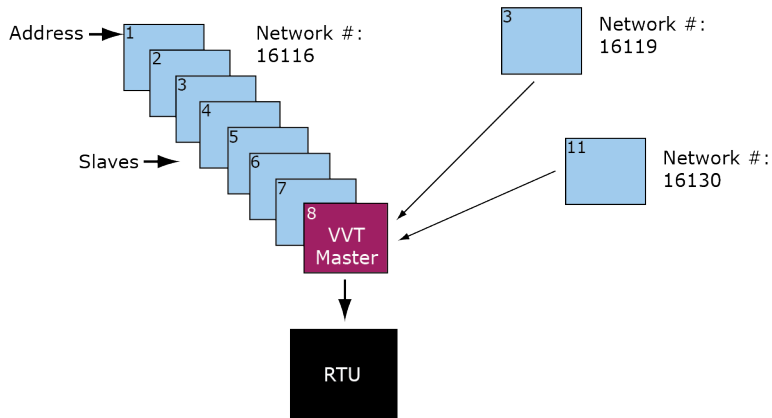

You set up linkage for the system by defining the Linkage properties for each controller. See *Linkage Properties* (page 86).

Safety Considerations

 **CAUTION**


Air conditioning equipment will provide safe and reliable service when operated within design specifications. The equipment should be operated and serviced only by authorized personnel who have a thorough knowledge of system operation, safety devices, and emergency procedures.

Good judgment should be used in applying any manufacturer's instructions to avoid injury to personnel or damage to equipment and property.

 **WARNING Electrical Shock Hazard**

Failure to follow this warning could cause personal injury, death, and/or equipment damage.

Disconnect all power to the unit before performing maintenance or service. Unit may automatically start if power is not disconnected.

 **WARNING** Follow all local, state, and federal laws regarding disposal of equipment containing hazardous materials such as mercury contactors.

Field-supplied hardware

Each zone controller installation requires the following field-supplied components:

- zone terminal unit
- round or rectangular mounting bracket
- space temperature sensor
- supply air temperature sensor
- 2 x 4 in. standard single gang electrical box
- transformer – 24 Vac, 40 VA
- two no. 10 x 1/2 in. sheet metal screws (to secure SAT sensor to duct)
- two no. 6-32 x 5/8 in. screws (to mount space temperature sensor base to electrical box)
- wiring
- bushings (required when mounting SAT sensor in a duct 6-in. (15.2 cm) or less in diameter)

Optional:

- contractors (if required for fan or electric heat)
- indoor air quality sensor
- relative humidity sensor
- 2 screws and 2 hollow wall anchors (to mount relative humidity sensor directly to wall)
- valve and actuator for hot water heat (if required)

Installing the VVT Zone II


To install the VVT Zone II:

- 1 *Mount the controller to the VVT box. (page 8)*
- 2 *Wire the controller for power. (page 12)*
- 3 *Set the controller's address. (page 13)*
- 4 *Wire the controller to the BACnet MS/TP or BACnet ARC156 network. (page 13)*
- 5 *Wire devices to the Rnet port. (page 14)*
- 6 *Wire sensor(s) to the controller. (page 21)*
- 7 *Wire equipment to the controller's outputs. (page 26)*


Mounting the VVT Zone II

To mount the controller and actuator

To disconnect and mount the controller and actuator separately

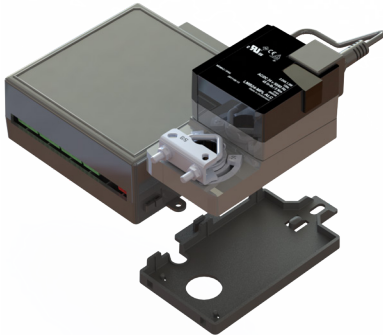


Disconnect the actuator from the controller by inserting a screw driver in the slot on the back of the VVT Zone II and pressing the tab. The actuator cable or an attached extension cable must connect to the controller's **Act Net** port.

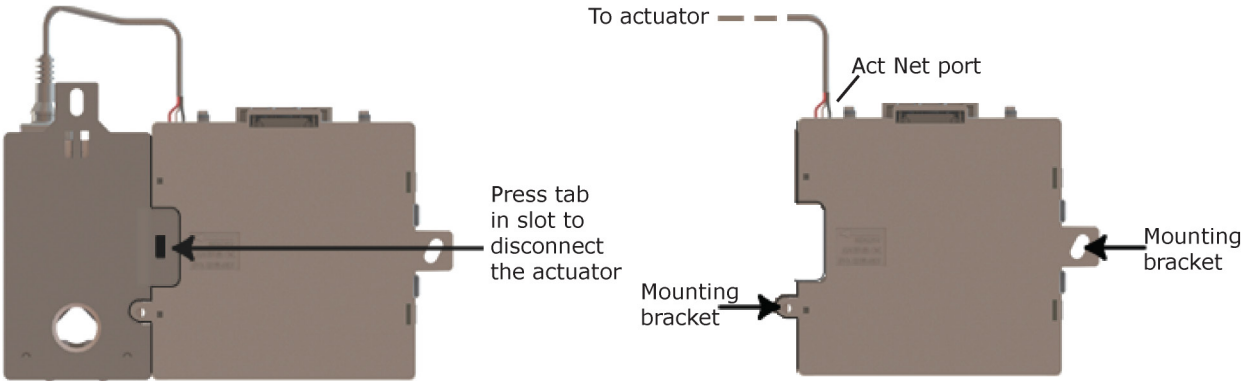


Adding an extension cable

If you need to mount the actuator more than 14 in. from the controller, you can use an 18 AWG wire for an extension cable. The maximum distance that the actuator and controller can be separated is 300 feet (91.4 m). Connect the extension cable to the end of the actuator cable. You can use connectors or splice the wires. Terminate the extension cable in the **Act Net** port on the controller.


- 1 Turn the damper shaft to fully close the damper position. Ensure the damper is closed.
- 2 Mount the controller to the VVT terminal by sliding the clamp assembly onto the damper shaft.

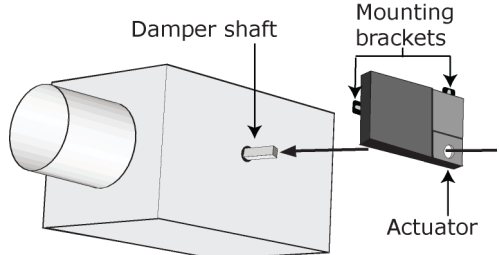

NOTE For service access, allow at least 1 foot (.3 m) of clearance between the front of the controller and adjacent surfaces.

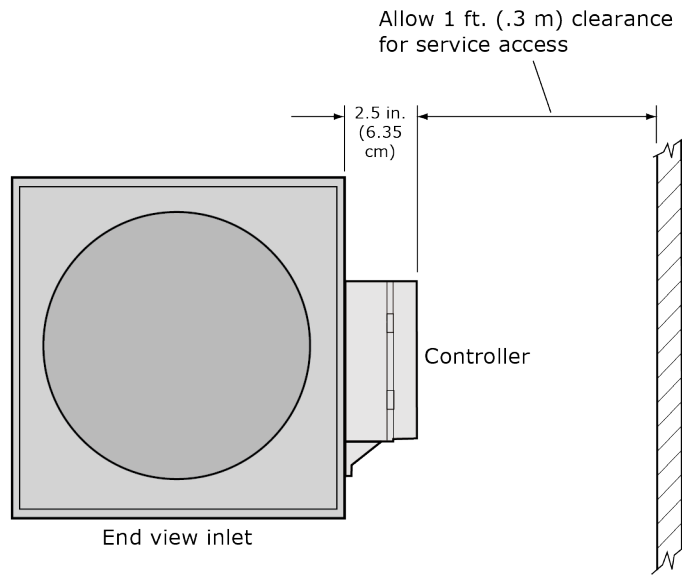

- Secure the controller and the actuator by installing the screws, anti-rotation slot's bushings, and o-rings that are supplied with the VVT Zone II.

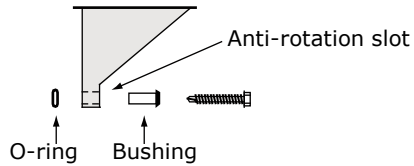


NOTES


- Center the bushing in the slot. Failure to do so may cause the actuator to stick or bind.
- The VVT Zone II must be secured, but loose enough to allow movement. of the damper shaft.

⚠ CAUTIONS


- You **must** use the screws, anti-rotation slot's bushings, and o-rings that are shipped with the VVT Zone II.
- Overtightening the screws so that the controller and actuator cannot move may damage the unit.

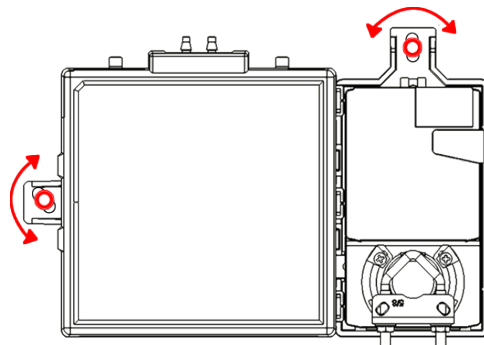

- 4 Hold down the actuator damper release button and rotate the actuator clamp in the same direction that closed the damper. Rotate the clamp until it stops, then rotate it back one notch.

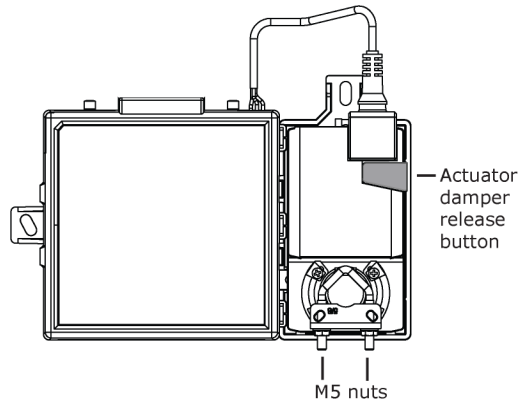


- 5 Release the button.
- 6 Tighten the actuator clamp to the damper shaft by tightening the two M5 nuts.
- 7 Hold down the actuator damper release button and rotate the damper from fully closed to fully open. If the damper traveled less than 90 degrees, do the following to set the actuator's fully open position:
 - a) Loosen the appropriate stop clamp screw. See figure below.
 - b) Move the stop clamp until it contacts the edge of the actuator cam.
 - c) Tighten the screw.

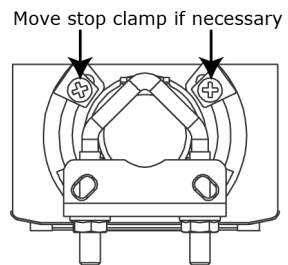

- 8 Hold down the actuator damper release button, rotate the damper to verify that it fully opens and closes, then release the button.

Wiring the VVT Zone II for power


 **WARNING** Do not apply line voltage (mains voltage) to the controller's ports and terminals.

 **CAUTIONS**


- The VVT Zone II is powered by a Class 2 power source. Take appropriate isolation measures when mounting it in a control panel where non-Class 2 circuits are present.
- Carrier controllers can share a power supply as long as you:
 - Maintain the same polarity.
 - Use the power supply only for Carrier controllers.

To wire the controller for power

- 1 To access the screw terminal connectors, lift up the controller's cover by pulling the tabs located on both sides of the controller's left mounting bracket.

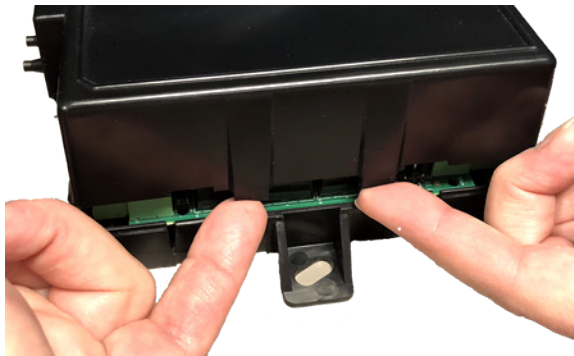

- 2 Remove power from the power supply.
- 3 Pull the screw terminal connector from the controller's power terminals labeled **Gnd** and **24 Vac**.

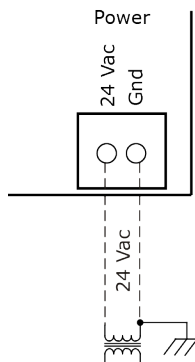

- 4 Connect the transformer wires to the screw terminal connector.


- 5 Apply power to the power supply.
- 6 Measure the voltage at the VVT Zone II's power input terminals to verify that the voltage is within the operating range of 21.6–26.4 Vac.
- 7 Connect a 4-inch (10.2 cm) wire from **Gnd** to the control panel.
- 8 Insert the screw terminal connector into the VVT Zone II's power terminals.
- 9 Verify that the **Power** LED is on and the **Run** LED is blinking.

Addressing the VVT Zone II

You must give the VVT Zone II an address that is unique on the network. You can address the VVT Zone II before or after you wire it for power.

- 1 If the VVT Zone II has been wired for power, pull the screw terminal connector from the controller's power terminals labeled **Gnd** and **24 Vac**. The controller reads the address each time you apply power to it.
- 2 Using the rotary switches, set the controller's address. Set the **Tens (10's)** switch to the tens digit of the address, and set the **Ones (1's)** switch to the ones digit.

EXAMPLE If the controller's address is 25, point the arrow on the **Tens (10's)** switch to 2 and the arrow on the **Ones (1's)** switch to 5.

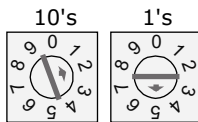

CAUTION The factory default setting is **00** and must be changed to successfully install your VVT Zone II.

Wiring for communications

The VVT Zone II communicates using BACnet on the following types of network segments:


- MS/TP communicating at 9600 bps, 19.2 kbps, 38.4 kbps, or 76.8 kbps
- ARC156 communicating at 156 kbps

NOTE For more networking details, see the *Open Controller Network Wiring Installation Guide*.


Wiring specifications for BACnet MS/TP and ARC156

Cable: 22 AWG or 24 AWG, low-capacitance, twisted, stranded, shielded copper wire

Maximum length: 2000 feet (610 meters)

 **WARNING** Do not apply line voltage (mains voltage) to the controller's ports and terminals.

To wire the controller to the BACnet network

 **WARNING** Attaching any ARCNET or MS/TP network to the **Act Net** port damages BT485s, DIAG485s, or terminating resistors on that network.

- 1 Pull the screw terminal connector from the controller's power terminals labeled **Gnd** and **24 Vac**.
- 2 Check the communications wiring for shorts and grounds.
- 3 Connect the communications wiring to the controller's screw terminals labeled **Net +**, **Net -**, and **Shield**.

NOTE Use the same polarity throughout the network segment.

- 4 Set the communication type and baud rate.

For...	Set BACnet ARC156 or MS/TP Jumper to...	Set DIP switches 1 and 2 to...
ARC156	ARC156	N/A. Baud rate will be 156 kbps regardless of the DIP switch settings.
MS/TP	MS/TP	The appropriate baud rate. See the MS/TP Baud diagram on the controller.

NOTE Use the same baud rate for all controllers on the network segment.

- 5 If the VVT Zone II is at either end of a network segment, connect a BT485 to the VVT Zone II.
- 6 Insert the power screw terminal connector into the VVT Zone II's power terminals.
- 7 Verify communication with the network by viewing a Module Status report in the i-Vu® interface.

Wiring devices to the VVT Zone II's Rnet port

The Rnet communicates at a rate of 115 kbps and should be wired in a daisy-chain configuration.

Supports up to

- 5 wireless and/or ZS sensors
- One Equipment Touch
- One TruVu™ ET Display

For more detailed instructions, see the device's *Installation Guide*.



CAUTION Rnet power

The Rnet port provides 12 Vdc/200 mA* maximum at 32°F (25°C). that can be used to power zone sensors. If the total power required by the sensors on the Rnet exceeds the power supplied by the port, use an external power supply. See the sensor's Installation and Start-up Guide to determine the power required.

* These numbers will be reduced at higher temperatures.

Wiring specifications

Cable from sensor to controller:	If <100 ft (30.5 meters)	22 AWG, unshielded
	If >100 ft (30.5 meters)	22 AWG, shielded
Maximum length:	500 feet (152 meters)	

To wire ZS sensors to the controller


ZS Sensors are thermistor-based temperature sensors that may optionally sense humidity, CO₂, or VOC. ZS Sensors are wired to the Rnet port on i-Vu® Open controllers.

You can use the following ZS sensors:

- ZS Standard
- ZS Plus
- ZS Pro

NOTE The ZS CO₂ model uses 190 mA during sample period. Use auxiliary 12 Vdc, unless it is the only device on the Rnet port.

- 1 Remove power from the VVT Zone II.
- 2 Partially cut, then bend and pull off the outer jacket of the Rnet cable(s). Do not nick the inner insulation. Strip about .25 inch (.6 cm) of the inner insulation from each wire.

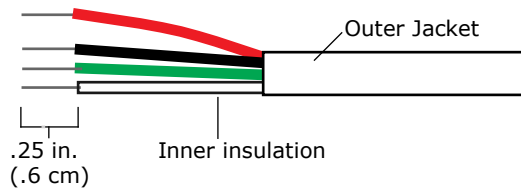

- 3 Wire each terminal on the sensor to the same terminal on the controller. See diagram below.

NOTE Carrier recommends that you use the following Rnet wiring scheme:

Connect this wire...	To this terminal...
Red	+12V
Black	Rnet-
White	Rnet+
Green	Gnd

- 4 Apply power to the VWT Zone II.

To wire the Wireless Adapter for wireless sensors

WARNING Do not apply line voltage (mains voltage) to the Wireless Adapter.

The Carrier wireless sensors are available in 868, 902, and 928 MHz radio frequency. The sensors are thermistor-based temperature sensors that may optionally sense humidity.

Wireless sensors communicate through a Wireless Adapter, which is wired to the Rnet port of the controller.

REQUIREMENTS

- A v6.5 or later i-Vu® system
- v6-xx-xxx or later controller drivers


To configure the control program for the desired user interaction with the sensor, see the *Wireless Sensors Application Guide*. For detailed instructions, see the *Wireless Sensors Installation Guide*.

To wire, power, and mount the Wireless Adapter

NOTES


- The Wireless Adapter requires a 24 Vac power supply. It is not powered by the Rnet.
- If the Wireless Adapter will be:
 - Daisy-chained on the Rnet with ZS sensors, an Equipment Touch, or TruVu™ ET Display use the standard 4-conductor Rnet wiring.
 - The only device on the Rnet, you can use a 3-conductor cable instead of the standard 4-conductor Rnet cable.

- 1 Turn off the power to the controller that the Wireless Adapter will be wired to.
- 2 Partially cut, then bend and pull off the outer jacket of the Rnet cable(s). Do not nick the inner insulation.

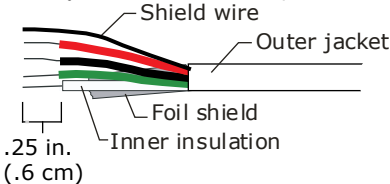

- 3 Strip about 0.25 inch (0.6 cm) of the inner insulation from each wire.
- 4 Wire the **Rnet +**, **Rnet -**, and **Gnd** terminals on the controller's **Rnet** port to the terminals of the same name on the Wireless Adapter's Rnet connector.

NOTE If using shielded wire, connect the shield wire and the ground wire to the **Gnd** terminal.

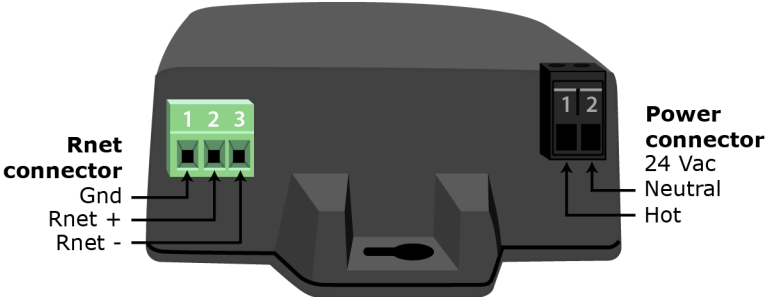

- 5 Wire the 24 Vac external power supply to the Wireless Adapter's power connector.
- 6 Mount the Wireless Adapter by inserting 2 screws through the mounting tabs on each end of the Wireless Adapter.
- 7 Apply power to the external power supply.
- 8 Verify that the LED on top of the Wireless Adapter is blinking. See "LED" below.
- 9 Turn on the controller's power.

LED

The blue LED on the top of the Wireless Adapter indicates the following:

If the LED is...	Then the device...
Off	Is not powered or there is a problem.
Blinking	Is working properly.
Steadily on	Has a problem. Do one of the following: <ul style="list-style-type: none"> • Cycle power to the device. • Insert a small screwdriver or paper clip into the hole next to the LED to reboot the device.

To wire an Equipment Touch to the VVT Zone II

NOTES


- The Equipment Touch requires a 24 Vac power supply. It is not powered by the Rnet.
- If the Equipment Touch will be:
 - Daisy-chained on the Rnet with ZS sensors or a Wireless Adapter, use the standard 4-conductor Rnet wiring and follow the wiring instructions *To wire ZS sensors to the VVT Zone II* (page 15).
 - The only device on the Rnet, you can use a 2-conductor cable instead of the standard 4-conductor Rnet cable and follow the instructions below.
- For complete Equipment Touch installation instructions including wiring diagrams, see the *Equipment Touch Installation and Setup Guide*.



CAUTION The VVT Zone II can share a power supply with the Carrier controller as long as:

- The power supply is AC power.
- You maintain the same polarity.
- You use the power source only for Carrier controllers.

- 1 Turn **off** the VVT Zone II's power.
- 2 Partially cut, then bend and pull off the outer jacket of the cable. Do not nick the inner insulation.

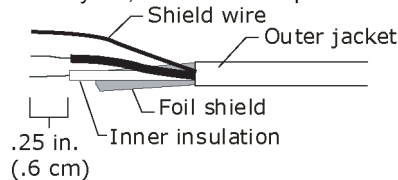

- 3 Strip about 0.25 inch (0.6 cm) of the inner insulation from each wire.
- 4 Wire the VVT Zone II's **Rnet+** and **Rnet-** terminals to the terminals of the same name on the Equipment Touch's connector.

NOTE If using shielded wire, connect the shield wire and the ground wire to the **Gnd** terminal.

- 5 Turn **on** the VVT Zone II's power.
- 6 Turn on the Equipment Touch.

To wire the TruVu™ ET Display



WARNING Do not apply line voltage (main) - 24 Vdc power only.


Wiring power

Wire the TruVu™ ET Display **24V DC** connector to the 24 Vdc power supply using 2-conductor 18 AWG wire. Maximum distance 100 feet (30 meters).




CAUTION The TruVu™ ET Display can share a power supply with the Carrier controller as long as:

- The power supply is DC power.
- You maintain the same polarity.
- You use the power source only for Carrier controllers.

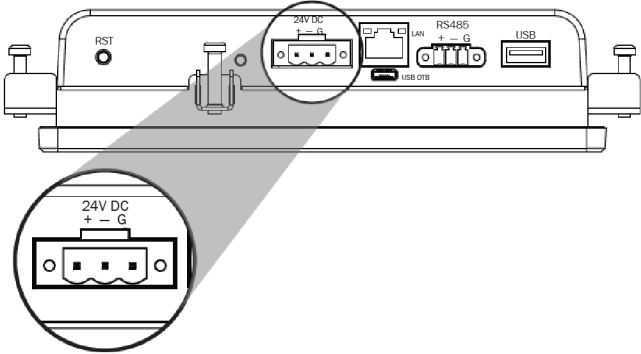

Wiring communication

- 1 Turn off the VVT Zone II's power.
- 2 Wire the TruVu™ ET Display's **RS485** connector to the controller's **Rnet** port, **G** to **Gnd.** **+** to **Rnet +,** **-** to **Rnet -** using 2-conductor 22 AWG wire with a maximum distance of 500 feet (152 meters).

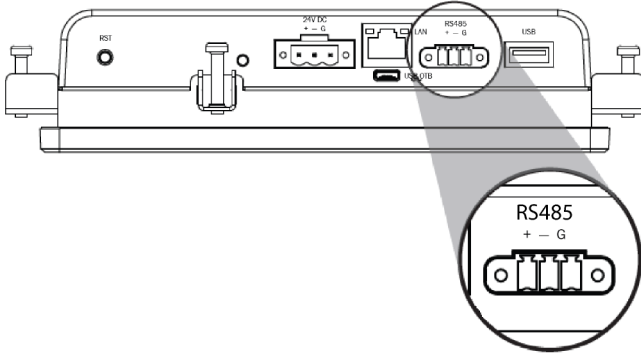

- 3 Turn on the VVT Zone II's power.

For complete TruVu™ ET Display installation instructions, see the *TruVu™ ET Display Installation and Start-up Guide*.

Wiring devices to the VWT Zone II's Act Net port

The VWT Zone II supports Act Net communication to the Act Net devices on a bus with a maximum length of 300 feet (91.44 meters). The bus should be wired with copper conductors of an appropriate size (18 AWG or larger) to compensate for voltage drop and ensure that bus voltage does not drop below 19.2 Vac or 21.6 Vdc.

Wire the Act Net terminals on the controller with the following color wires from the controller's actuator.

- 1 - Pwr - Red
- 2 - Data - White
- 3 - Gnd - Black



NOTE The controller's actuator **Data** wire is white and the i-Vu® Smart Valve's **Data** wire is orange.

i-Vu® Smart Valves


You can connect two i-Vu® Smart Valves to a VWT Zone II's Act Net port. See the *i-Vu® Smart Valve Installation Guide* for more details.

Wire the Act Net terminals on the controller with the following color wires from the valve's actuator.


- 1 - Pwr - Red
- 2 - Data - Orange
- 3 - Gnd - Black



Controller mounted upright

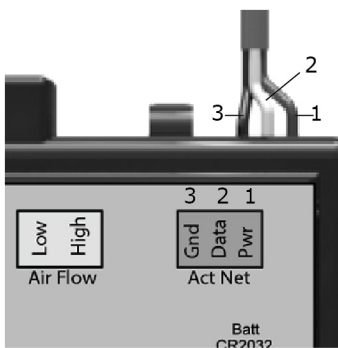

Controller mounted upside down

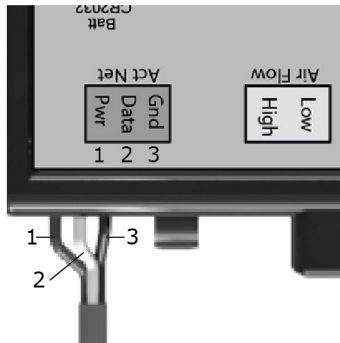

Wiring sensors to the VVT Zone II's inputs

You can wire the following sensors to the VVT Zone II's inputs:

- *Alternate space temperature sensor* (page 22)
- *Supply Air Temperature sensor* (page 22)
- *Duct Air Temperature sensor* (page 23)
- *CO₂ sensor* (page 23)
- *Relative Humidity sensor* (page 25)
- *Remote occupancy contact sensor* (page 26)

NOTE This document gives instructions for wiring the sensors to the VVT Zone II. For detailed installation instructions, see the device's *Installation Guide*.



WARNING Disconnect electrical power to the VVT Zone II before wiring it. Failure to follow this warning could cause electrical shock, personal injury, or damage to the controller.



CAUTION

- Do not run sensor or relay wires in the same conduit or raceway with Class 1 AC or DC service wiring.
- Do not abrade, cut, or nick the outer jacket of the cable.
- Do not pull or draw cable with a force that may harm the physical or electrical properties.
- Avoid splices in any control wiring.

Wiring specifications


Cable from sensor to controller:	If <100 ft (30.5 meters)	22 AWG, unshielded
	If >100 ft (30.5 meters)	22 AWG, shielded
Maximum length:	500 feet (152 meters)	

To wire the T55 sensor to the controller

Part #33ZCT55SPT

This wall-mounted sensor monitors space temperature and can be used instead of a ZS or wireless sensors.

- 1 Strip the outer jacket from the cable for at least 3 inches (7.62 cm). Strip .25 inch (.6 cm) of insulation from each wire. Cut the shield and drain wire from the cable.
- 2 Wire the sensor to the controller, attaching the red wire to the **T55 (Opt)** terminal and the black wire to the **Gnd** terminal. See diagram below.
- 3 Verify that the **T55 (Opt)** jumper is in the **Thermistor** position.

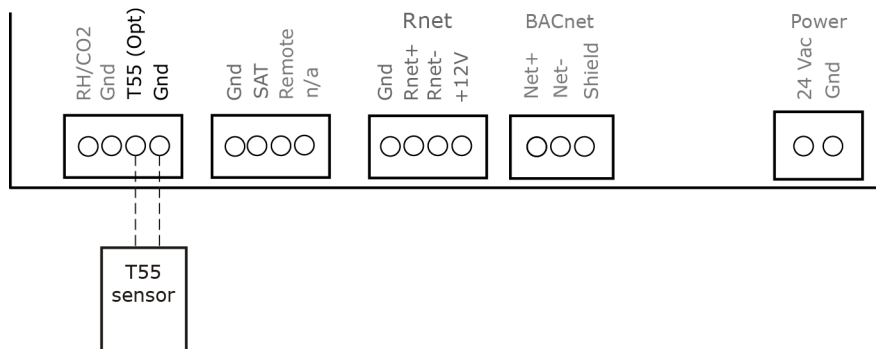


To wire the Supply Air Temperature sensor to the controller

Part #33ZCSENSAT


Each VWT Zone II requires that a temperature sensor be installed in the supply air stream. Mount the SAT sensor at least 2 feet downstream from a hot water or steam coil, or at least 4 feet downstream from an electric heating coil.

Wire the sensor to the controller. See diagram below.

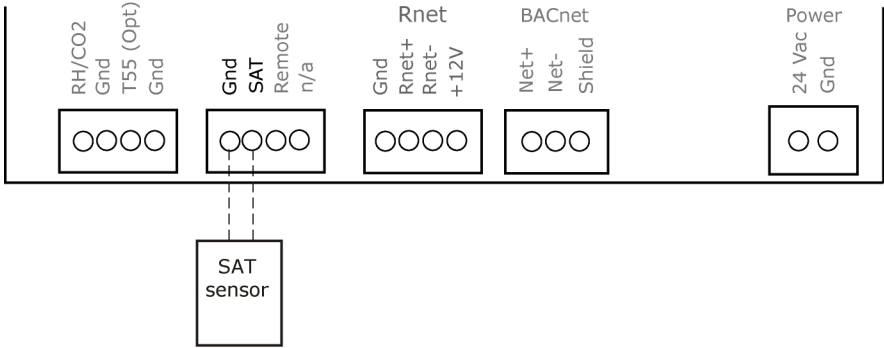

To wire a Duct Air Sensor to the controller

- 1 Wire the sensor to the controller. See diagram below.
 - NOTE** Sensor wiring does not have polarity. The wires can be connected to either terminal.
- 2 Using electrical tape, insulate any exposed wire to prevent shorting.
- 3 Connect shield to earth ground (if using shielded wire to extend cable length).

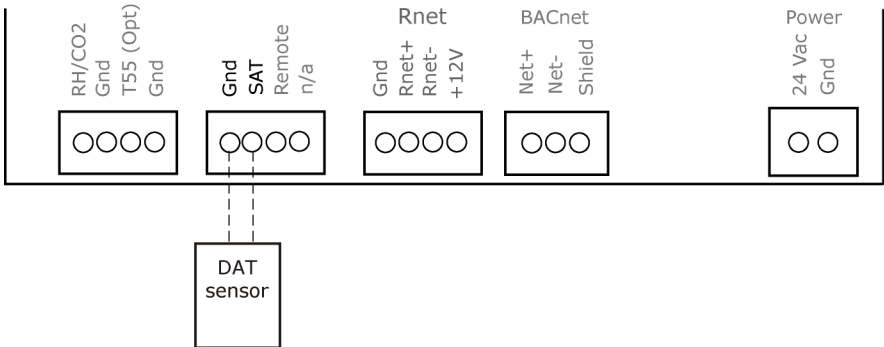

To wire the CO2 sensor to the controller

- Part #33ZCSPTCO2LCD-01 (Display model)
- Part #33ZCSPTCO2-01 (No display)
- Part #33ZCT55CO2 (No display)

A CO₂ sensor monitors carbon dioxide levels. As CO₂ levels increase, the VVT Zone II adjusts the outside air dampers to increase ventilation and improve indoor air quality. These sensors also monitor temperature using a 10K thermistor.

A CO₂ sensor can be wall-mounted or mounted in a return air duct. (Duct installation requires an Aspirator Box Accessory - Part #33ZCASPCO2.)


The sensor has a range of 0–2000 ppm and a linear 4-20 mA output. This is converted to 1-5 Vdc by a 250 Ohm, 1/4 watt, 2% tolerance resistor connected across the zone controller's CO₂ input terminals.

NOTE Do not use a relative humidity sensor and CO₂ sensor on the same zone controller.

#33ZCSPTC02

- 1 Wire the sensor to the controller. See appropriate diagram below.
- 2 Verify that the **RH/CO2** jumper is set to **0-5 Vdc** on the VVT Zone II.
- 3 Verify the **J7** jumper on the sensor is set to **0-5 Vdc**.


Wiring diagram for #33ZCSPTC02:

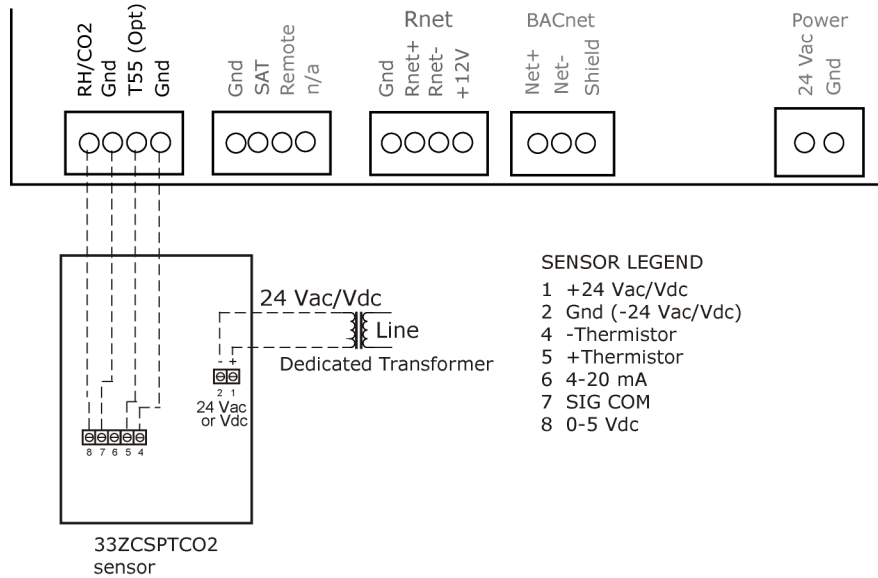

#33ZCT55C02

- 1 Wire the sensor to the controller. See appropriate diagram below.
- 2 Install a field supplied 250 Ohm 1/4 watt 2% tolerance resistor across the controller's **RH/CO2** and **Gnd** terminals.
- 3 Verify that the **RH/CO2** jumper is set to **0-5Vdc** on the VVT Zone II.

Wiring diagram for #33ZCT55C02:

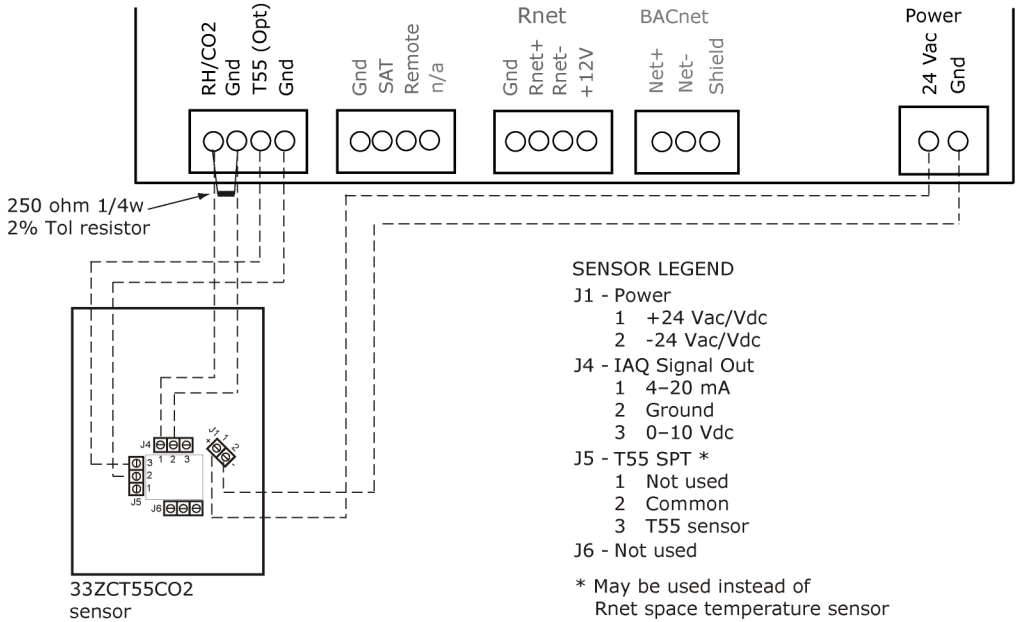


To wire the Relative Humidity sensor to the controller

Part #33ZCSENSRH-02

The Relative Humidity (RH) sensor is used for zone humidity control (dehumidification) if the rooftop unit has a dehumidification device. If not, the sensor only monitors humidity.


NOTE Do not use a relative humidity sensor and CO₂ sensor on the same zone controller.

- 1 Strip the outer jacket from the cable for at least 4 inches (10.2 cm). Strip .25 inch (.6 cm) of insulation from each wire.
- 2 Wire the sensor to the controller. See diagram below.
- 3 Using electrical tape, insulate any exposed resistor lead to prevent shorting.
- 4 Verify that the **RH/CO2** jumper is set to **0-5 Vdc**.
- 5 Set **SW3** on the sensor as shown below.

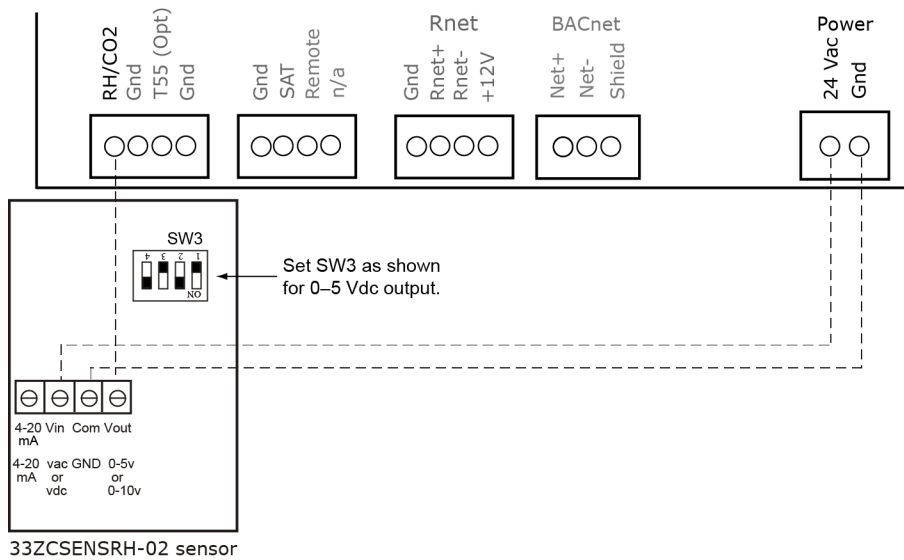

Wiring a remote occupancy sensor

You can wire a normally open or normally closed dry-contact occupancy sensor to the VWT Zone II's **REMOTE** input as shown below. The controller supplies the voltage needed for the input.

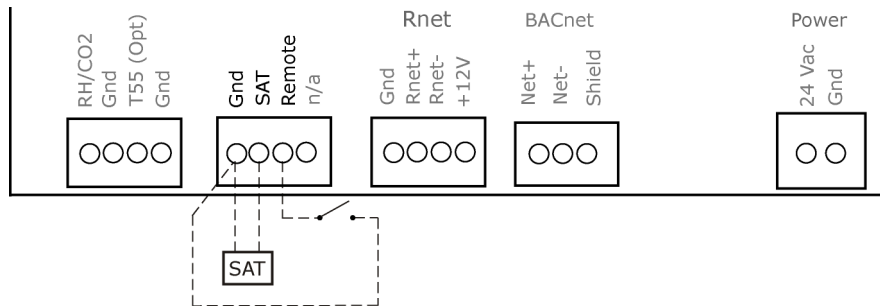

Wiring equipment to outputs

Use the following wiring diagrams to wire zone terminal equipment to the VWT Zone II's outputs.

Single duct (page 28)

Single duct 2-position hot water (page 28)

Single duct modulating hot water (page 29)

Single duct SCR electric heat (page 29)

Single duct combination baseboard and ducted heat (page 30)

Single duct staged electric heat (page 31)

Fan box 2-position hot water (page 32)

Fan box modulating hot water (page 33)

Fan box SCR electric heat (page 34)

Fan box combination base board and ducted heat (page 35)

Fan box 2-stage electric heat (page 36)

Wiring field-supplied actuators to the analog output (page 36)



WARNING Disconnect electrical power to the VVT Zone II before wiring it. Failure to follow this warning could cause electrical shock, personal injury, or damage to the controller.

Wiring specifications


To size output wiring, consider the following:

- Total loop distance from the power supply to the controller, and then to the controlled device
NOTE Include the total distance of actual wire. For 2-conductor wires, this is twice the cable length.
- Acceptable voltage drop in the wire from the controller to the controlled device
- Resistance (Ohms) of the chosen wire gauge
- Maximum current (Amps) the controlled device requires to operate


Wiring diagram legend

Gnd	=	Ground
HWV	=	Hot water valve
SAT	=	Supply air temperature sensor
SCR	=	Silicon controlled rectifier
Space temp sensor	=	ZS sensors or Wireless Adapter for wireless sensors
T55 (OPT)	=	Alternate space temperature sensor
- - -	=	Field-supplied wiring


Single duct only

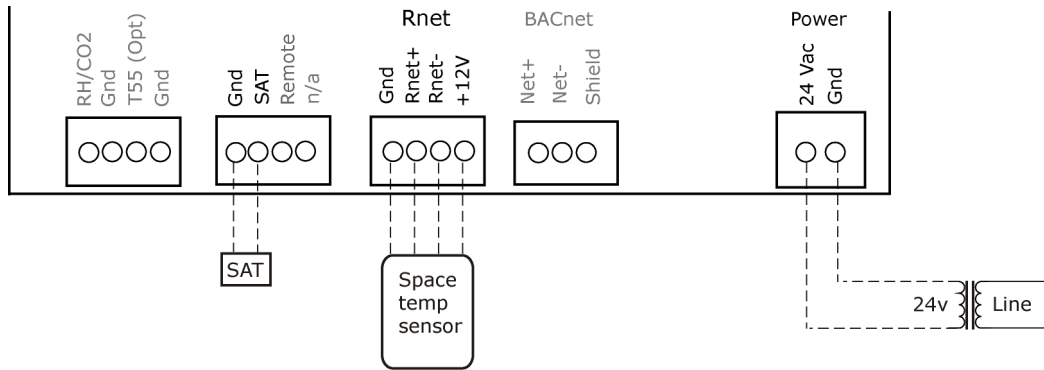


Single duct 2-position hot water

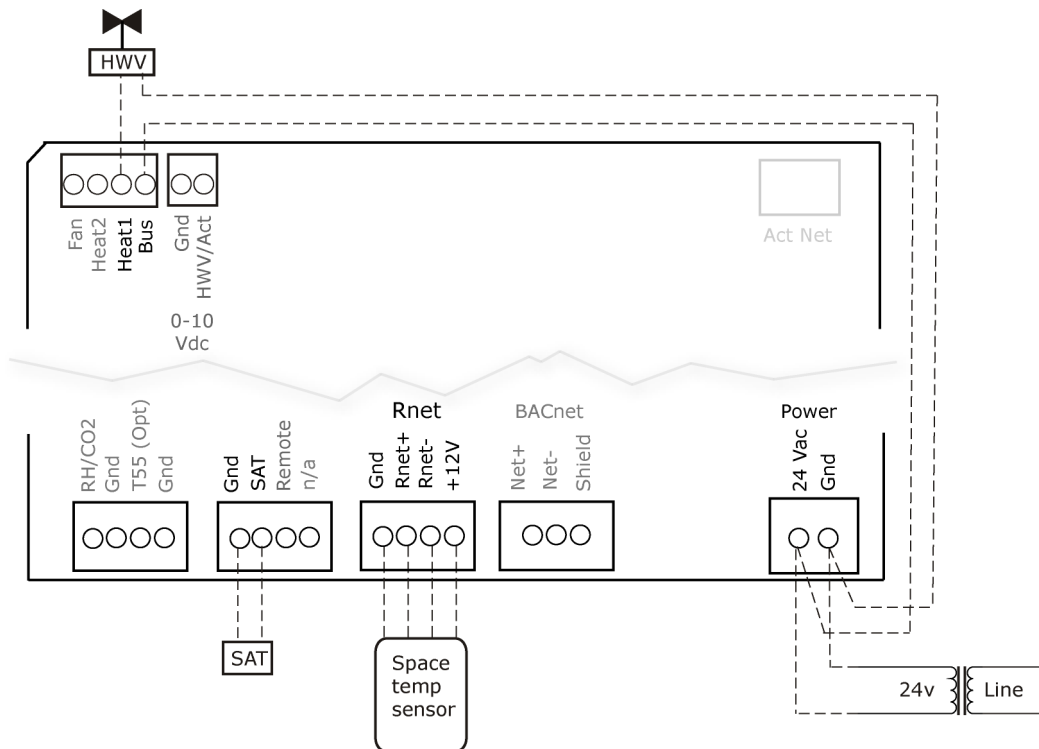


Single duct modulating hot water

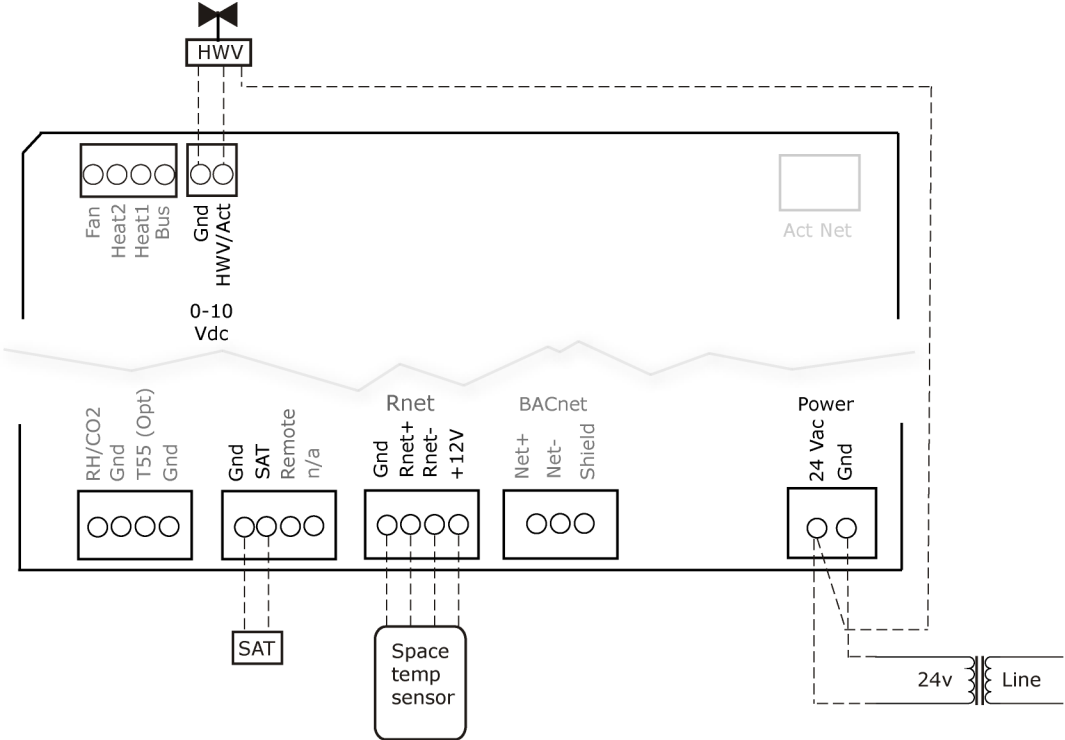


Single duct SCR electric heat

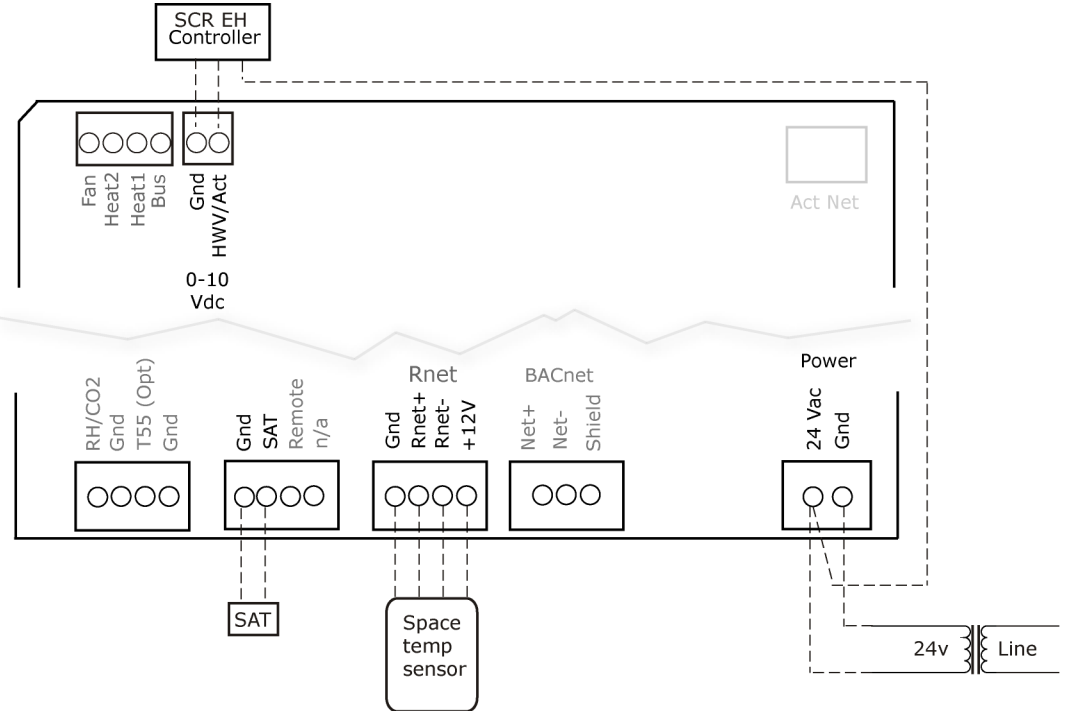


Single duct combination base board and ducted heat

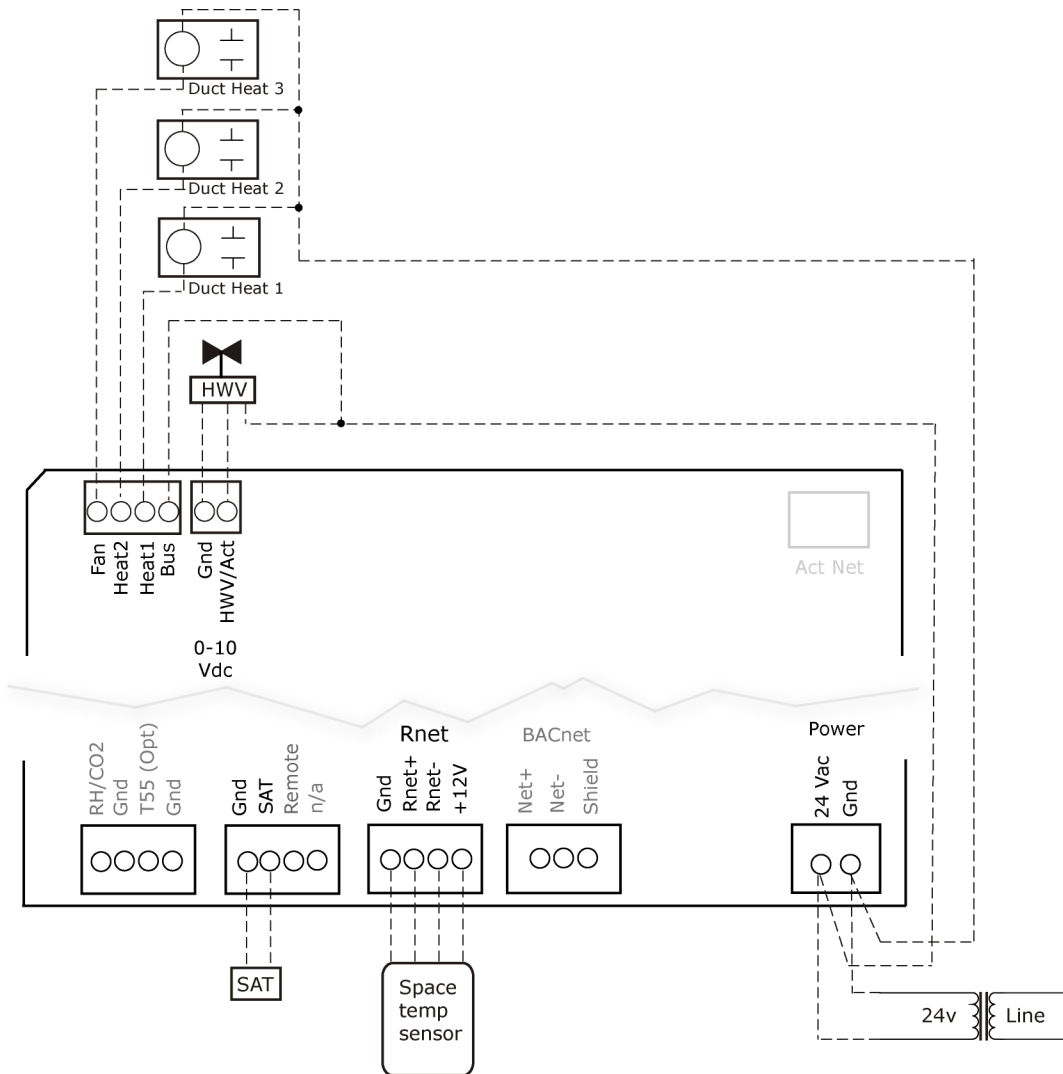


Single duct staged electric heat

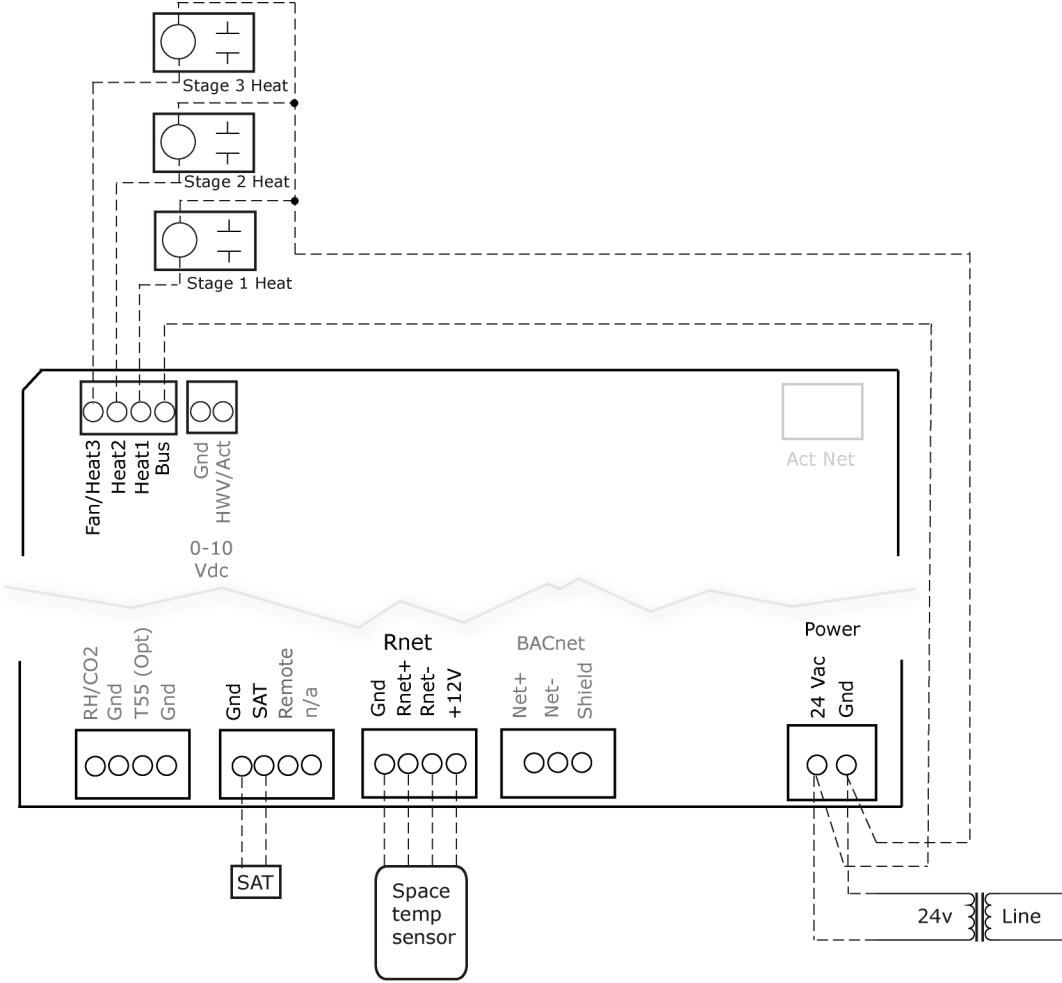


Fan box 2-position hot water

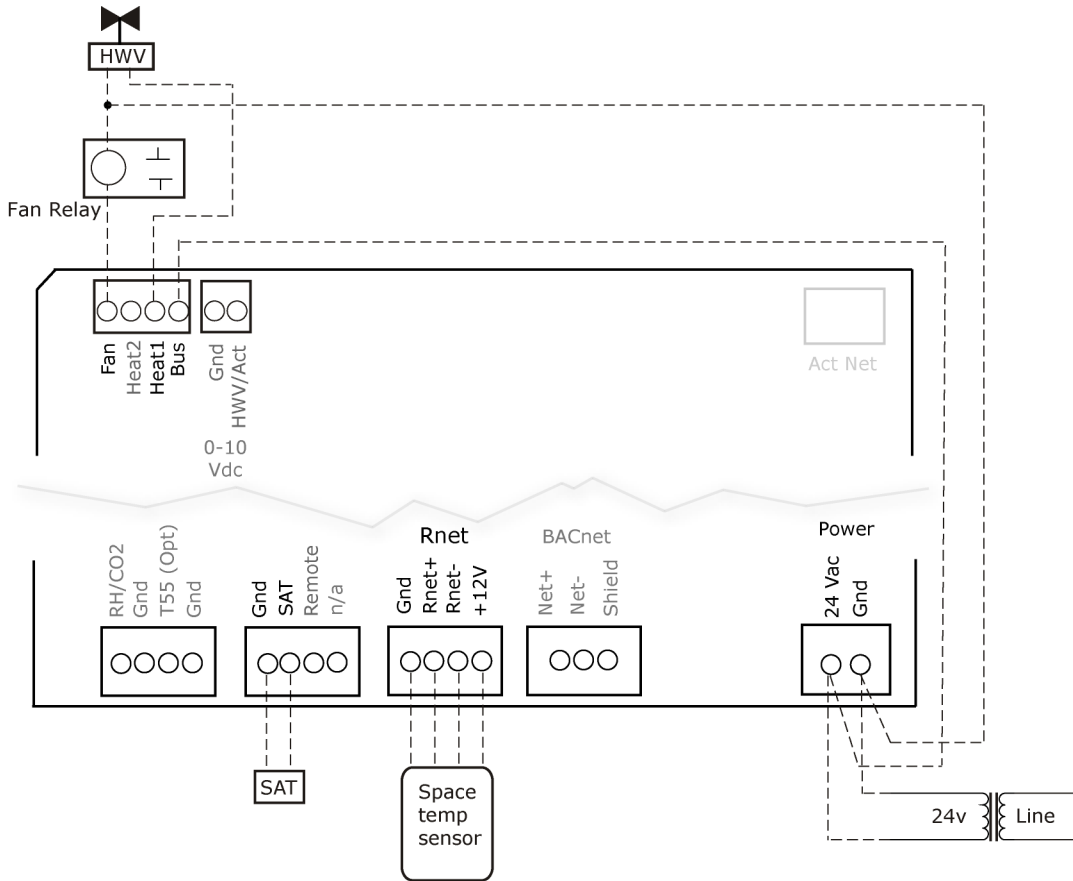


Fan box modulating hot water - ducted or baseboard

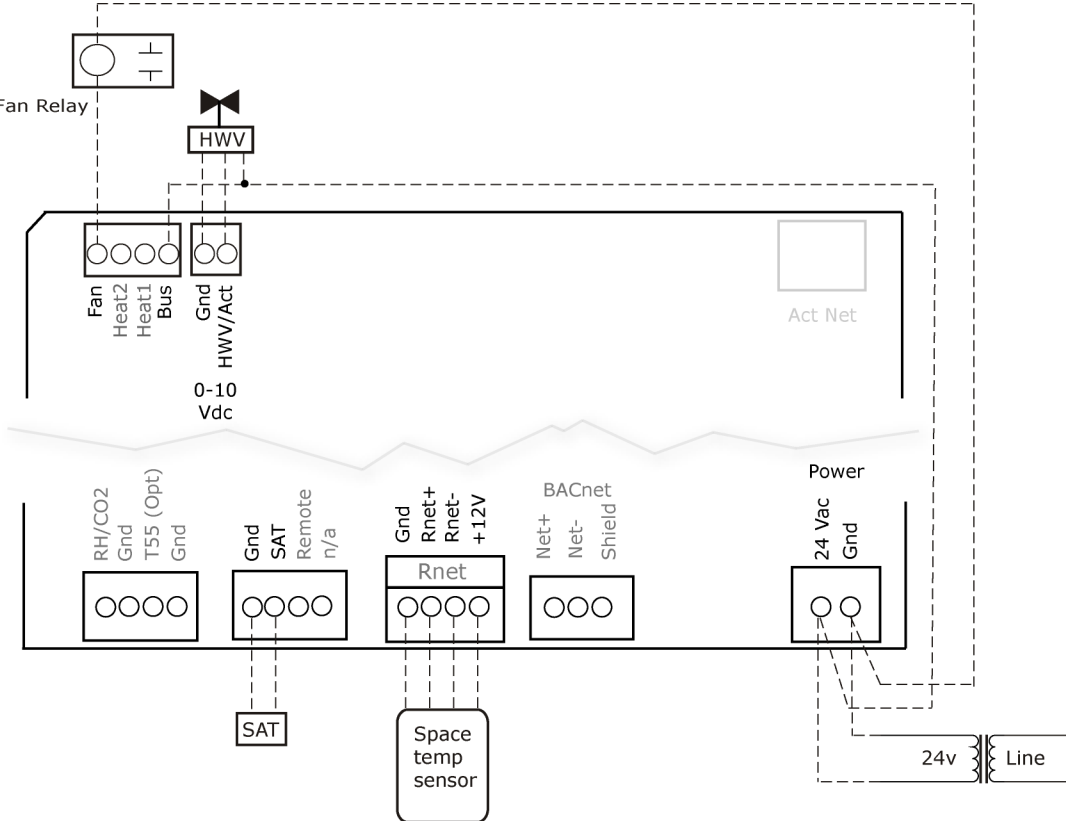


Fan box SCR electric heat

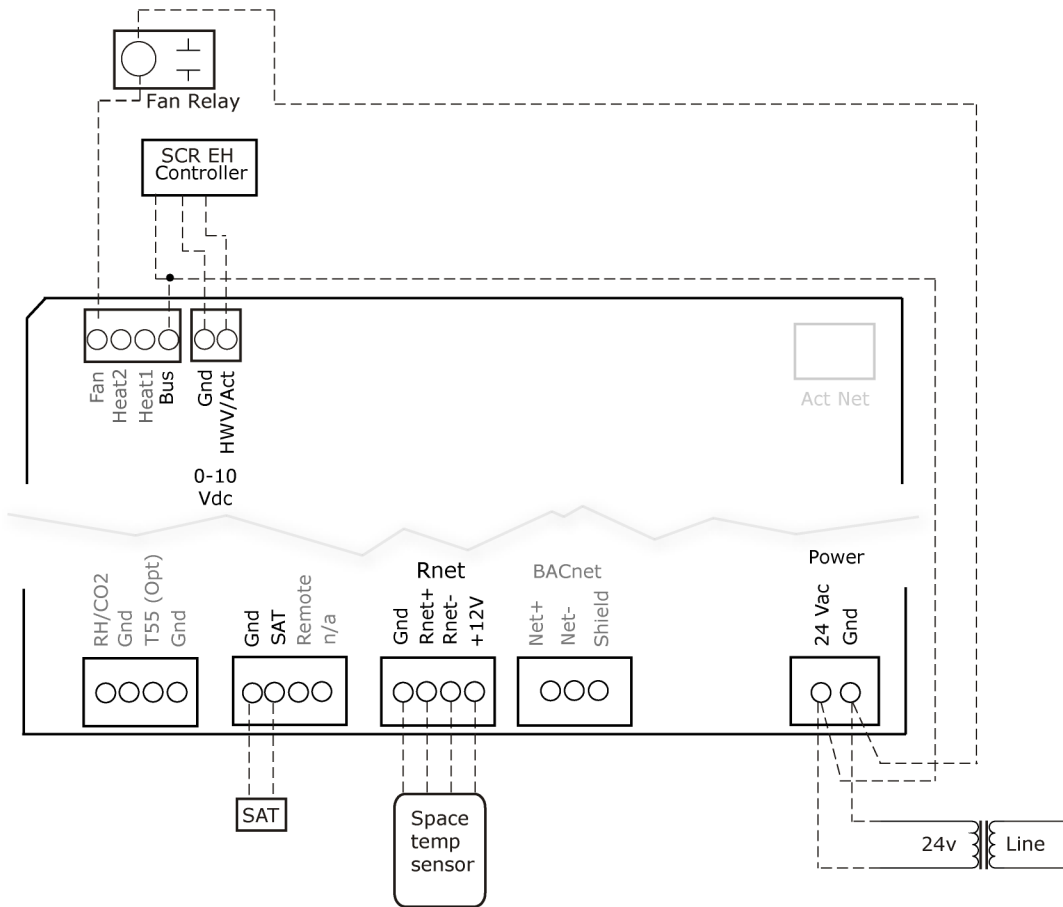

Fan box combination baseboard and ducted heat

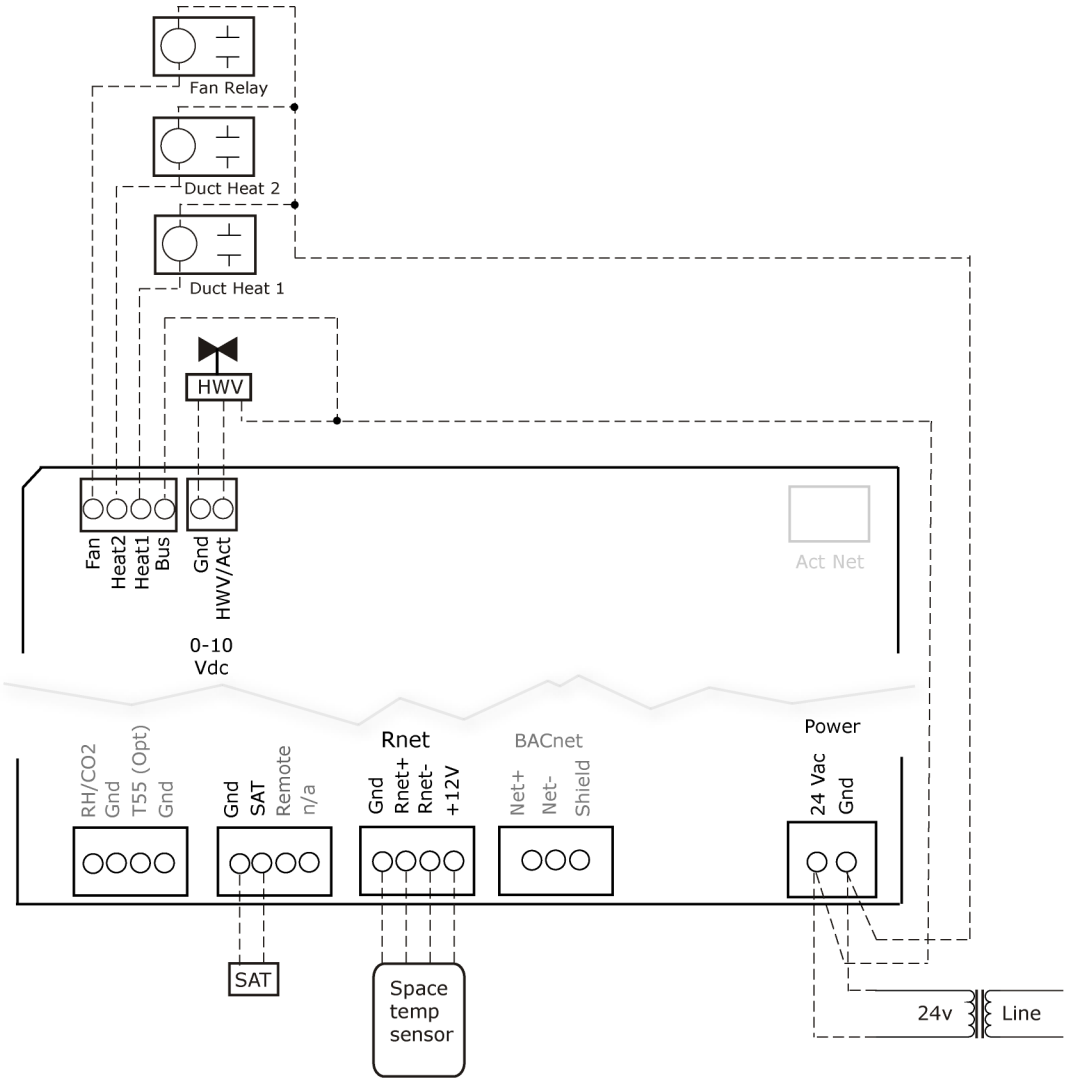

Fan box 2-stage electric heat

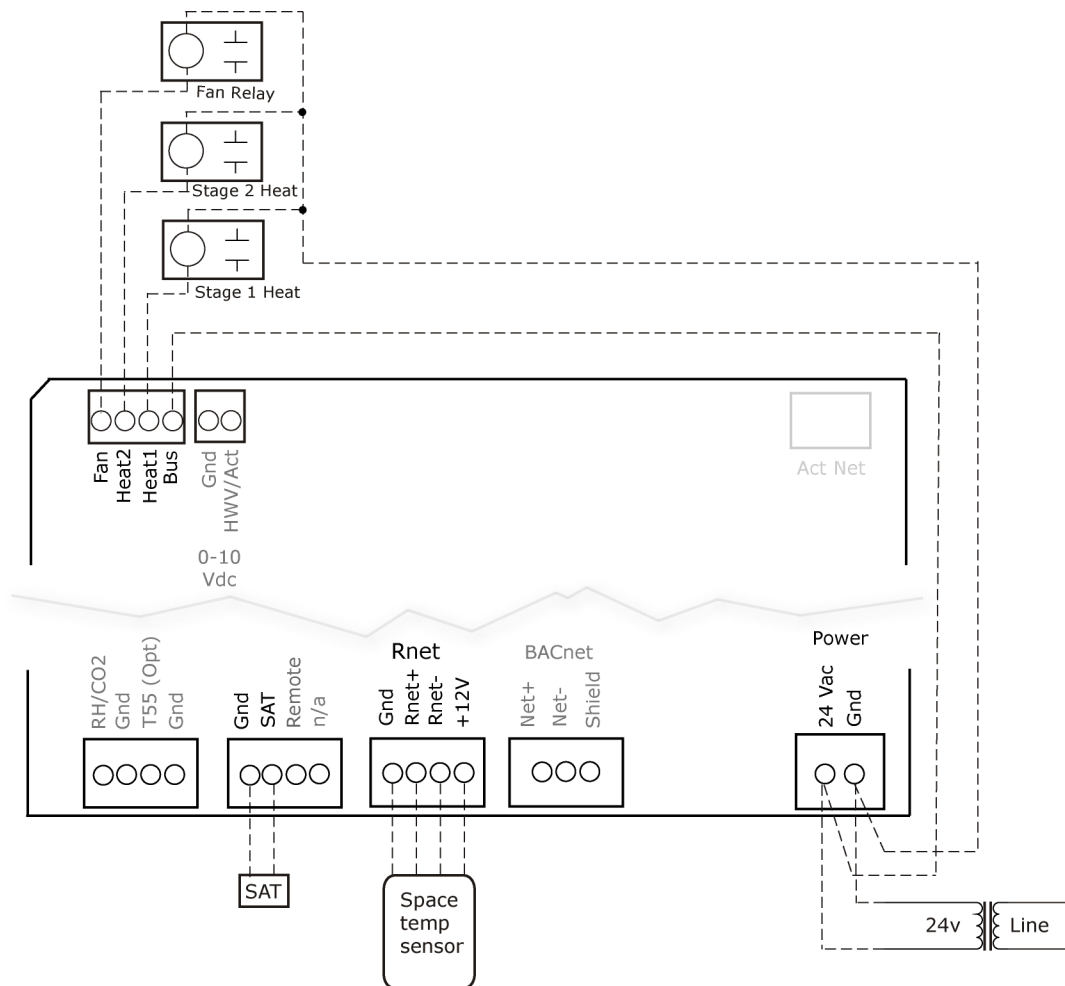

Wiring field-supplied actuators to the analog output

You can wire a high-torque actuator or parallel actuators to the controller's 0–10 Vdc analog output.

NOTE When using an external actuator, the internal actuator must remain connected to the controller for program operation.

High-torque actuator


You can wire one of the following Belimo actuators to the VVT Zone II's analog output instead of using the controller's built-in, 45 in.-lb (4 Nm) actuator.

NOTE When using an external actuator, the internal actuator must remain connected to the controller for program operation.

NMX24-MFT P-10028	90 in.-lb (10 Nm) actuator with 0–10 Vdc control and 0–10 Vdc feedback
AMX24-MFT P-10028	180 in.-lb (20 Nm) actuator with 0–10 Vdc control and 0–10 Vdc feedback

- 1 Install the actuator according to the manufacturer's instructions.
- 2 Wire the actuator to the controller using the diagram below.

NOTE For proper operation and to prevent damage to the devices, use the same polarity for the actuator's power and the VWT Zone II's power.

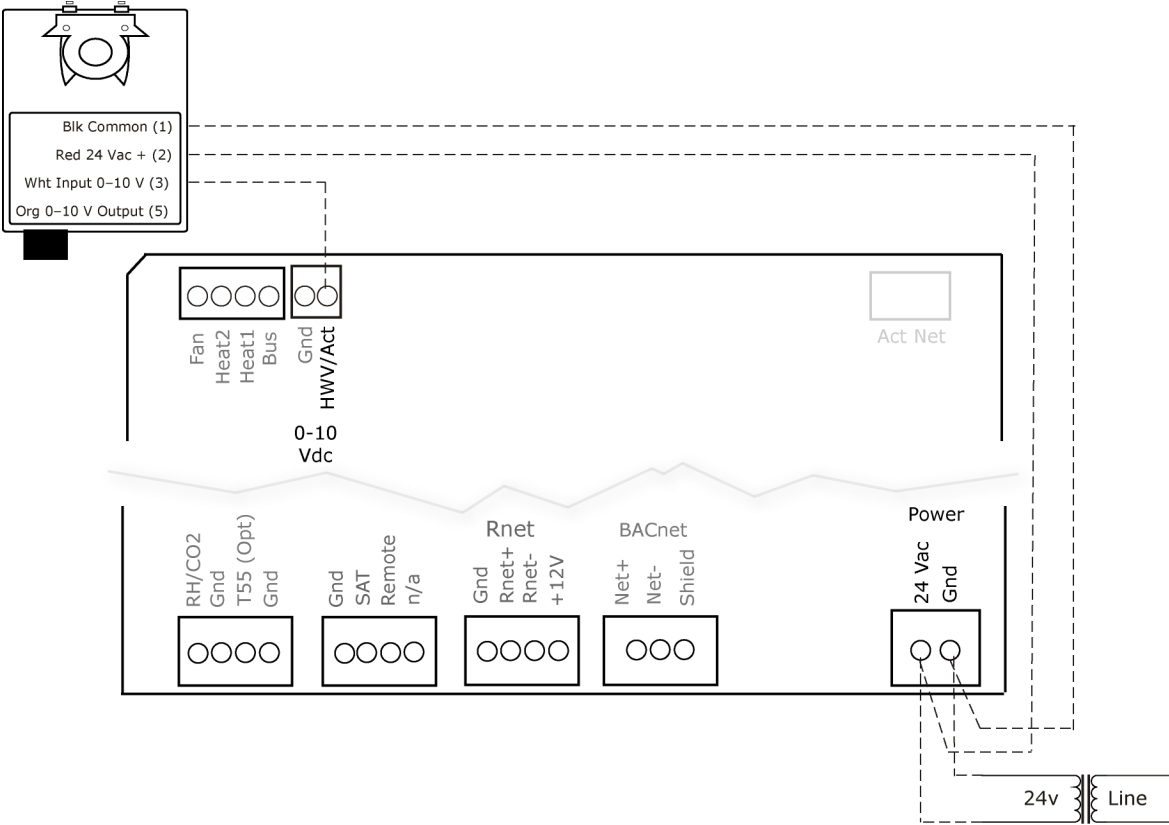

Linked actuators


You can wire up to 4 of the following Belimo actuators to the VWT Zone II's analog output. Use like actuators so that travel times and other parameters coincide.

LMX24-MFT P-10028	45 in.-lb (5 Nm) actuator with 0–10 Vdc control
NMX24-MFT P-10028	90 in.-lb (10 Nm) actuator with 0–10 Vdc control
AMX24-MFT P-10028	180 in.-lb (20 Nm) actuator with 0–10 Vdc control

- 1 Install the actuators according to the manufacturer's instructions.
- 2 Wire the actuators to the controller using the diagram below.
- 3 Set the direction rotation switch on each actuator to CW.

IMPORTANT! If slaving 45° actuators, you must go to **Properties > I/O Points > Hot Water Valve Max** and change scaling to **200** for the slave actuator to correctly track the primary actuator.

Installing the VWT Zone II

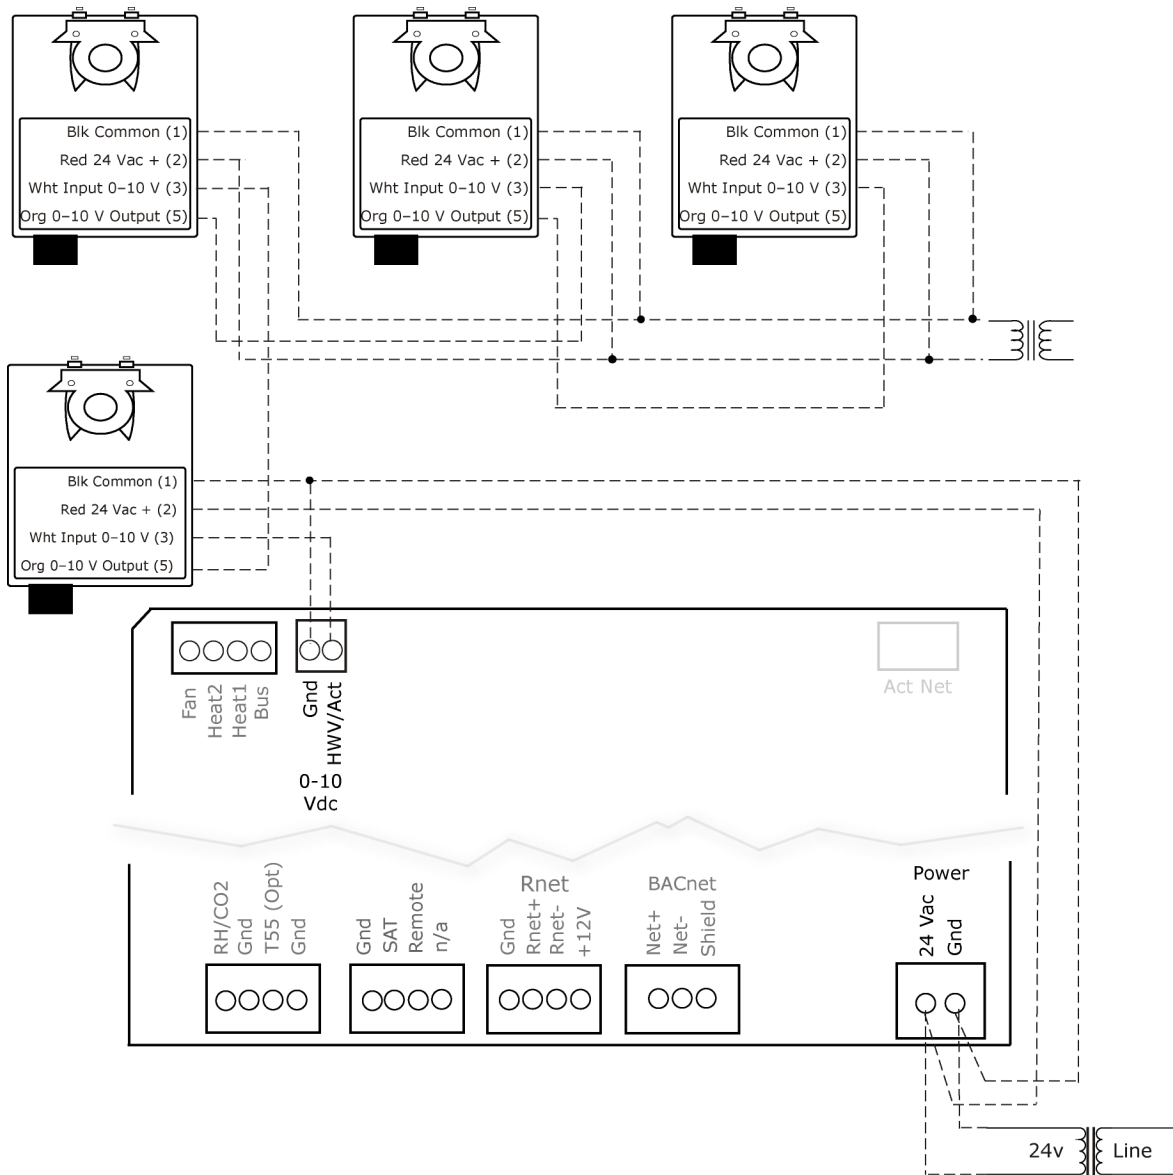

NOTE Maintain polarity if using the same power supply for more than one actuator.

Start-up

Use one of the following interfaces to start up, access information, read sensor values, and test the controller.

This interface...	Provides a...
Field Assistant application - Runs on a laptop that connects to controller's Local Access port ¹	Temporary interface
Equipment Touch device - Connects to controller's Rnet port ²	Temporary or permanent interface
i-Vu® application Available for BACnet systems only	Permanent interface
System Touch device Available only for BACnet MS/TP systems. Wire to a BACnet MS/TP network connector and a 24 Vac power supply ³	Temporary or permanent interface

¹ Requires a USB Link (Part #USB-L).

² See the *Equipment Touch Installation and Setup Guide* for detailed instructions.

³ See the *System Touch Installation and Setup Guide* for detailed instructions.



CAUTION If multiple controllers share power but polarity was not maintained when they were wired, the difference between the controller's ground and the computer's AC power ground could damage the USB Link and the controller. If you are not sure of the wiring polarity, use a USB isolator between the computer and the USB Link. Purchase a USB isolator online from a third-party manufacturer.

Configuring the VVT Zone II's properties

To start up the VVT Zone II, you must configure certain points and properties. *Appendix A* (page 64) is a complete list of all the points and properties, with descriptions, defaults, and ranges. These properties affect the unit operation and/or control. Review and understand the meaning and purpose of each property before changing it.


- Unit Configuration properties
- *Setpoint Configuration properties* (page 67)
- Service Configuration properties

The i-Vu® Control System uses linkage to exchange data between the zone terminals and their air source to form a coordinated HVAC system. The system's air source controller and zone controllers are linked so that their data exchange can be managed by one zone controller configured as the VVT Master.


A VVT Master can have a maximum of 32 slave zone controllers reporting to it. An MS/TP network is limited to a maximum of 60 controllers, but a VVT Master can have controllers from other networks as slaves.

A linked VVT system can be as simple as a single MS/TP network with a VVT Master and slaves, or it can be as complex as multiple MS/TP networks with slaves on other networks. See the following examples.


EXAMPLE #1: A simple network. The VVT Master exchanges data between the slave controllers and the RTU controller. The linked controllers on an MS/TP network must be sequentially addressed, and the VAV Master must have the highest address.

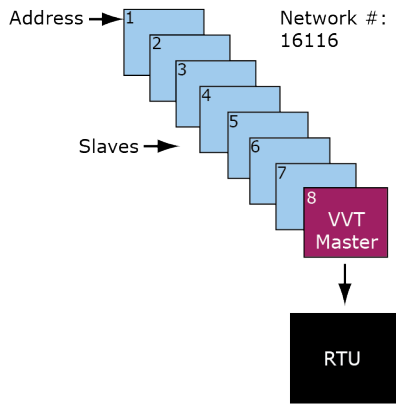

EXAMPLE #2: The above network plus slave controllers on other networks.

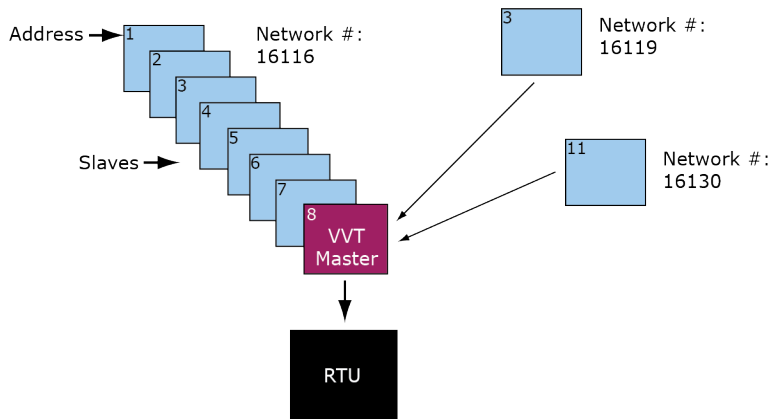

EXAMPLE #3: The above network plus sub-masters and their slaves. (For VAV systems only. VVT systems do not support sub-masters.) The sub-masters exchange data between their slaves and the VAV Master, and the VAV Master handles data exchange for the whole system.

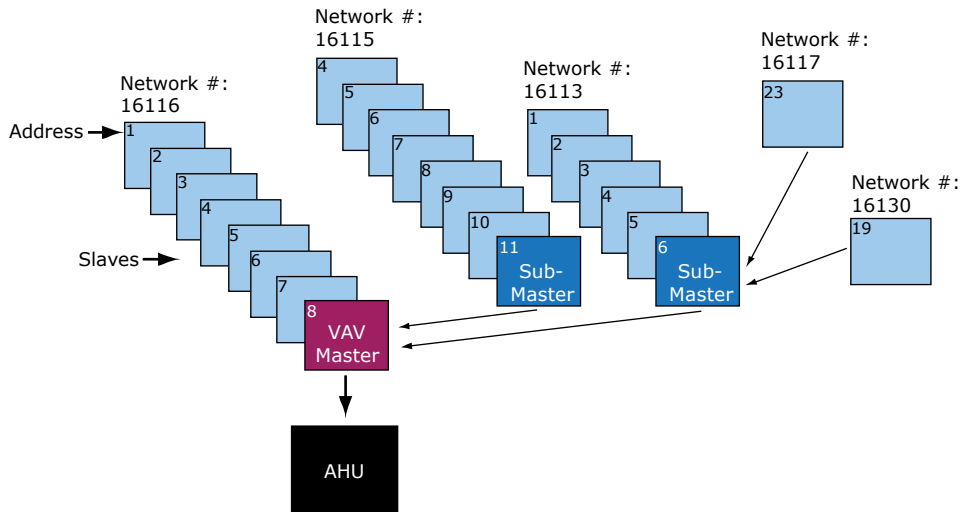

You set up linkage for the system by defining the Linkage properties for each controller. See *Linkage Properties* (page 86).

See *Appendix A* (page 64) for a complete list of the controller's points/properties.

NOTE Engineering units shown in this document in the defaults and ranges are strictly for reference. You must enter an integer only.

Configuring ZS Sensors

The VVT Zone II automatically detects 1 ZS temperature sensor set to address (1). This sensor is labeled **Main ZS Sensor**.

You must configure the ZS Sensor properties in the i-Vu® application or Field Assistant as follows:

- Add more ZS temperature, humidity, or CO² sensors in the **Properties > Control Program** tab > **Service Configuration** section. Ctrl+click on the property name to open the microblock popup and configure the settings on the **Details** tab.

NOTE See Service Configuration for details.

- Configuring the **ZS Sensor Binder**, and then the following as needed:
 - **ZS Zone Temp**
 - **ZS Zone Humidity**
 - **ZS Zone CO2**
 - **ZS model to show on graphic**
- Configure **Setpoint Adjustment**. See *Setpoints* (page 67).

- Set **Occupancy** and **Override** properties. See *Maintenance* (page 82) for details.
- Alarm and Maintenance indications on the ZS Pro (display model) sensors. See *Appendix C: ZS Sensor display for VVT Zone II* (page 94).

Performing system checkout

- 1 Verify that all power and communication connections are correct and tight.
- 2 Verify that all zone terminals, ductwork, and zone controllers are properly installed and set according to installation instructions and job requirements.
- 3 Verify that all air duct connections are tight.
- 4 Verify that zone terminal fans and system controls operate properly. Verify that actuator screws are properly tightened.
- 5 At the zone terminals, check electrical system and connections of any optional electric reheat coil. If hot water reheat is used, check piping and valves against job drawings.
- 6 Verify that all zone terminal dampers are fully open.
- 7 If using an air source with field-installed controls, make sure controls and sensors have been installed and wired per manufacturer installation instructions.
- 8 Verify that the air source motor starter and, if applicable, the Hand/Off/Auto (HOA) switch are installed and wired.
- 9 Verify that the area around the air source is clear of construction dirt and debris.
- 10 Verify that final filters are installed in the air handler(s). Dust and debris can adversely affect system operation.
- 11 Verify that the space sensor and all optional sensors are reading correctly.

NOTE You must use the i-Vu® application or Field Assistant to configure ZS Sensors.



CAUTION Before starting the air source fan, make sure the zone terminal dampers are not closed. Starting the fan with dampers closed will damage the system ductwork.

Commissioning the VVT Zone II

Using Field Assistant or the i-Vu application:

- 1 Calibrate the damper travel.
 - a) Go to **Properties > Configuration > Service Configuration > Pressure Dependent Control > Details** tab > **Test and Balance**. Click **Calibrated Damper Close** and verify it goes to the closed position.
 - b) Click **Calibrated Damper Open** and verify it travels to the full open.
 - c) Click **Automatic Control** to return the damper to normal operation.
- 2 For Parallel or Series Fan terminals – in the **Locks** section, select the **Fan's Lock value to** checkbox, then select **On** in the droplist. Click **Apply**. Verify the fan's operation.

- 3 For modulating hot water reheat – Go to **Properties > I/O Points** tab, then lock **Hot Water Valve** to 100%. If the controller is configured for Single Duct, make sure the air source fan is on. If ducted heat, verify the heat works by verifying that the SAT rises. For baseboard heat, physically check the heating element for proper temperature rise. Release the **Hot Water Valve**.
- 4 Release the fan.
- 5 If the controller is part of a linked system, verify **Linkage > Airside Linkage Status** shows **Active**.



CAUTION Pressing the actuator release button and moving the damper or disconnecting the actuator ribbon connector while the bypass controller is powered will cause the damper position to be out of calibration. To recalibrate the damper position, you must perform steps 1a–1c above or power cycle the controller.

Balancing the system

Most WT system airflow designs are based on cooling requirements which require a greater CFM (liters/second) flow than heating requirements. Using this balancing procedure, you will adjust the cooling airflow first. If the heating and cooling maximum airflow requirements are the same, you will not need to balance the heating airflow.

NOTE We recommend that the heating minimum airflow settings for all the zones in the system be set to maintain the air source's design minimum heat CFM (liters/second) airflow across its heat exchanger to prevent damage to the equipment.

There are two methods of balancing the system:

- Use the i-Vu application or Field Assistant – Complete the following 3 steps to perform the system balancing.
- Use the Test & Balance program – Test & Balance can perform the 3 steps below, including shutting down the linked air source and performing global commands to all zones in the system. Do items 1–5 in Step 1 below prior to using Test & Balance. See Test & Balance's Help for required steps to complete the balancing procedure.

Step 1: Prepare for balancing

- 1 Log in to the i-Vu® application with an Administrator or Installer security level, or use Field Assistant.
- 2 Make sure the air source and its controller have been properly started and can run as a stand-alone unit.
- 3 Make sure the zone and bypass controllers have been addressed, commissioned, and started.
- 4 Verify that a manual damper is installed upstream of the zone damper. This damper will be used to adjust the maximum design airflow to the space when the zone damper is at 100% open. We strongly recommend that you do not use the damper Cool or Heat Max damper configuration setting for this purpose. Exception: If the design maximum airflow for one mode is less the other, the maximum damper position configuration may be used to adjust the designed airflow of that mode.
- 5 Verify that zone controllers supplying multiple registers have manual dampers on each register branch duct for balancing the design airflow through each register.
- 6 Disable the air source heating and cooling outputs using one of the following methods:
 - Physically disconnect the air source controller's output wiring to the unit, then enable the fan.
 - In the i-Vu or Field Assistant tree, select the RTU Open or WSHP Open controller. Go to **Properties > Configuration > Service Configuration > Service Test** and enable **Service Test** and **Fan Test**. Make sure all other outputs are disabled.

Step 2: Balance each zone

- 1 In the i-Vu® or Field Assistant tree, select the zone controller that is physically closest to the air source. Go to **Properties > Control Program > Configuration > Service Configuration > Pressure Dependent Control > Details** tab.
- 2 Do one of the following:
 - Single Duct or Parallel Fan zone terminals – Click **Cool Max** to override the zone damper to its maximum open position. Check the zone for design cooling maximum airflow using certified measuring devices. Make adjustments using the manual volume damper located upstream of the zone damper.
 - Series Fan zone terminals – Click **Damper Full Close** to override the zone damper to its fully closed position. Wait 30 seconds after the damper is closed, select the **Fan's Lock value to** checkbox, then select **On** in the droplist. Click **Apply**. You must follow this procedure to prevent the fan from turning backwards. When the fan starts, click **Cool Max** to open the zone damper to its maximum position. Check the zone for design cooling maximum airflow using certified measuring devices. See the zone terminal manufacturer's instructions to adjust the fan speed to meet design airflow requirements. After you set the fan speed, verify that the zone terminal plenum air intakes do not have a positive airflow. If so, adjust the manual volume damper located upstream of the zone damper so that the airflow is not positive or negative.

Note the zone's name in the tree. You will need it when setting the system static pressure setpoint.

- 3 Check all branch duct terminal registers for design flow. If necessary, adjust the manual volume dampers in the branch ducts.
- 4 On the zone's **Pressure Dependent Control > Details** tab, click **Cool Min** to set the zone damper to its cooling minimum position. Type the desired damper position next to **Cool Min** to adjust the airflow to the design value. If you do not have a design value, set the value to no less the 10% for minimum ventilation.
- 5 Parallel Fan Zone Terminals only - To adjust Parallel Fan airflow, make sure **Cool Min** is active, select the **Fan's Lock value to** checkbox, then select **On** in the droplist. Click **Apply**. See the zone terminal manufacturer's instructions on adjusting the fan speed to meet design airflow requirements. When finished, clear the **Fan's Lock value to** checkbox.
- 6 Click **Vent** to set the zone damper to its ventilation position. Type the desired damper position next to **Vent** to adjust the airflow to the design value. If you do not have a design value, leave the value at 50% for minimum ventilation.
- 7 Series Fan Zone Terminals only - If the zone maximum heating airflow design requirements are the same as cooling, the **Heating Max Damper Position** should be 100%, same as the **Cooling Max Damper Position**. If the heating requirement is less than the cooling requirement, type the appropriate value in **Heating Max Damper Position** per the design requirements.
- 8 If the terminal has ducted reheat, click **Reheat Min** to force the zone to its reheat damper position. Type the desired damper position next to **Reheat Min** to adjust the airflow to its design reheat position.
- 9 If the zone maximum heating airflow design requirements are the same as cooling, skip this step. If they are less than cooling, click **Heat Max** to force the zone to its maximum heating position. Check the zone for design heating maximum airflow using certified measuring devices. Type the damper position next to **Heat Max**.
- 10 To set the heating minimum airflow, click **Heat Min**, then type the damper position. We recommend that the sum of this setting for all zones in the system be equal to the minimum heat CFM (liters/second) requirements of the air source.
- 11 Repeat steps 1 through 10 for each zone until all zones have been balanced.

Step 3: Set the system static pressure

For the air source to deliver the required airflow, you must set the bypass controller's static pressure setpoint high enough to provide the demand but low enough to maintain reasonable noise levels. The bypass controller maintains static pressure by controlling a damper or a supply fan VFD. You need the following data to set the static pressure:

- The air source's design maximum airflow in CFM (liters/second) (manufacturer's data)
- The system's design external static pressure (inches or water). This is the amount of static pressure that the air source is designed to deliver at its maximum design airflow in CFM (liters/second) (supplied by the mechanical design engineer).
- The maximum cooling or heating (whichever is greater) CFM (liters/second) requirements for all zones connected to the air source

NOTE The air source fan must have been tested and certified that it can deliver the above requirements.

The sum of the maximum CFM (liters/second) requirements of all zones will generally exceed the air source's maximum CFM (liters/second) rating by 10 to 20%. This is by design and based on a factor known as diversity. It works on the basis that under normal design heating and cooling conditions, not every zone will be 100% open. Knowing this, you will need to force open only zones whose sum CFM (liters/second) is equal to the unit design CFM (liters/second). With the bypass damper fully closed (0%) or supply fan VFD at 100%, the bypass controller's static pressure should be the controlling setpoint.

To set the static pressure:

- 1 Starting with zone furthest from the air source and working towards it, add up the maximum design CFM (liters/second) airflow of the zones until the sum equals the air source's design CFM (liters/second) (+/-5%). Note each zone that you included.
- 2 For each zone noted in step 1, go to **Properties > Control Program > Configuration > Service Configuration > Pressure Dependent Control > Details** tab. Click **Cool Max** or **Heat Max** (whichever has the highest design max airflow) to force the damper to its maximum open position.
- 3 In the tree, select the Bypass controller, then go to **Properties > Control Program > Status**. Note the **Static Pressure** value, then go to **Unit Configuration > Bypass Control > Details** tab.
 - If **Damper Position** is 0% or **VFD Output** is 100%, enter the static pressure in the **Duct Static Pressure Setpoint** field.
 - If the **Damper Position** is not 0% or **VFD Output** is not 100%, enter the static pressure $+1''$ (.025 kPa) in the **Duct Static Pressure Setpoint** field. Wait 1–2 minutes, then verify that the **Damper Position** is 0% or **VFD Output** is 100%. If not, repeat the process, adding $.05''$ (.012 kPa) to the previous **Duct Static Pressure Setpoint** until the **Damper Position** is 0% or **VFD Output** is 100%.
- 4 For each zone in the system that was balanced, go to its **Pressure Dependent Control > Details** tab, then click **Automatic Control** to return the zone to normal control.
- 5 In the tree, select the air source controller, then do one of the following.
 - a) For an RTU Open or WSHP Open controller, go to **Properties > Control Program > Configuration > Service Configuration > Service Test** and disable **Service Test** and **Fan Test**.
 - b) For any equipment whose wiring was disconnected to insure that only the fan only was running, reconnect it the wires for normal operation.



CAUTION You must complete steps 4 and 5 to prevent loss of temperature control to the space and to maintain normal operation of the system.

Sequence of operation

The VVT Zone II supports 3 types of pressure-dependent terminal configurations:

- Single duct
- Series fan-powered
- Parallel fan-powered

The controller can operate as part of a linked VVT system or as a stand-alone controller.

Temperature sensors

The VVT Zone II supports the following temperature sensors:

Sensors	Notes
Space temperature sensors:	
• Wireless Standard or Plus ¹	You can average up to 5 wireless sensors.
• ZS Standard, Plus, Pro ²	You can average up to 5 ZS sensors - a combination of temperature, humidity, and/or CO ² sensors.
• T55 ³	Push the sensor's override button from 2 to 10 seconds to initiate a timed override.
	If a network space temperature value is used, that value must be written to the BACnet space temperature point (system_spt) at 1 to 5 minute intervals or on a COV of 0.1Δ °F (.06Δ °C) .
	To reference another zone as your space temperature input, read the BACnet point zone_temp by using the network point System Space Temperature .
Duct temperature sensors:	
• Duct Air Temperature (DAT)	10K Type II. If the zone does not have ducted reheat, install a DAT sensor on the inlet of the damper.
• Supply Air Temperature (SAT)	If the zone has ducted reheat, install an SAT sensor downstream of the reheat source. The SAT is used in controlling the reheat.
	The DAT/SAT determines the air source mode if Linkage communication fails or if the controller is stand-alone. See <i>Air Source Mode Determination</i> (page 53) for details.

¹ To configure the control program for the desired user interaction with the sensor, see the *Wireless Sensors Application Guide*. For detailed instructions, see the *Wireless Sensors Installation Guide*.

² For basic user instructions, see the *ZS Sensor User Guide*. For detailed installation instructions, see the *ZS Sensors Installation Guide*.

³ See the *Carrier Sensors Installation Guide* for details on T55 sensors.

Zone airflow control

The VVT Zone II provides pressure-dependent zone temperature control by modulating its built-in damper actuator to control the flow of primary air into the zone. The controller uses PID control to calculate the damper position based on the difference between the zone's temperature and setpoints.

The air source mode determines if the primary air can meet the zone's need. If the zone controller is in a linked system, the air source mode is determined by the air source. If the zone controller is stand-alone or if linkage communication fails, the mode is determined by the controller's SAT. See *Air source mode determination* (page 53). If the air source mode is the same as the zone's local mode, the damper is positioned between the mode's configurable minimum and maximum damper position. If not, the damper is positioned at the mode's minimum damper position to insure sufficient minimum airflow at the air source.

When the air source mode is Vent and the zone's temperature demand is satisfied, the damper moves to its **Vent Position** to increase airflow and ventilation to the space.

Single duct with reheat – The **Reheat Min Damper Position** allows an increase of primary airflow across the terminal's ducted heating coil when the terminal is operating its local heat while the air source mode is Cool. This provides the ability to lower the cooling minimum airflow limits while providing the necessary airflow when the terminal is heating to ensure design load conditions and electric heater minimum airflow.

Parallel fan terminals – The controller's **Parallel Fan On Value** determines when the fan turns on to increase airflow at the zone's diffusers and prevent cold air from dumping into the zone when the system mode is Cool. This is achieved by increasing the volume and temperature of the air exiting the diffusers. Should the zone's damper close below the **Parallel Fan On Value**, the parallel fan is energized to mix ceiling plenum air with the primary air to increase total airflow and ventilation to the zone. The fan turns off when the damper position opens to 1% above the setpoint.

The fan also starts in Heat mode if the zone is configured for ducted heat as described in *Zone reheat control* (page 47).

Series fan terminals – The fan energizes when the air source fan is on if the zone controller is part of a linked system or in the unoccupied heat mode and the equipment fan is off. If the zone controller is stand-alone, the fan runs continuously. There is a fan start delay on transition to occupied, based on the **Power Fail Start Delay**. Before the fan starts, the damper closes. The damper position must be less than 5% for 10 seconds before the fan starts to prevent the fan from starting backwards.

See *Appendix B: VVT terminal modes* (page 92).

Damper Actuator(s) – The VVT Zone II's built-in 35 in/lb (4 Nm) actuator has a 154 second full travel time for 90° operation. For field retrofit applications, the actuator can be adjusted for a damper stroke between 30° and 90°, and it can be configured to move clockwise (default) or counterclockwise.

If the built-in actuator's torque is insufficient for large damper applications, the VVT Zone II's analog output can drive an external, 0-10 volt, high-torque actuator. Or, the controller can drive one or more additional slave actuators. A slave actuator must be mounted and configured to fully close the damper when the output signal is 0 volts. See *Wiring field-supplied actuators to the analog output*. (page 36)

Zone reheat control

The VVT Zone II can be configured for one of the following **Heat Types** to meet the zone's heating requirements:

- Modulating Hot Water/Steam
- Modulating SCR Electric

- Two Position Hot Water/Steam
- Staged Electric Heat (2 stages for Series/Parallel Fan, 3 stages for Single Duct.)
- Combination Modulating Baseboard/Staged Electric Heat (2 stages for Series/Parallel Fan, 3 stages for Single Duct.)

All of the above except Combination Modulating Baseboard/Staged Electric Heat can be ducted or non-ducted (baseboard). For ducted heat and Combination Modulating Baseboard/Staged Electric Heat, an SAT sensor (33ZCSENSAT) must be installed in the duct downstream of the heat source. The controller has a configurable **Maximum Heating SAT** for supply air temperature control. The zone controller monitors the (SAT) when the terminal's ducted heat is operating.

If the network provides the OAT, heating can be disabled if the OAT rises above the configured **Heating Lockout Temperature**.

Modulating Hot Water / Steam Heating Heat – The controller modulates a normally closed or normally open hot water or steam valve connected to the discharge air heating coil. The valve opens and closes as needed to satisfy the zone's heating requirements. For ducted heat, the terminal's heat supplements heat from the primary air source if it is in heating mode and is controlled so that the SAT does not exceed the **Maximum Heating SAT** [105° F (40.5° C) default]. For baseboard heating (non-ducted heat), the valve modulates to keep the zone's temperature at the heating setpoint.

SCR Electric Heat – The controller modulates an SCR heat output connected to the SCR electric heat control input. The output increases as needed to satisfy the zone's heating requirements. For ducted heat, the terminal's heat supplements heat from the primary air source if it is in heating mode and is controlled so that the SAT does not exceed the Maximum Heating SAT [105° F (40.5° C) default]. For baseboard heating (non-ducted heat), the SCR heat output modulates to keep the zone's temperature at the heating setpoint.

Two-Position Hot Water / Steam Heating Heat – The controller operates a normally closed or normally open hot water or steam valve connected to the discharge air heating coil. The valve opens and closes as needed to satisfy the zone's heating requirements. For ducted heat, the terminal's heat supplements heat from the primary air source if it is in heating mode and is controlled so that the SAT does not exceed the **Maximum Heating SAT** [105° F (40.5° C) default]. For non-ducted (baseboard) heating, the valve is controlled to keep the zone's temperature at the heating setpoint.

Electric Auxiliary Heat – The controller operates 1 or 2 stages of electric heat. For ducted heat, the terminal's heat supplements heat from the primary air source if it is in the heating mode and is controlled so that the SAT does not exceed the **Maximum Heating SAT** [105° F (40.5° C) default]. For non-ducted (baseboard) electric heat, the stages are controlled as needed to keep the zone's temperature at the heating setpoint.

Combination Modulating Baseboard / Electric Heat – The controller can modulate a normally closed or normally open hot water or steam valve connected to a perimeter baseboard radiation system and control up to 2 stages of ducted electric heat. The valve modulates to satisfy the zone's heating requirements. If the valve cannot meet the load, electric heat is used. The terminal's electric heater supplements heat from the primary air source if it is in heating mode and is controlled so that the SAT does not exceed the **Maximum Heating SAT** [105° F (40.5° C) default].

Parallel Fan Heat On Delay – For Parallel Fan terminals only, the controller has a configurable **Parallel Fan Heat On Delay** to save energy. During the delay (15 minute default), only the fan operates to recycle heat from the ceiling plenum. If the heating requirement is not met by the end of the delay, reheat is enabled.

Fan Heat Off Delay – For fan-powered terminals, the controller has a configurable **Fan Off Delay**. After the heating coil de-energizes, the fan continues to run for the length of the delay to deliver to the zone any heat stored in the coil. The default delay of 2 minutes is optimal for ducted hot water coils. For ducted electric heat coils, the nominal delay is approximately 1 minute. For baseboard and non-ducted heat, the delay should be set at 0.

This feature applies to parallel fan terminals in both occupied and unoccupied mode and series fan terminals in the unoccupied mode if the air source fan is off.

Demand control ventilation (DCV) and dehumidification using optional sensors

The VVT Zone II's **RH/CO2** input supports an optional CO₂ sensor or Relative Humidity (RH) sensor. The sensor can have a 5-volt maximum output. The range is configurable as either 0–5 or 1–5 volts (1–5 volt supports 4–20 mA sensors with a 250 ohm resistor). The controller's low and high sensor input configuration allows for a wide range of sensors.

The controller can also support both DCV and dehumidification functions, by using a system RH or CO₂ sensor input connected to another controller.

NOTE If the connected sensor and/or system sensor value are used by the air source through Linkage, set the appropriate control type to **Enable**. If you do not need local control at the zone, set **DCV Max Vent Airflow** or **Maximum RH Override Airflow** to 0.

Demand Control Ventilation (DCV) – Requires CO₂ sensor

The zone controller monitors the CO₂ sensor and can override the temperature control to respond to increasing CO₂ levels when the zone is occupied. If the sensor's value exceeds the **DCV Start Ctrl Setpoint** and the air source is in cooling or ventilation mode, the controller increases airflow to the zone at a base rate defined by ASHRAE, and then proportionally increases ventilation if the CO₂ level continues to increase. If the sensor's value exceeds the **DCV Max Ctrl Setpoint**, the controller modulates the damper to its **DCV Max Vent Damper Position**.

When the zone is unoccupied, the **Cooling Min Damper Position** and **Heating Min Damper Position** provide base ventilation.

If the controller is configured for reheat, the heating setpoint is temporarily increased to a value halfway between the heating and cooling setpoints. If the zone temperature drops below the heating setpoint, the DCV override is temporarily suspended and the damper returns to normal control until the zone temperature is satisfied.

Dehumidification – Requires RH sensor

The zone controller monitors the RH sensor and can provide dehumidification if the sensor's value exceeds the **Occupied RH Control Setpoint**. If the zone is occupied and does not require heating, and the air source is operating in a cooling mode and providing primary air with a sufficiently low dew point, the controller overrides the damper control to increase airflow to the zone. During the dehumidification mode, the heating setpoint is temporarily increased to a value halfway between the heating and cooling setpoints to prevent overcooling the zone. The controller uses a PID control loop to provide dehumidification. The controller has a **Maximum RH Override Airflow** setting to prevent excessive airflow during dehumidification.

NOTE If both control functions are enabled, the zone will control to the greatest calculated damper position of the three values (temperature, RH, or IAQ).

Occupancy

The VVT Zone II's operation depends on the zone's occupancy state as determined by occupancy schedules or a remote occupancy override.

Occupancy Schedules – An occupancy schedule can be one of the following:

- A local schedule set up directly in the controller using a touchscreen device or Field Assistant.
- A network schedule from an i-Vu internal router. The VVT Zone II must be networked to an i-Vu Open Router or an i-Vu internal router.
- A System Occupancy network point. This point links the controller occupancy to another controller in the network so that multiple zones can follow the occupancy of another VVT Zone or other controller on the network.

To set up occupancy schedules, you first define a schedule for each day of the week and then define schedules for the exceptions, such as holidays. The exceptions can be based on a date, a date range, or a week and day.

NOTES

- The **Occupancy Schedules** property must be enabled (default).
- A network schedule downloaded from the i-Vu application will overwrite a local schedule that was set up in a touchscreen device or Field Assistant.

Remote Occupancy Override – The controller monitors its **Remote** input that is typically connected to the isolated, dry contact of an occupancy sensor located in the zone. The controller can override the occupancy state based on whether or not the space is actually occupied. If the occupancy sensor contact is in the same state as **Occ Override Normal Logic State** setting, the zone follows its normal occupancy schedule. If the contact is in the opposite state, it overrides the zone into the unoccupied mode. The input can be configured for normally closed or normally opened contact types and is set to Open by default so that it does not affect the controller occupancy operation if left unused.

Learning Adaptive Optimal Start – This function gradually adjusts the unoccupied setpoints over a specified period of time to achieve the occupied setpoint by the time scheduled occupancy begins. This learning adaptive algorithm uses the **learned heating capacity** and **learned cooling capacity** values to calculate the effective setpoints prior to the occupied start time. The algorithm calculates a learned cooling and heating capacity during the previous unoccupied time. Set the **Learning Adaptive Optimal Start** recovery period from 1 to 4 hours in **Optimal Start**. When the **Learning Adaptive Optimal Start** routine runs, adjustments are based on the color that is achieved when occupancy begins. Adjustment amounts are defined in the thermographic color fields located directly above the **Effective Setpoints** graph under **Setpoints**.

BAS On/Off – This function allows third party control of the controller occupancy. **Occupancy Schedules** must be set to **Disable** to use this function. When set to **Occupied** or **Unoccupied**, **Optimal Start** is automatically disabled.

For additional information on ZS Sensor occupancy and override settings, see *Maintenance* (page 82) Points and Properties.

Alarms

Space Temp Sensor Alarm – The VVT Zone II monitors each space temperature sensor and the network input for space temperature. If no valid space temperature value is available, the controller generates an alarm and disables all local heating or cooling. The controller modulates the damper to the minimum heat, minimum cool, or ventilation position based on the air source mode. Normal operation resumes when the controller detects a valid sensor value.

Space Temperature Alarm – The controller generates an alarm if the space temperature exceeds the alarm setpoint. The occupied alarm setpoint is the configurable **Occupied Alarm Hysteresis** (5Δ °F [2.8Δ °C] default) subtracted from and added to the configured occupied heat and cool setpoints. The configurable unoccupied high and low alarm setpoints have a fixed 10 minute alarm delay. When a transition from unoccupied to occupied occurs or the occupied temperature setpoints are changed, causing an alarm condition, the controller automatically calculates an alarm delay of 10 minutes for each degree of change. The delay prevents unnecessary alarms and gives the zone time to correct the alarm condition. The alarm returns to normal when the space temperature goes between the current mode's setpoints.

Supply Air Temperature Alarm – The controller generates an alarm if the SAT exceeds the configured **High SAT Alarm Limit** (120 °F [48.9 °C] default) or falls below the **Low SAT Alarm Limit** (45 °F [7.2 °C] default) for more than 5 minutes. The hysteresis for return to normal is 3Δ °F (1.7Δ °C). The **High SAT Alarm Limit** should be set to a value at least 15Δ °F (8.3Δ °C) above the **Maximum Heating SAT** or the maximum discharge temperature from the air source, whichever is greater.

Space Relative Humidity Alarm – If a Space Relative Humidity (RH) sensor is installed, the controller generates an alarm if the sensor's value exceeds the **Occ High RH Alarm Limit** (100% rh default) or the **Unocc High RH Alarm Limit** (100% rh default). The controller provides a 30-minute alarm delay during unoccupied periods. During occupied periods, the controller uses the **Occ High RH Alarm Limit**. When a transition from unoccupied to occupied occurs or the occupied high alarm limit is lowered causing an alarm condition to occur, the controller automatically calculates an alarm delay of 5 minutes per %RH multiplied by the amount of the change. The delay prevents unnecessary alarms and gives the zone time to correct the alarm condition. The hysteresis for return to normal is 3% RH.

Indoor Air Quality Alarm – If a CO₂ sensor is installed, the controller generates an alarm during occupied periods if the sensor's value exceeds the **Occupied High CO₂ Alarm Limit**. When a transition from unoccupied to occupied occurs, or if the occupied alarm limit is changed to a value that causes an alarm condition to occur, the controller automatically calculates an alarm delay based on the error from setpoint (15 minutes minimum, 4 hours maximum). The delay prevents unnecessary alarms and gives the zone time to correct the alarm condition. To disable the IAQ alarm, set **Occupied High CO₂ Alarm Limit** to 0. The default value is 1100ppm. The hysteresis for return to normal is 100ppm.

Filter Alarm – For series or parallel fan-powered terminals, the controller monitors the accumulated hours of fan operation and generates an alarm when the **Filter Runtime** hours exceed the configured **Filter Service Alarm Timer** limit. The default value is 0 hours which disables the alarm. The alarm can be reset by setting **Reset Filter Alarm** to On or resetting the configured alarm limit to 0 hours.

Airside Linkage Alarm – The slave zone controller generates an alarm if it does not receive linkage information for 5 minutes. If the controller is the VVT Master, it generates an alarm if it does not communicate with its air source for 5 minutes. A return-to-normal is generated after successful Linkage communication resumes.

Demand limiting

Demand limiting is a cost-saving strategy to reduce energy consumption. The strategy expands the setpoints when the system reaches one of 3 levels of consumption. With the expanded setpoints, the equipment works less, thereby saving energy.

If the VVT Zone II receives a demand limit signal through the network, it expands its setpoints based on the demand level. The default amounts are:

- Demand Level 1: 1Δ °F (.6Δ °C)
- Demand Level 2: 2Δ °F (1.1Δ °C)
- Demand Level 3: 4Δ °F (2.2Δ °C)

Linkage

The i-Vu Control System uses linkage to exchange data between the zone terminals and their air source to form a coordinated HVAC system. The system's air source controller, zone controllers, and bypass controller are linked so that their data exchange can be managed by one zone controller configured as the VVT Master.

The VVT Master gathers the following information from the slave zone controllers: occupancy status, setpoints, space temperature, relative humidity, CO₂ level, damper position, and optimal start data. The VVT Master performs mathematical calculations and algorithms on the data and then sends the composite information to the air source. The VVT Master receives information from the air source such as mode, supply air temperature, and outside air temperature, if present, and passes that information to all linked controllers.

The VVT Master determines system operation by prioritizing heating and cooling requirements from all the zones based on their occupancy and demand. The VVT Master scans the system continuously to determine if any zones are occupied. Occupied zones are a higher priority than unoccupied zones. The VVT Master evaluates all the occupied zones' heating or cooling demands and sends a request to the air source for:

- Cooling, if the number of occupied zones with cooling demands exceeds the number of occupied zones with heating demands, and the demand is greater than or equal to the number of configured **Linkage Callers**.
- Heating, if the number of occupied zones with a heating demand exceeds or is equal to the number of **Linkage Callers**.

A Linkage caller zone is determined by two user-adjustable parameters, A binary value is used to inhibit any individual zone from becoming a heat or cool caller.

If **Inhibit Cooling Call from this zone?** is set to **Yes**, then this zone is ignored when determining total cooling calls. Likewise, if **Inhibit Heating Call from this zone?** is set to **Yes**, then this zone's heating requirement will be ignored.

Next, if both of the above are set to **No**, then the amount of zone temperature deviation from setpoint determines when a zone becomes a caller. For cooling, this is determined by the amount of the yellow setpoint band. A zone must exceed this band and enter into the orange band to become a cooling caller. The yellow band by default is 1Δ °F (.5Δ °C), therefore the space temperature must exceed the cooling setpoint by more than 1Δ °F (.5Δ °C) to be counted as a cooling request.

The light blue band is used to determine the deviation required to become a heating caller. It is also set to a default value of 1Δ °F (.5Δ °C), but you can adjust it.

If no zones are occupied, or no occupied zones require heating or cooling, the VVT Master performs the evaluation described above for the unoccupied zones.

The VVT Master then gathers the following information and sends it to the air source:

- The setpoints and space temperature from the zone with the greatest demand for the requested air source mode (heating or cooling). (This zone is called the reference zone.)
- The system occupancy status
- Most open damper position from any zone
- RH and CO₂ values (if applicable)

The air source responds by sending the air source mode, supply air temperature, and outside air temperature. The air source verifies the mode by comparing its supply air temperature to the space temperature received through Linkage. See the air source documentation for operation and parameters used to verify its mode. This verification allows the VVT system to determine if the desired air source mode is actually being provided. For example, if the VVT Master sends a request for heating and the air source does not have heat or it's heat has failed, the air source's actual mode indicates that and its current mode is sent to the zones so that they can control accordingly.

The system remains in that mode until all zones of that demand are satisfied or until the System Mode Reselect Timer (factory default is 30 minutes) causes a forced re-evaluation of the system. If there is no demand for the opposite mode, the reselect timer starts again and the current mode continues until all zones are satisfied or until the reselect timer expires, repeating the process. If there is a demand for the opposite mode, the VVT Master sends the reference zone's space temperature and setpoints to the air source and restarts the reselect timer. The air source re-evaluates its demand based on the new information and goes to the Vent mode until the new mode can be verified as described above. The amount of time this takes is determined by the air source's operating parameters.

The VVT Master continuously evaluates the system and updates the air source with the most current system demand. Based on the evaluation, the reference zone can change from one zone to another. The evaluation process continues until there is no demand from any zone or the 30 minute timer causes a re-evaluation of the system conditions.

If no heating or cooling is required or the current air source mode is satisfied, the VVT Master calculates the weighted average of the occupied and unoccupied heating and cooling setpoints. It also calculates a zone temperature that is midway between the setpoints (occupied or unoccupied based on the system's current occupancy status). This information, plus the occupancy status, is sent to the air source so that its current mode is disabled and the unit ceases heating or cooling operation. If the system is occupied, the air source fan and OA damper, if applicable, operate to maintain proper ventilation.

Linkage modes and operation

Linked air source modes – In a linked system, the air source determines its operating mode and qualifies that mode based on its own SAT. The following modes can be sent by the air source depending on its capability and configuration:

OFF	Air source fan is off. Terminal damper is positioned approximately 70% open to allow for system restart.
WARMUP	Air source fan is on and providing first cycle of heat when changing from unoccupied to occupied. It may also be used as an equipment safety to increase system airflow. The terminal's heating setpoint temporarily increases to the midpoint between the configured occupied heating and occupied cooling setpoints.
HEAT	Air source fan is on and providing heat. The terminal modulates its primary air damper to maintain the current heating setpoint.
FREECOOL	Air source fan is on and providing cooling using only the economizer and usually during an unoccupied period. The terminal modulates its primary air damper to maintain the midpoint between the configured occupied heating and occupied cooling setpoints.
COOL	Air source fan is on and providing cooling. The terminal modulates its primary air damper to maintain the current cooling setpoint.
PRESSURIZATION	Air source supply fan is on usually as a result of a fire-life safety input being active. It may also be used as an equipment safety to increase system airflow. The terminal modulates its primary air damper to provide the configured maximum cooling airflow.
EVACUATION	Evacuation is usually the result of a fire-life safety input at the air source being active. The terminal fully closes its primary air damper and disables its terminal fan, if equipped.
VENT	All terminals treat VENT mode the same as the COOL mode. For VVT terminals, VENT modes allows for an increase in airflow. VVT terminals use the greater of the configured Vent Damper Position or the Minimum Cooling Damper Position as the minimum during the VENT mode.

See the air source's installation manual for more specific operation.

Local air source modes – If the zone controller is stand-alone, or if linkage communication fails, the zone controller assumes that the fan is always on and monitors its SAT sensor to determine if the primary air source is providing heating, cooling, or recirculating air in a fan-only or ventilation mode.

HEAT	For Series or Parallel Fan controllers when the zone terminal fan is off or for single duct controllers: The zone's local heat has not operated for at least 5 minutes, and the SAT is more than 5Δ °F (2.7Δ °C) warmer than the space temperature. If the terminal fan is on, the SAT must be at least 8Δ °F (4.4Δ °C) more than the space temperature. In all cases, Heat mode is maintained until the SAT drops 2Δ °F (1.1Δ °C) below the space temperature.
VENT	The zone's local heat has not operated for at least 5 minutes and the SAT is between 65 (18.3 °C) and 80 °F (26.6 °C).
COOL	The zone's local heat has not operated for at least 5 minutes, the current mode is not Heat or Vent, and the SAT is less than 65 °F (18.3 °C).

See Appendix B: VVT terminal modes (page 92).

Zone Environmental Index

The i-Vu® Control System uses Environmental Index (EI) to calculate a real-time numerical EI value for a zone based on ideal **Occupied** space temperature, optional relative humidity (RH) and/or CO2. Environmental Index determines the source(s) derating the EI value by continuously evaluating **Occupied** zone conditions. **EI Decreased By** displays the source(s) derating the EI value. The **EI Space Temp Setpoint Tolerance** 0.5Δ °F (0.28Δ °C) is subtracted from **Effective Heat Setpoint** and is added to **Effective Cool Setpoint**, expanding the ideal EI temperature sensitivity range. The EI is derated from the initial **Occupied** value of 100% if the space temperature deviates from the ideal EI temperature sensitivity range.

NOTE The **EI Space Temp Setpoint Tolerance** does not affect the controlling space temperature **Effective Heat Setpoint** or **Effective Cool Setpoint**.

The optional RH and/or CO2 values derate the EI value when they deviate from their setpoints.

- If **RH Control** is set to **Enable**, the EI is derated when the RH value is less than the **EI Humidity Low Limit** or when the RH value is greater than the **Occupied RH Control Setpoint**.
- If **DCV Control** is set to **Enable**, the EI is derated by CO2 if the value exceeds the **DCV Max Ctrl Setpoint**.

If a zone is **Unoccupied**, the EI will calculate a value of 0%.

EI Time Satisfied is the percentage of **Occupied** time which a zone maintains an EI value of 70% or higher.

Weighted EI determines the priority of a zone in an EI roll-up, which must be completed using a different control program. The value is determined by multiplying the real-time EI value by the **EI Weighting Factor**.


To adjust the driver properties

Use the following if you want to change the driver's properties in the i-Vu® interface.

- 1 On the i-Vu® navigation tree, right-click the VVT Zone II and select **Driver Properties**.
- 2 Make changes as needed on the **Properties** page for **Driver** and any of its children.

Driver

On the **Driver** page > **Settings** tab, you can change the Module clock synchronization and failure. See table below.

TouchScreen Control	
TouchScreen Schedule Edit Enable	This field is checked automatically to allow a user to edit this controller's schedules from an Equipment Touch's Schedules screen. Uncheck to disable.
Module Clock	
Clock Fail Date and Time	Date and time the control program uses when controller's time is invalid.  TIP Use an occupied date and time (such as a Tuesday at 10 a.m.) so the equipment does not operate in unoccupied mode if the controller loses power during occupancy.
Time Synch Sensitivity (seconds)	When the controller receives a time sync request, if the difference between the controller's time and the time sync's time is greater than this field's value, the controller's time is immediately changed. If the difference is less than this field's value, the controller's time is slowly adjusted until the time is correct.
Network Microblocks	
Number of poll retries before Network Input Microblocks indicate failure	The maximum number of retries after the initial attempt that a Network microblock will attempt to communicate with its target device. If unsuccessful, the point will transition to an idle state for 30 seconds before attempting to communicate again. Change this field only if directed by Technical Support.
Periodic rebinding interval	If a microblock uses a wildcard in its address, this timer determines how often the microblock will attempt to find the nearest instance of its target. For example, if an outside air temperature address uses a wildcard, a VAV application will look for the outside air temperature on the same network segment or on the nearest device containing that object.
BACnet COV Throttling	

To adjust the driver properties

Enable COV Throttling

Under normal circumstances, COV Throttling should be enabled to prevent excessive network traffic if an object's COV Increment is set too low. See EXCEPTION below.

When enabled, if an object generates excessive COV broadcasts (5 updates in 3 seconds), the driver automatically throttles the broadcasts to 1 per second. Also, if the object's value updates excessively for 30 seconds, an alarm is sent to the i-Vu® application listing all objects that are updating excessively. A Return-to-normal alarm is sent only after all objects have stopped updating excessively.

EXCEPTION: In rare circumstances, such as process control, a subscribing object may require COV updates more frequently than once per second. For these situations, clear this checkbox, but make sure that your network can support the increased traffic. You will also need to disable the **Excessive COV** alarms under the driver's **Common Alarms**.

Trend Sampling**Collect a daily midnight sample for all points in this controller that are sampling on COV**

For values that change infrequently, select to verify at midnight daily that the point is still able to communicate trend values.

Device

On the **Device** page, you can view the following properties:

- BACnet device object properties for the VVT Zone II
- VVT Zone II network communication

Configuration

NOTE The three APDU fields refer to all networks over which the VVT Zone II communicates.


Max Masters and Max Info Frames

Apply only if the VVT Zone II is on an MS/TP network.

Notification Classes

Alarms in the i-Vu® application use Notification Class #1. A BACnet alarm's Notification Class defines:

- Alarm priority for Alarm, Fault, and Return to Normal states
- Options for BACnet alarm acknowledgment
- Where alarms should be sent (recipients)

Priorities	NOTE BACnet defines the following Network message priorities for Alarms and Events.										
	<table border="1"> <thead> <tr> <th>Priority range</th> <th>Network message priority</th> </tr> </thead> <tbody> <tr> <td>00–63</td> <td>Life Safety</td> </tr> <tr> <td>64–127</td> <td>Critical Equipment</td> </tr> <tr> <td>128–191</td> <td>Urgent</td> </tr> <tr> <td>192–255</td> <td>Normal</td> </tr> </tbody> </table>	Priority range	Network message priority	00–63	Life Safety	64–127	Critical Equipment	128–191	Urgent	192–255	Normal
Priority range	Network message priority										
00–63	Life Safety										
64–127	Critical Equipment										
128–191	Urgent										
192–255	Normal										
Priority of Off-Normal	BACnet priority for Alarms.										
Priority of Fault	BACnet priority for Fault messages.										
Priority of Normal	BACnet priority for Return-to-normal messages.										
Ack Required for Off-Normal, Fault, and Normal	Specifies whether alarms associated with this Notification Class require a BACnet Acknowledgment for Off-Normal, Fault, or Normal alarms.										
	 TIP You can require operator acknowledgment for an Alarm or Return-to-normal message (stored in the i-Vu® database). In the i-Vu® interface on the Alarm > Enable/Disable tab, change the acknowledgment settings for an alarm source or an alarm category.										
Recipient List											
Recipients	The first row in this list is from the i-Vu® application. Do not delete this row. Click Add if you want other BACnet devices to receive alarms associated with this Notification Class.										
Recipient Description	Name that appears in the Recipients table.										
Recipient Type	Use Address (static binding) for either of the following: <ul style="list-style-type: none"> • Third-party BACnet device recipients that do not support dynamic binding • When you want alarms to be broadcast (you must uncheck Issue Confirmed Notifications). This use is rare. 										
Days and times	The days and times during which the recipient will receive alarms.										
Recipient Device Object Identifier	Type the Device Instance from the network administrator for third-party devices in the # field.										
Process Identifier	Change for third-party devices that use a BACnet Process Identifier other than 1. The i-Vu® application processes alarms for any 32-bit Process Identifier.										
Issue Confirmed Notifications	Select to have a device continue sending an alarm message until it receives delivery confirmation from the recipient.										
Transitions to Send	Uncheck the types of alarms you do not want the recipient to get.										

Calendars

Calendars are provided in the driver for BACnet compatibility only. Instead, use the **Schedules** feature in the i-Vu® interface.

To adjust the driver properties

Common Alarms

On these pages, you can enable/disable, change BACnet alarm properties, or set delays for the following BACnet alarms:

Common alarms:

- Module Halted
- All Programs Stopped
- Duplicate Address
- Locked I/O
- Control Program
- Program Stopped
- Excessive COV

Module Generated Alarm	
Description	Short message shown on the i-Vu® Alarms page or in an alarm action when this type of alarm is generated.
Events	
Alarm Category and Alarm Template	See <i>Alarms</i> in i-Vu® Help.
Enable	Clear these checkboxes to disable Alarm or Return to normal messages of this type from this controller.
Notification Class	Do not change this field.

Specific Events

On these pages, you can enable/disable, change BACnet alarm properties, or set delays for the following BACnet alarms:

Specific alarms:

- Flow Control Alarm
- Reheat Valve Alarm

NOTE To set up alarm actions for controller generated alarms, see *Alarms* in i-Vu® Help.

Controller Generated Alarm	
Description	Short message shown on the i-Vu® Alarms page or in an alarm action when this type of alarm is generated.
Events	
Alarm Category and Alarm Template	See <i>Alarms</i> in i-Vu® Help.
Enable	Clear these checkboxes to disable Alarm or Return to normal messages of this type from this controller.
Notification Class	Do not change this field.

Switches, Jumpers, Options

The **Switches, Jumpers, Options** page shows the current physical settings on the VVT Zone II.

Act Net Network Details

Act Net Statistics

The actuator and valve serial numbers are automatically detected and displayed in the driver properties in the i-Vu® interface when the controller is powered up. Only those devices that are physically connected or in the control program will show in the table on the Act Net Network Details page.

NOTE If an Act Net device is not detected, remove it, and reapply power to the controller.

The **Act Net** network assigns Device Address 1 to the VVT Zone II's actuator and Device Address 4 and/or 5 to i-Vu® Smart Valves.

Verify communication with your actuator and valves in **Device Status** on the **Act Net Statistics** table.

Act Net Statistics			
Device Description	Device Address	Device Status	Serial Number
On-board Actuator	1	Normal operation	01724-20262-250-130
Reheat Valve- 1	4	Normal operation	01841-10400-250-200
Reheat Valve- 2	5	Normal operation	01841-10398-250-200

To add an i-Vu® Smart Valve

- 1 Go to **Driver > Act Net Network Details > Properties** tab > **Act Net Address Setting** section.
- 2 If the serial number is not displayed, locate it on the actuator and then enter it in the **Serial Number** fields.

Act Net Address Setting		
Serial Number	Device	Operation Status
01841 - 10400 - 250 - 200	Reheat Valve-1 ▾	
<input type="text"/> - <input type="text"/> - <input type="text"/> - <input type="text"/>	No Change ▾	
<input type="text"/> - <input type="text"/> - <input type="text"/> - <input type="text"/>	No Change ▾	
<input type="text"/> - <input type="text"/> - <input type="text"/> - <input type="text"/>	No Change ▾	

- 3 Select **Reheat Valve-1** or **Reheat Valve-2** from the **Device** drop-down list.
NOTE **Reheat Valve-1** sets to address **4** and **Reheat Valve-2** sets to address **5**.

Click **Accept**. When the changes are applied, the **Operation Status** of the **Act Net Address Setting** table displays **Success**.

Troubleshooting

If you have problems mounting, wiring, or addressing the VVT Zone II, contact Carrier Control Systems Support.

NOTE To help you troubleshoot, obtain a Module Status (Modstat) from the controller and review the System Error and Warning details.

LED's

The LED's on the VVT Zone II show the status of certain functions. Verify the LED patterns by cycling power to the controller and noting the lights and flashes.

If this LED is on...	Status is...
Power	The VVT Zone II has power.
Rx	The VVT Zone II is receiving data from the network segment
Tx	The VVT Zone II is transmitting data over the network segment
DO#	The digital output is active
CW	The actuator motor is turning clockwise
CCW	The actuator motor is turning counterclockwise

The **Run** and **Error** LED's indicate controller and network status.


If Run LED shows...	And Error LED shows...	Status is...
1 flash per second	1 flash per second, alternating with the Run LED	The controller files are archiving. Archive is complete when Error LED stops flashing.
2 flashes per second	Off	Normal
2 flashes per second	2 flashes, alternating with Run LED	Five minute auto-restart delay after system error
2 flashes per second	3 flashes, then off	The controller has just been formatted
2 flashes per second	4 flashes, then pause	Two or more devices on this network have the same network address
2 flashes per second	1 flash per second	The controller is alone on the network
2 flashes per second	On	Exec halted after frequent system errors, due to: <ul style="list-style-type: none"> • Controller halted • Program memory corrupted • One or more programs stopped
5 flashes per second	On	Exec start-up aborted, Boot is running

If Run LED shows...	And Error LED shows...	Status is...
5 flashes per second	Off	Firmware transfer in progress, Boot is running
7 flashes per second	7 flashes per second, alternating with Run LED	Ten second recovery period after brownout
14 flashes per second	14 flashes per second, alternating with Run LED	Brownout
On	On	Failure. Try the following solutions: <ul style="list-style-type: none"> • Turn the VVT Zone II off, then on. • Download memory to the VVT Zone II. • Replace the VVT Zone II.

NOTE If you resolve the issue but the **Error** LED does not turn off, cycle power to the controller.

To get the serial number

 If you need the VVT Zone II's serial number when troubleshooting, the number is on a Module Status report (Modstat) under **Core** (or **Main**) **board hardware**



To obtain a modstat in the i-Vu® interface:

- 1 Select the VVT Zone II in the navigation tree.
- 2 Right-click and select **Module Status**.

To restore factory defaults



WARNING This erases all archived information and user-configuration settings. You will have to reconfigure all custom settings. It is recommended to restore the factory defaults only under the guidance of Carrier Control Systems Support.

To erase volatile memory data and restore factory default configuration settings:

- 1 Pull the screw terminal connector from the controller's power terminals labeled **Gnd** and **24 Vac**. Make sure the address switches are not set to 0, 0.
- 2 Short the **Format Short pins** jumper's pins and maintain the short for steps 3 and 4.
- 3 Insert the power screw terminal connector into the VVT Zone II's power terminals.

- 4 Continue to short the jumper until the **Error** LED flashes three times in sync with the **Run** LED.
- 5 Remove the short.

To replace the battery

If the VVT Zone II experiences a power outage and the control program stops functioning, replace the battery.

You need to replace the battery if the voltage measures below 2.9 volts when the controller is not powered.

- 1 Verify that the VVT Zone II's power is on.



CAUTION If the controller's power is not **on** when replacing the battery, your date, time, and trend data will be lost.

- 2 Remove the VVT Zone II's cover.
- 3 Remove the battery from the controller, making note of the battery's polarity.
- 4 Insert the new battery, matching the battery's polarity with the polarity indicated on the controller's cover.
- 5 Replace the VVT Zone II's cover.
- 6 Download the VVT Zone II.

Compliance

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1 This device may not cause harmful interference.
- 2 This device must accept any interference received, including interference that may cause undesired operation.

NOTE This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy, and if it is not installed and used in accordance with this document, it may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.



CAUTION Any modifications made to this device that are not approved by Carrier will void the authority granted to the user by the FCC to operate this equipment.

CE and UKCA Compliance



WARNING This is a Class B product. In a light industrial environment, this product may cause radio interference in which case the user may be required to take adequate measures.

BACnet Compliance

Compliance of listed products to requirements of ASHRAE Standard 135 is the responsibility of BACnet International. BTL® is a registered trademark of BACnet International.

Appendix A: VVT Zone II Points/Properties

NOTE Engineering units shown in this document in the defaults and ranges are strictly for reference. You must enter an integer only.

Status

Navigation: i-Vu® / Field Assistant: **Properties > Control Program > Status**

Point Name/Description	Range
Terminal Mode – The controller's current operating status.	R: Off Heating Warm-up Vent Cooling Dehumidify Reheat Pressurize Evacuate Shutdown IAQ Override Air Balancing
Terminal Type – The type of zone terminal that the controller is installed on.	R: Single Duct Parallel Fan Series Fan
Space Temperature - Prime Variable – The space temperature value currently used for control.	R: -56 to 245 °F (-48.9 to 118.3 °C)
Damper Position – The current damper position.	R: 0 to 100%
Supply Air Temperature – Displays the current supply air temperature.	R: -56 to 245 °F (-48.9 to 118.3 °C)
Heating Capacity – The current reheat capacity when the zone is configured for reheat.	R: 0 to 100%
Baseboard Heating Capacity – The current modulating baseboard heat capacity when the zone is configured for Combination Baseboard and Ducted Heat.	R: 0 to 100%
Outdoor Air Temperature – The current outdoor air temperature from a linked air source, if available, or from another network source.	R: -56 to 245 °F (-48.9 to 118.3 °C)
Fan – The status of the terminal fan if Term Type is Parallel Fan or Series Fan .	R: On/Off
Space Relative Humidity – The current space relative humidity if Service Configuration > Hardwired Sensor is set to RH Sensor or, you have a valid ZS RH sensor.	R: 0 to 100%rh
Indoor Air Quality CO2 (ppm) – The current IAQ value if Service Configuration > Hardwired Sensor is set to CO2 Sensor or, you have a valid ZS CO ² sensor.	R: 0 to 5000ppm

Point Name/Description	Range
Shutdown – When Active , disables all control functions, at normal equipment time delays and close the damper.	D: Inactive R: Inactive/Active
Hot Water Valve Cmd - The current commanded position of the 2-Position valve.	R: Open/Close
Hot Water Valve Cmd - The current commanded position of the Modulating valve.	R: 0 to 100%
Smart Valve Cmd – The current commanded position of the Smart Valve.	R: 0 to 100%
Smart Valve Pos – The current position of the Smart Valve.	R: 0 to 100%

Unit Configuration

Navigation: i-Vu® / Field Assistant: **Properties > Control Program > Configuration > Unit Configuration**

Point Name/Description	Default/Range
Heat Enable – Enables the reheat function.	D: Enable R: Disable/Enable
Parallel Fan Heat On Delay – The delay in reheat coming on after the zone has a heating demand. If the Term Type is Parallel , this allows the fan time to use plenum air to heat the space prior to bringing mechanical reheat. If the Term Type is Single Duct , we recommend that you set this value to 1 minute.	D: 15 minutes R: 0 to 30 minutes
Fan Off Delay – Fan-type terminals only. The amount of time the terminal fan continues to operate after a heating demand is satisfied.	D: 120 seconds R: 0 to 180 seconds
Maximum Heating SAT – The maximum supply air temperature allowed while ducted heat is operating. Ducted type supplemental heat is controlled so that it will not exceed this limit or the configured High SAT Alarm Limit . Set the Maximum Heating SAT limit to 5 °F (2.8 °C) above the desired maximum supply air temperature you would expect. Refer to Alarm Configuration > High SAT Alarm Limit to properly set this parameter.	D: 105 °F (40.6 °C) R: 100 to 140 °F (37.7 to 60 °C)
Maximum RH Override Position – The maximum damper position that the RH function can override the damper to. When active, the damper modulates to the temperature control position, RH override position, or the IAQ override position, whichever is greater.	D: 60% R: 0 to 100%
DCV Max Vent Damper Pos – The maximum damper position that the IAQ function can override the damper to. When active, the damper modulates to the temperature control position or the IAQ override position, whichever is greater.	D: 70% R: 0 to 100%
Filter Service Alarm Timer – The amount of time a Parallel or Series fan will run before generating a Filter Alarm . Set to 0 to disable the alarm.	D: 0 hr R: 0 to 9999 hr
T55 Pushbutton Override – Enables or disables the use of a pushbutton override from a local space temperature sensor.	D: Enable R: Disable/Enable
Setpoint Adjustment – Enables the setpoint adjustment slider on the SPPL space sensor.	D: Enable R: Disable/Enable
Setpoint Adjustment Range - The maximum amount that a user can adjust the setpoint on the local ZS or SPT sensor.	D: 2Δ °F (1.1Δ °C)


Point Name/Description	Default/Range
Heating Lockout Temperature – Supplemental reheat is disabled if outside air temperature exceeds this value. Supplemental reheat is enabled when the outside air temperature falls below a fixed hysteresis of 2Δ °F (1.1Δ °C). This function is active only if there is a valid network outside air temperature.	D: 70 °F (21.1 °C) R: -60 to 150 °F (-51.1 to 65.5 °C)
Power Fall Restart Delay – How long the controller delays normal operation after the power is restored. This is typically used to prevent excessive demand when recovering from a power failure. Applies to Series Fan start delay when system mode transitions from unoccupied to occupied. A delay of no greater than 120 seconds is recommended for Series Fan applications.	D: 60 seconds R: 0 to 600 secs
Occupancy Schedules – If Enabled , the controller stores and follows a schedule sent over the network or programmed locally through a touchscreen or Field Assistant. If Disabled , the controller occupancy is controlled from the BAS On/Off or System Occupancy network point.	D: Enable R: Disable/Enable
Occ Override Delay – The amount of time the controller remains occupied after the remote occupancy switch returns to the unoccupied position.	D: 15 minutes R: 0 to 240 minutes
Smart Valve Max Pos – The maximum position that the Smart Valve will control to.	D: 100% R: 0 to 100%
T55 Override Duration – The amount of time that the controller runs in the occupied mode when a user presses the T55 sensor's override button for 1 to 10 seconds. Pushbutton Override must be set to Enable .	D: 1 hr R: 1 to 4 hr
Environmental Index Enable – If enabled, when a zone is occupied, it monitors the deviation of space temperature from effective heating and cooling setpoint range. It monitors optional relative humidity if RH Control is set to Enable and/or monitors CO ₂ if DCV Control is set to Enable .	D: Enable R: Disable/Enable
Local Sensor Calibration	
Space Temperature – The current space temperature.	R: -56 to 245 °F (-48.9 to 118.3 °C)
Space Temp Calibration – A calibration offset value to allow the local space temperature sensor to be adjusted to match a calibrated standard measuring the temperature in the same location.	D: 0 °F/C R: -9.9 to 10Δ °F (-5.5 to 5.5Δ °C)
Supply Air Temperature – Displays the current supply air temperature.	R: -56 to 245 °F (-48.9 to 118.3 °C)
Supply Air Temp Calibration – A calibration offset value to allow the supply air temperature sensor to be adjusted to match a calibrated standard measuring the temperature in the same location.	D: 0Δ °F/Δ °C R: -9.9 to 10Δ °F (-5.5 to 5.5Δ °C)
Space Relative Humidity – Displays the current value of relative humidity sensor, if present.	R: 0 to 100%
Relative Humidity Calibration – You can enter a calibration offset for the relative humidity. The offset is added to or subtracted from the controller's RH input value, and the calculated value is shown in the Status > Space Relative Humidity .	D: 0% R: -15 to 15%rh

Setpoints

Navigation: i-Vu® / Field Assistant: **Properties > Control Program > Configuration > Setpoints**

Select a color band on the setpoint graph to see the current setpoints in the **Heating** and **Cooling** fields. The values in this graphic are Fahrenheit. See setpoint descriptions below.

NOTE This graphic is an example only. Your setpoints may differ.

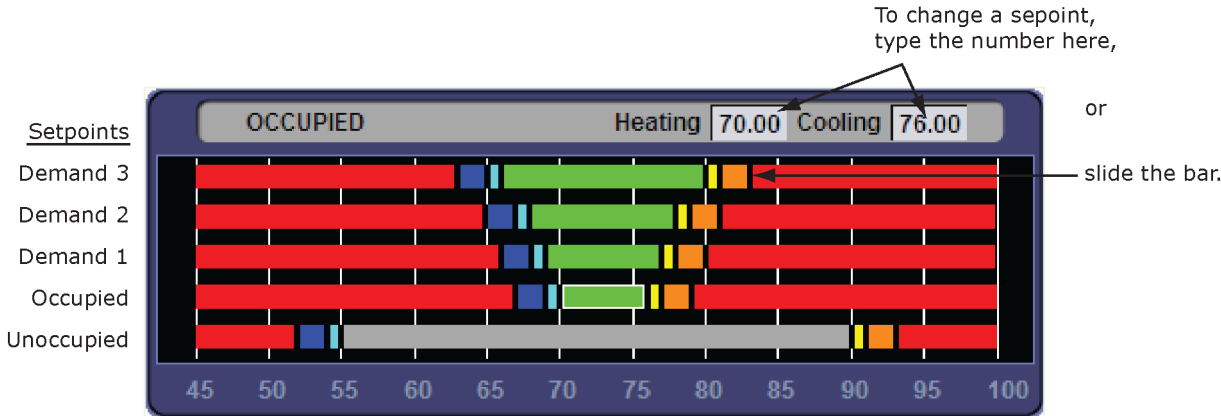

Occupied Setpoints

The occupied setpoints described below are the setpoints under normal operating conditions. The Demand Level 1–3 setpoints apply if demand limiting is used.

Demand limiting is a cost-saving strategy to reduce energy consumption. The strategy expands the occupied heating and cooling setpoints when the system reaches one of 3 levels of consumption. With the expanded setpoints, the equipment works less, thereby saving energy. By default, Demand Level 1 expands the occupied heating and cooling setpoints by 1Δ°F (Δ.5°C), Demand Level 2 by 2Δ°F (1.1Δ°C), and Demand Level 3 by 4Δ°F (2.2Δ°C). If the occupied heating or cooling setpoints change, the (effective) demand level setpoints automatically change by the same amount. See *Sequence of Operation* (page 46) for more information.

Point Name/Description	Default			
	Range: -40 to 245 °F (-40 to 118.3 °C)			
	Occupied	Demand Level		
1		2	3	
Occupied Heating – Green The heating setpoint the controller maintains while in occupied mode.	D: 70 °F (21.1 °C)	69 °F (20.5 °C)	68 °F (20 °C)	66 °F (18.9 °C)
	R: 40 to 90 °F (4.4 to 32.2 °C)			

Point Name/Description	Default			
	Range: -40 to 245 °F (-40 to 118.3 °C)			
	Occupied	Demand Level		
1		2	3	
Occupied Cooling – Green The cooling setpoint the controller maintains while in occupied mode.	D: 76 °F (24.4 °C) R: 55 to 99 °F (12.7 to 37.2 °C)	77 °F (25 °C)	78 °F (25.5 °C)	80 °F (26.6 °C)
Occupied Heating 1 – Light Blue The space temperature must be less than the Occupied Heating 1 setpoint for the VVT Master to consider the zone a heating caller in a linked system. In a single-zone application, the heating requirement begins as soon as the space temperature falls below the Occupied Heating setpoint. We recommend that the Occupied Heating 1 value be set no less than 0.5Δ °F (.27Δ °C) below the Occupied Heating setpoint.	69 °F (20.5 °C)	68 °F (20 °C)	67 °F (19.4 °C)	65 °F (18.3 °C)
Occupied Heating 2 – Dark Blue The space temperature must be less than the Occupied Heating 2 setpoint to generate a low space temperature alarm. We recommend that this value be set no less than 0.5Δ °F (.27Δ °C) below the Occupied Heating 1 setpoint.	67 °F (19.4 °C)	66 °F (18.9 °C)	65 °F (18.3 °C)	63 °F (17.2 °C)
Occupied Cooling 1 – Yellow The space temperature must be greater than the Occupied Cooling 1 setpoint for the VVT Master to consider the zone a cooling caller in a linked system. In a single-zone application, the cooling requirement begins as soon as the space temperature exceeds the Occupied Cooling setpoint. We recommend that the Occupied Cooling 1 value be set no less than 0.5Δ °F (.27Δ °C) above the Occupied Cooling setpoint.	77 °F (25 °C)	78 °F (25.5 °C)	79 °F (26.1 °C)	81 °F (27.2 °C)
Occupied Cooling 2 – Orange The space temperature must be greater than the Occupied Cooling 2 setpoint to generate a high space temperature alarm. We recommend that this value be set no less than 0.5Δ °F (.27Δ °C) above the Occupied Cooling 1 setpoint.	79 °F (26.1 °C)	80 °F (26.6 °C)	81 °F (27.2 °C)	83 °F (28.3 °C)

Unoccupied Setpoints	
Point Name/Description	Default/Range
Unoccupied Heating – Gray The heating setpoint the controller maintains while in unoccupied mode.	D: 55 °F (12.7 °C) R: 40 to 90 °F (4.4 to 32.2 °C)
Unoccupied Cooling – Gray The cooling setpoint the controller maintains while in unoccupied mode.	D: 90 °F (32.2 °C) R: 45 to 99 °F (7.2 to 37.2 °C)

<p>Unoccupied Heating 1 – Light Blue The space temperature must be less than the Unoccupied Heating 1 setpoint for the VVT Master to consider the zone an unoccupied heating caller in a linked system. In a single-zone application, the unoccupied heating requirement begins as soon as the space temperature falls below the Unoccupied Heating setpoint. We recommend that the Unoccupied Heating 1 value be set no less than 0.5Δ °F (.27Δ °C) below the Unoccupied Heating setpoint.</p>	<p>D: 54 °F (12.2 °C) R: 40 to 90 °F (4.4 to 32.2 °C)</p>
<p>Unoccupied Heating 2 – Dark Blue The space temperature must be less than the Unoccupied Heating 2 setpoint to generate an unoccupied low space temperature alarm. We recommend that this value be set no less than 0.5Δ °F (.27Δ °C) below the Unoccupied Heating 1 setpoint.</p>	<p>D: 52 °F (11.1 °C) R: 40 to 90 °F (4.4 to 32.2 °C)</p>
<p>Unoccupied Cooling 1 – Yellow The space temperature must be greater than the Unoccupied Cooling 1 setpoint for the VVT Master to consider the zone an unoccupied cooling caller in a linked system. In a single-zone application, the unoccupied cooling requirement begins as soon as the space temperature exceeds the Unoccupied Cooling setpoint. We recommend that the Unoccupied Cooling 1 value be set no less than 0.5Δ °F (.27Δ °C) above the Unoccupied Cooling setpoint.</p>	<p>D: 91 °F (32.7 °C) R: 45 to 99 °F (7.2 to 37.2 °C)</p>
<p>Unoccupied Cooling 2 – Orange The space temperature must be greater than the Unoccupied Cooling 2 setpoint to generate an unoccupied high space temperature alarm. We recommend that this value be set no less than 0.5Δ °F (.27Δ °C) above the Unoccupied Cooling 1 setpoint.</p>	<p>D: 93 °F (33.9 °C) R: 45 to 99 °F (7.2 to 37.2 °C)</p>

Point Name/Description	Default/Range
<p>Heating Capacity – Used for Optimal Start, this is the rate at which the space temperature changes when the heating system runs at full capacity to maintain designed occupied heating setpoint.</p>	<p>D: 3Δ °F (1.6Δ °C)/hr R: 0 to 120Δ °F (0 to 66.6Δ °C)/hr</p>
<p>Heating Design Temp – The geographically-based outdoor air temperature at which the heating system must run constantly to maintain comfort. This information is available in ASHRAE publications and most design references.</p>	<p>D: 0 °F/C R: -100 to 150 °F (-73.3 to 65.5 °C)</p>
<p>Cooling Capacity – Used for Optimal Start, this is the rate at which the space temperature changes when cooling system runs at full capacity to maintain designed occupied cooling setpoint.</p>	<p>D: 3Δ °F (1.6Δ °C)/hr R: 0 to 140Δ °F (0 to 77.7Δ °C)/hr</p>
<p>Cooling Design Temp – The geographically-based outdoor air temperature at which the cooling system must run constantly to maintain comfort. This information is available in ASHRAE publications and most design references.</p>	<p>D: 100 °F (37.7 °C) R: -100 to 150 °F (-73.3 to 65.5 °C)</p>

Hysteresis – The desired difference between the temperature at which the zone color changes as the space temperature departs from the acceptable range between the heating and cooling setpoints (green) into the Cooling 1 (yellow) or Heating 1 (light blue) and the temperature at which the zone color changes back to the acceptable range between the heating and cooling setpoints.


D: $.5\Delta^{\circ}\text{F}$ ($.27\Delta^{\circ}\text{C}$)

R: 0.2 to $1.0\Delta^{\circ}\text{F}$
($.1$ to $.5\Delta^{\circ}\text{C}$)

For example, the following graph shows the zone color that results as the space temperature departs from and returns to the acceptable range in a zone with the following settings:

- Color Change Hysteresis = $.5\Delta^{\circ}\text{F}$ ($.27\Delta^{\circ}\text{C}$) (applies as the temperature returns to the acceptable range)
- Occupied cooling setpoint = 76°F (24.4°C)
- Occupied heating setpoint = 70°F (21.1°C)

NOTE The values in the graph below are Fahrenheit.

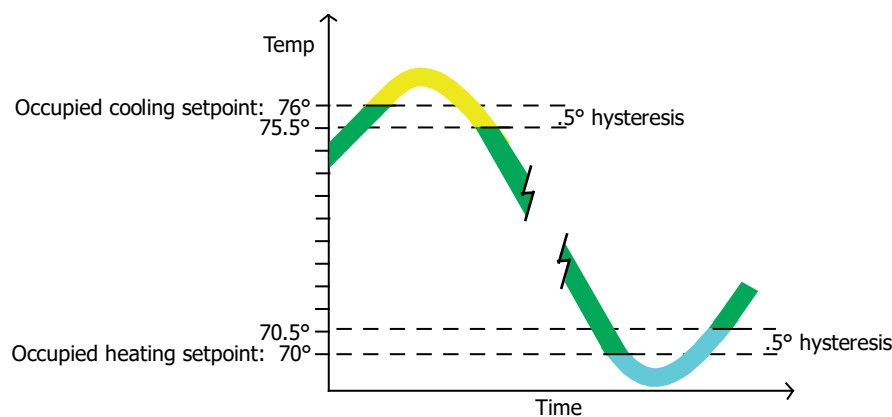

Learning Adaptive Optimal Start

Red	DkBlue	LtBlue	Green or SpGrn	Yellow	Orange	Red
0.1900	0.1300	0.0600	0.0600	0.0600	0.1300	0.1900

When the Learning Adaptive Optimal Start algorithm runs, the learned heating capacity or learned cooling capacity values are adjusted based on the color that is achieved when occupancy begins. The adjustment amounts for each color are displayed in the thermographic color fields (shown above with English default values).

Point Name/Description	Range	
	English	Metric
Red – The amount the zone’s learned heating capacity is adjusted when the Learning Adaptive Optimal Start algorithm runs, when the zone’s thermographic color at occupancy is red.	D: 0.1900 R: 0 to 1	.1055
DkBlue – The amount the zone’s learned heating capacity is adjusted when the Learning Adaptive Optimal Start algorithm runs, when the zone’s thermographic color at occupancy is dark blue.	D: 0.1300 R: 0 to 1	.0722
LtBlue – The amount the zone’s learned heating capacity is adjusted when the Learning Adaptive Optimal Start algorithm runs, when the zone’s thermographic color at occupancy is light blue.	D: 0.0600 R: 0 to 1	.0333

Point Name/Description	Range	
	English	Metric
Green – The amount the zone’s learned heating capacity is adjusted when the Learning Adaptive Optimal Start algorithm runs, when the zone’s thermographic color at occupancy is green.	D: 0.0600 R: 0 to 1	.0333
SpGrn – The amount the zone’s learned cooling capacity is adjusted when the Learning Adaptive Optimal Start algorithm runs, when the zone’s thermographic color at occupancy is green.	D: 0.0600 R: 0 to 1	.0333
Yellow – The amount the zone’s learned cooling capacity is adjusted when the Learning Adaptive Optimal Start algorithm runs, when the zone’s thermographic color at occupancy is yellow.	D: 0.0600 R: 0 to 1	.0333
Orange – The amount the zone’s learned cooling capacity is adjusted when the Learning Adaptive Optimal Start algorithm runs, when the zone’s thermographic color at occupancy is orange.	D: 0.1300 R: 0 to 1	.0722
Red – The amount the zone’s learned cooling capacity is adjusted when the Learning Adaptive Optimal Start algorithm runs, when the zone’s thermographic color at occupancy is red.	D: 0.1900 R: 0 to 1	.1055


Heating – (Occupied or Unoccupied, depending on mode) The current programmed Heating setpoint adjusted by any offset that may be in effect.	R: 0 to 120°F (-17.7 to 48.9°C)
Cooling – (Occupied or Unoccupied, depending on mode) The current programmed Cooling setpoint adjusted by any offset that may be in effect.	R: 0 to 120°F (-17.7 to 48.9°C)
Learned cooling capacity – The cooling capacity learned by Learning Adaptive Optimal Start that is required to bring the space temperature down to the occupied cooling setpoint prior to the occupied time.	R: _ °F/C
Learned heating capacity – The heating capacity learned by Learning Adaptive Optimal Start that is required to bring the space temperature up to the occupied heating setpoint prior to the occupied time.	R: _ °F/C
Min Setpoint Separation – Minimum separation that must be maintained between the heating and cooling setpoints.	R: _ °F/C
Optimal Start – The number of hours prior to occupancy, at which the Optimal Start function may begin to adjust the effective setpoints to achieve the occupied setpoints by the time scheduled occupancy begins. Enter 0 to disable Optimal Start. NOTE Optimal Start is automatically disabled when occupancy is controlled by a network write to the controller’s keypad_ovrde variable. (Display name: BAS On/Off , in Properties > Control Program > Maintenance > Occupancy > BAS On/Off , or when utilizing Airside Linkage or the System Occupancy Network Variable .)	D: 1 hr R: 0 to 4 hrs

<p>Optimal Start Type – The method used to change from unoccupied to occupied setpoint.</p> <p>Options: None* – Unit will not change to occupied setpoint until the scheduled time or the unit goes into an occupied mode. Setpoints do not ramp, but change immediately from unoccupied to occupied values.</p> <p>Temp Compensated* – Unit changes to occupied setpoints at a variable time prior to the occupied time, which is calculated by the current difference between space temperature and the appropriate heating or cooling setpoint. At that time, the setpoints do not ramp, but change immediately from unoccupied to occupied values.</p> <p>Learning Adaptive Start – Unit gradually changes to occupied setpoints by adjusting the unoccupied setpoints over a specified period of time to achieve the occupied setpoint by the time scheduled occupancy begins.</p>	<p>D: Temperature Compensated</p> <p>R: None Temperature Compensated Learning Adaptive</p>
<p>Heat Start K factor (min/deg) – If Optimal Start Type is Temp Compensated, this is the time in minutes per degree that the equipment starts before the occupied period when the space temperature is below the occupied heating setpoint (including any setpoint offset).</p>	<p>D: 15 min/deg 27 min/deg (metric)</p> <p>R: 0 to 99</p>
<p>Cool Start K factor (min/deg) – If Optimal Start Type is Temp Compensated, this is the time in minutes per degree that the equipment starts before the occupied period when the space temperature is above the occupied cooling setpoint (including any setpoint offset).</p>	<p>D: 15 min/deg 27 min/deg (metric)</p> <p>R: 0 to 99</p>
<p>Standby Offset – The value by which the occupied setpoints are expanded when the space occupancy sensor indicates that a zone is unoccupied. If 0, the unoccupied setpoints are used.</p>	<p>D: 0°F/C</p> <p>R: 0 to 15Δ°F (0 to 8.3Δ°C)</p>
<p>Occupied RH Control Setpoint – If Optional Sensor Type is set to RH Sensor and RH Control is set to Enable, this is the relative humidity setpoint during occupancy. The air source mode must be Cool or Vent and the terminal mode must be Cooling or Vent before the dehumidification function can be active.</p>	<p>D: 60%rh</p> <p>R: 0 to 100%rh</p>
<p>DCV Start Ctrl Setpoint – If Optional Sensor Type is set to IAQ Sensor and DCV Control is set to Enable, this is the value that the CO2 sensor must exceed to begin the DCV control function. This value should be set to approximately 75 ppm above the outdoor air CO2 level.</p>	<p>D: 500ppm</p> <p>R: 0 to 9999 ppm</p>
<p>DCV Max Ctrl Setpoint – If Optional Sensor Type is set to IAQ Sensor and DCV Control is set to Enable, this is the value that the CO2 level must exceed to begin the IAQ function to control the damper to DCV MAX Vent Airflow.</p>	<p>D: 1000ppm</p> <p>R: 0 to 9999 ppm</p>
<p>Parallel Fan ON Value – If Terminal Type is Parallel Fan and the zone does not require heating, when the zone’s target damper position decreases below this value, the parallel fan turns on to increase airflow, ventilation, and prevent cold air dumping into the zone. If the zone’s target damper position rises above this value by more than 1%, the parallel fan turns off. We recommend this value be set to approximately 10% above the Occupied Min Damper Position setpoint. Set to 0 to disable this function.</p>	<p>D: 25%</p> <p>R: 0 to 100%</p>


Setpoints for ZS and wireless sensors

Setpoints for ZS and wireless sensors

To configure setpoint properties for ZS or wireless sensors, **Ctrl+click** anywhere on the **Zone Setpoints** graph at the top of the **Setpoints** section in order to access the **Properties** microblock popup.

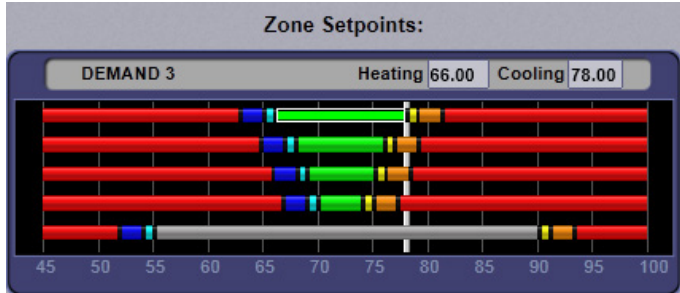

In the popup, on the **Properties > Sensor** tab, configure ZS or wireless sensors for **Setpoint Adjust**.

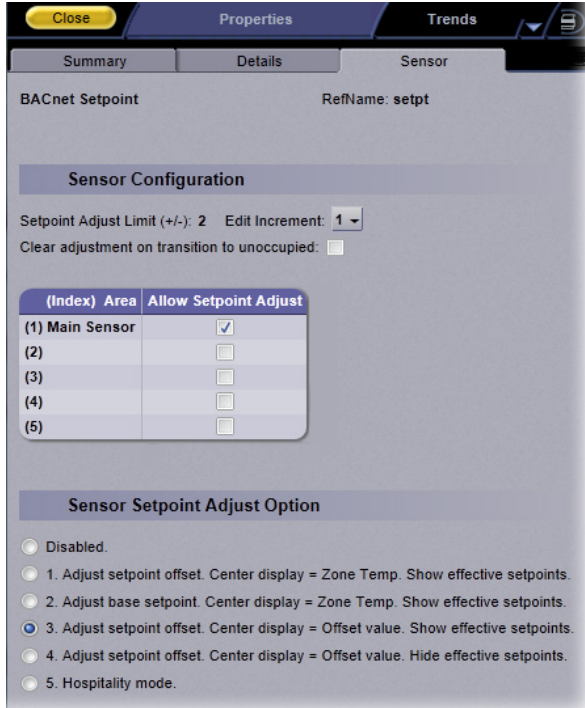

Edit Increment – Amount of offset in degrees for each press of the up or down arrows on the ZS or wireless sensor for setpoint adjustment.

D: 1
R: 0.1
0.5
1

Allow Setpoint Adjust – Check to allow setpoint adjustments on the specified ZS or Carrier wireless sensor.

D: (1) enabled
R: disabled/enabled

Sensor Setpoint Adjust Option – Check to select the ZS or wireless setpoint adjustment display.

D: 3

Alarm Configuration

Navigation: i-Vu® / Field Assistant: **Properties > Control Program > Configuration > Alarm Configuration**

Point Name/Description	Default/Range
Space Temperature Alarm	
Occupied Alarm Hysteresis – This value is added to the effective cooling setpoints and subtracted from the effective heating setpoints as output from the Setpoint microblock. These values establish the occupied high and low limits that the space temperature must exceed before an occupied SPT alarm is generated. The alarm returns to normal when the space temperature drops below the high effective setpoint or rises above the low effective setpoint.	D: 5Δ °F (2.7Δ °C) R: 0 to 20Δ °F (0 to 11.1Δ °C)
Alarm Delay (min/deg) – Determines the amount of delay before an occupied space temperature alarm is generated when the controller transitions to the occupied mode. The delay time equals this value multiplied by the difference between the sensor temperature and occupied alarm setpoint plus 15 minutes.	D: 10 min/deg R: 18 min/deg (metric) 0 to 30 minutes
Unoccupied Low SPT Alarm Limit – The value that the space temperature must drop below to generate a Space Temperature Alarm in the unoccupied mode. There is a fixed hysteresis of 1Δ °F (.5Δ °C) for return to normal.	D: 45 °F (7.2 °C) R: 35 to 90 °F (1.6 to 32.2 °C)
Unoccupied High SPT Alarm Limit – The value that the space temperature must exceed to generate a Space Temperature Alarm in the unoccupied mode. There is a fixed hysteresis of 1Δ °F (.5Δ °C) for return to normal.	D: 95 °F (35 °C) R: 45 to 100 °F (7.2 to 37.7 °C)
Supply Air Temperature Alarm	
Low SAT Alarm Limit – The value that the supply air temperature must drop below to generate a Supply Air Temp Alarm . There is a fixed hysteresis of 3Δ °F (1.6Δ °C) for return to normal.	D: 45 °F (7.2 °C) R: 15 to 90 °F (-9.4 to 32.2 °C)
High SAT Alarm Limit – The value that the supply air temperature must exceed to generate a Supply Air Temp Alarm . There is a fixed hysteresis of 3Δ °F (1.6Δ °C) for return to normal. This should be set at least 15Δ °F (8.3Δ °C) higher than the Maximum Heating SAT .	D: 120 °F (48.9 °C) R: 90 to 175 °F (32.2 to 79.4 °C)
Space Humidity Alarm	
Occupied High RH Alarm Limit – The value that the relative humidity sensor must exceed to generate a Space Humidity Alarm in the occupied mode if RH Control is set to Enable . There is a fixed hysteresis of 5%rh for return to normal.	D: 100%rh R: 45 to 100%rh
Alarm Delay (min/%RH) – Determines the amount of delay before an occupied RH alarm is generated when the controller transitions to the occupied mode. The delay time equals this value multiplied by the difference between the sensor RH value and the occupied RH setpoint plus 15 minutes.	D: 5 minutes R: 0 to 30 minutes
Unocc High RH Alarm Limit – The value that the relative humidity sensor must exceed to generate a Space Humidity Alarm in the unoccupied mode if RH Control is set to Enable . There is a fixed hysteresis of 5%rh for return to normal.	D: 100%rh R: 45 to 100%rh
IAQ/Ventilation Alarm	

Point Name/Description	Default/Range
Occupied High CO2 Alarm Limit – The value that the CO ₂ sensor must exceed to generate an Indoor Air Quality Alarm in the occupied mode if DCV Control is set to Enable . There is a fixed hysteresis of 100ppm for return to normal.	D: 1100ppm R: 0 to 9999 ppm
Alarm Delay (min/ppm) – The fractional portion of a minute used to determine the amount of delay before an indoor air quality alarm is generated when the controller transitions to the occupied mode. The delay time equals this value multiplied by the difference between the sensor CO ₂ value and the setpoint plus 15 minutes.	D: 0.25 minutes R: 0.10 to 1.00 minutes
Heating Valve Alarms	
Smart Valve Alarm Diff – The difference between the Smart Valve output command and the feedback input must be greater than this value for 1 minute to trigger the alarm.	D: 5% R: 0 to 100%
Heating Valve Cycling Alarm – Alarm occurs if the input cycles more than __ times in a __ min period. NOTE The input must reverse by more than __ to be counted. __ times D: 15 R: 0 to 999 in a __ min period D: 60 minutes R: 0 to 999 minutes The input must reverse by more than __ to be counted D: 5% R: 0 to 99%	
Heating Valve Failure Alarm – Alarm occurs if discharge air temp does not rise __ Δ °F within __ min after the heating coil valve command is > __ % Open. must not rise __ °F D: 2.5Δ °F (1.4Δ °C) R: 0 to 99Δ °F (0 to 55Δ °C) within __ min D: 15 minutes R: 0 to 999 minutes after the heating coil valve command is > __%Open. D: 80% Open R: 0 to 100% Open	
Alarms Displayed on ZS Sensor	
Space Temperature Alarm – If set to display, shows the alarm indicator on the communicating zone sensors, if the Space Temperature alarm is active.	D: Ignore R: Ignore/Display
Supply Air Temp Alarm – If set to display, shows the alarm indicator on the communicating zone sensors, if the Supply Air Temp alarm is active.	D: Ignore R: Ignore/Display
Dirty Filter Alarm – If set to display, shows the alarm indicator on the communicating zone sensors, if a Filter alarm is active.	D: Display R: Ignore/Display

Point Name/Description	Default/Range
Space High Humidity Alarm – If set to display, shows the alarm indicator on the communicating zone sensors with display, if the Space Relative Humidity alarm is active.	D: Ignore R: Ignore/Display
Space High CO2 Alarm – If set to display, shows the alarm indicator on the communicating zone sensors with display if the Indoor Air Quality Alarm is in alarm.	D: Ignore R: Ignore/Display
Maintenance Displayed on ZS Sensor	
Linkage Fault – If set to display, shows the maintenance indicator on the ZS Pro sensor if the Airside Linkage is in a Fault condition.	D: Ignore R: Ignore/Display
Net OAT Fault – If set to display, shows the maintenance indicator on the ZS Pro sensor if the Network Outside Air is not valid.	D: Ignore R: Ignore/Display
SPT Sensor Fault – If set to display, shows the maintenance indicator on the ZS Pro sensor if the space temperature sensor is not valid.	D: Ignore R: Ignore/Display

Service Configuration

Navigation: i-Vu® / Field Assistant: **Properties > Control Program > Configuration > Service Configuration**

Point Name/Description	Default/Range
Terminal Type – The type of zone terminal that the controller is installed on.	D: Single Duct R: Single Duct Parallel Series Fan
Damper Size (dia.) – Used by the VVT Master to calculate the weighted average demand. If the zone damper is round, enter its diameter. If rectangular, enter 0.	D: 6.00 in. (15.2 cm) R: 0 to 100.00 in./cm
Damper Area (area) – Used by the VVT Master to calculate the weighted average demand. If the damper is rectangular, enter its area (width x height). If the damper is round, enter 0.	D: 0 sq.in. (cm. sq.) R: 0 to 9999 sq.in. (cm. sq.)
Terminal Fan Airflow – Enter the terminal fan airflow in cfm (liters/second). Used in performance calculations only. Available only on fan-enabled terminal box.	D: 1000 cfm (472 liters/second) R: 0 to 99999 cfm (liters/second)
External Actuator Enable – Enable if the controller's analog output is used for an external high-torque or slave actuator. Enabling this setting disables the output for Modulating Hot Water or Combination reheat functions.	D: Disable R: Disable/Enable

Point Name/Description	Default/Range
<p>Heat Type – The type of supplemental reheat that the zone controller will control. The heat may be used with system heat, depending on the space temperature demand.</p> <p>Options: None – no heat Modulating – ducted or baseboard modulating hot water Two Position – two position hot water Staged EH – ducted or baseboard electric heat Combination – combination baseboard modulating hot water and ducted staged electric heat SCR Electric – modulating control for SCR-type electric heater Modulating Smart Valve – ducted or baseboard modulating hot water using a Smart Valve Combo Smart Valve – combination baseboard modulating hot water using a Smart Valve and ducted staged electric heat</p>	<p>D: None</p> <p>R: None Modulating Two Position Staged EH Combination SCR Electric Modulating Smart Valve Combo Smart Valve</p>
<p>Ducted Heat – Determines whether the zone is using ducted heat or baseboard. If Heat Type is Combination, set this field to Yes for ducted heat.</p>	<p>D: Yes</p> <p>R: No/Yes</p>
<p>Number of Heat Stages – The number heat stages when the Heat Type is Staged EH. Fan powered terminals are limited to no more than 2 stages.</p>	<p>D: Two stages</p> <p>R: One stage Two stages Three stages</p>
<p>Valve Type – The hot water valve's position with no power applied to the valve.</p>	<p>D: NC</p> <p>R: NC/NO (normally closed/normally open)</p>
<p>Hardwired Sensor – The type of sensor used on the controller's RH/CO2 hardwire input. This setting determines the control channel input function.</p> <p>Options: RH Sensor – Relative humidity for zone dehumidification IAQ Sensor – Indoor air quality for DCV control</p> <p>NOTE RH and IAQ are also available with communicating ZS RH and CO₂ sensors.</p>	<p>D: None</p> <p>R: None RH Sensor IAQ Sensor</p>
<p>RH Control – Enables or disables zone dehumidification control if valid RH sensor values are available.</p>	<p>D: Disable</p> <p>R: Disable/Enable</p>
<p>DCV Control – Enables or disables demand control ventilation control.</p>	<p>D: Disable</p> <p>R: Disable/Enable</p>
<p>Min Setpoint Separation – Minimum separation that must be maintained between the heating and cooling setpoints.</p>	<p>D: 4Δ °F (2.2Δ °C)</p> <p>R: 2 to 10Δ °F (1.1 to 5.5Δ °C)</p>
<p>Occ Override Normal Logic State – The normal state of the controller's Remote Occupancy input. If the input's contact is the same state as the configured state, the controller follows its controlling schedule. If the contact is in the opposite state of the configured state, the controller is forced into the unoccupied mode.</p>	<p>D: Open</p> <p>R: Open/Closed</p>
<p>RH Sensor Min Input Volts – The lowest voltage that should be read from the hardwired relative humidity (RH) sensor.</p>	<p>D: 0.00 V</p> <p>R: 0 to 5.00 V</p>
<p>RH Sensor Max Input Volts – The highest voltage that should be read from the hardwired RH sensor.</p>	<p>D: 5.00 V</p> <p>R: 0 to 5.00 V</p>

Point Name/Description	Default/Range
RH Sensor Value @ Min Volts – The % relative humidity that correlates to the hardwired RH sensor's low voltage reading.	D: 0% R: 0 to 99%
RH Sensor Value @ Max Volts – The % relative humidity that correlates to the hardwired RH sensor's high voltage reading.	D: 100% R: 0 to 100%
CO2 Sensor Min Input Volts – The lowest voltage that should be read from the hardwired CO ₂ sensor.	D: 1.00 V R: 0 to 5.00 V
CO2 Sensor Max Input Volts – The highest voltage that should be read from the hardwired CO ₂ sensor.	D: 5.00 V R: 0 to 5.00 V
CO2 Sensor Value @ Min Volts – The ppm value that correlates to the hardwired CO ₂ sensor's low voltage reading.	D: 0 ppm R: 0 to 9999 ppm
CO2 Sensor Value @ Max Volts – The ppm value that correlates to the hardwired CO ₂ sensor's high voltage reading.	D: 2000 ppm R: 0 to 9999 ppm
PD (Pressure Dependent) Control :	
Damper Motor Travel Time – The actuator's travel time from full closed to full open. This field is fixed at 154 seconds.	D: 154 seconds
Direction Clockwise – If Damper Actuator is set to Built-in actuator , set this field to the damper's position when it rotates clockwise.	D: Close R: Close/Open
Target Damper Position - The current damper position. To override normal control for troubleshooting purposes, select Lock value to and then enter a value. The damper moves to that position until Lock value to checkbox is cleared.	R: 0 to 100%
Auxheat - The current configured Reheat Min Damper Position . To override normal control for reheat troubleshooting purposes, select Lock value to and then enter a value. The damper moves to that position until Lock value to checkbox is cleared.	R: 0 to 100%
Fan – The current value of the fan output relay. To override normal control for troubleshooting purposes, select Lock value to and then enter On or Off . The relay stays in that state until the Lock value to checkbox is cleared.	R: On/Off
Cooling Min Damper Position – The minimum damper position the terminal controls to when the air source mode is Cooling, Vent, or Free Cooling and the space requirements for cooling are at a minimum. We recommend that you set this no lower than 10%.	D: 20% R: 0 to 100%
Cooling Max Damper Position – The maximum damper position the terminal controls to when the air source mode is Cooling, Vent, or Free Cooling and the space requirements for cooling are at a maximum.	D: 100% R: 0 to 100%
Reheat Min Damper Position – For Single Duct units with ducted reheat. Set to the desired damper position at which the reheat will provide optimum performance. This value is compared to the Cooling Min Damper Position value, and the greater of the two values determines the damper position.	D: 45% R: 0 to 100%
Heating Min Damper Position – The minimum damper position the terminal controls to when the air source mode is Heat and the space requirements are at a minimum.	D: 20% R: 0 to 100%

Point Name/Description	Default/Range
Heating Max Damper Position – The maximum damper position the terminal controls to when the air source mode is Heat and the space requirements are at a maximum.	D: 20% R: 0 to 100%
Vent Position – The ventilation damper position the terminal controls to when the air source mode is Vent and the terminal mode is not in the Heat or Cool mode. If Linkage is not active, the zone determines vent mode by verifying that its SAT sensor is between 65 °F (18.3 °C) and 80 °F (26.6 °C).	D: 50% R: 0 to 100%
<p>Test and Balance – Use the following command buttons when commissioning a zone, <i>balancing the system</i> (page 43), replacing the zone controller, or troubleshooting. If Automatic Control is not selected within 4 hours, the controller will resume normal control.</p> <p>Calibrated Damper Close – Forces the damper closed so the 0% damper position can be set.</p> <p>Calibrated Damper Open – Forces the damper to its maximum open position so that the 100% damper position can be set.</p> <p>Cool Max – Forces the damper to its cool maximum position regardless of its current local mode.</p> <p>Cool Min – Forces the damper to its cool minimum position regardless of its current local mode.</p> <p>Automatic Control – Returns the damper to its normal control routines. This must be activated when you finish using any of the other Test and Balance commands.</p> <p>Damper Full Close – Overrides the damper to its full closed position.</p> <p>Heat Max – Forces the damper to its heat maximum position regardless of its current local mode.</p> <p>Heat Min – Forces the damper to its heat minimum position regardless of its current local mode.</p> <p>Reheat Min – Forces the damper to its reheat position regardless of its current local position.</p> <p>Vent – Forces the damper to its ventilation position regardless of its current local mode.</p>	

Sensor Binder / Zone Temp / Zone Humidity / ZS Zone CO2																																																	
<p>Ctrl+click on the name of these properties to access the microblock popup Properties page > Details tab. See below for instructions on configuring your ZS or wireless sensors.</p> <p>See the microblock Help for more detailed explanations.</p>																																																	
<p>Sensor Binder - Use the Associated Sensors table to configure the Rnet to use additional ZS or wireless sensors.</p> <table border="1"> <thead> <tr> <th>Index</th> <th>Area</th> <th>Network Type</th> <th>Address</th> <th>Lock Display</th> <th>Version</th> <th>Status</th> <th>Error</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Main Sensor</td> <td>Rnet ▼</td> <td>1</td> <td><input type="checkbox"/></td> <td></td> <td>Sensor Offline</td> <td>No Comm</td> </tr> <tr> <td>2</td> <td>Sensor 2</td> <td>Unused ▼</td> <td>2</td> <td><input type="checkbox"/></td> <td></td> <td>Sensor Offline</td> <td>None</td> </tr> <tr> <td>3</td> <td>Sensor 3</td> <td>Unused ▼</td> <td>3</td> <td><input type="checkbox"/></td> <td></td> <td>Sensor Offline</td> <td>None</td> </tr> <tr> <td>4</td> <td>Sensor 4</td> <td>Unused ▼</td> <td>4</td> <td><input type="checkbox"/></td> <td></td> <td>Sensor Offline</td> <td>None</td> </tr> <tr> <td>5</td> <td>Sensor 5</td> <td>Unused ▼</td> <td>5</td> <td><input type="checkbox"/></td> <td></td> <td>Sensor Offline</td> <td>None</td> </tr> </tbody> </table> <ul style="list-style-type: none"> Network Type - Set to Rnet Address - Enter the DIP switch settings that are on the additional ZS sensors (up to 5 total) or RnetID assigned to each wireless sensor in SensorBuilder Lock Display - Check to make the sensor display-only 	Index	Area	Network Type	Address	Lock Display	Version	Status	Error	1	Main Sensor	Rnet ▼	1	<input type="checkbox"/>		Sensor Offline	No Comm	2	Sensor 2	Unused ▼	2	<input type="checkbox"/>		Sensor Offline	None	3	Sensor 3	Unused ▼	3	<input type="checkbox"/>		Sensor Offline	None	4	Sensor 4	Unused ▼	4	<input type="checkbox"/>		Sensor Offline	None	5	Sensor 5	Unused ▼	5	<input type="checkbox"/>		Sensor Offline	None	<p>D: (Index) - (1)</p> <p>Network Type - Rnet</p> <p>Address - 1</p>
Index	Area	Network Type	Address	Lock Display	Version	Status	Error																																										
1	Main Sensor	Rnet ▼	1	<input type="checkbox"/>		Sensor Offline	No Comm																																										
2	Sensor 2	Unused ▼	2	<input type="checkbox"/>		Sensor Offline	None																																										
3	Sensor 3	Unused ▼	3	<input type="checkbox"/>		Sensor Offline	None																																										
4	Sensor 4	Unused ▼	4	<input type="checkbox"/>		Sensor Offline	None																																										
5	Sensor 5	Unused ▼	5	<input type="checkbox"/>		Sensor Offline	None																																										

Zone Temp - Configure additional ZS or wireless temperature sensors used on the VVT Zone II.

Sensor Configuration					
Rnet Tag: Zone Temp (1)					
(Index) Area	Use	Raw Value	Calibration	Corrected Value	Status
(1) Main Sensor	<input checked="" type="checkbox"/>	74.35294	0	74.352	None
(2)	<input type="checkbox"/>	0	0	-999.000	No Comm
(3)	<input type="checkbox"/>	0	0	-999.000	No Comm
(4)	<input type="checkbox"/>	0	0	-999.000	No Comm
(5)	<input type="checkbox"/>	0	0	-999.000	No Comm

Combination Algorithm: **Average** Input Smoothing: **None**

- **Use** - Check to include ZS or wireless sensors' value in the **Combined Algorithm** (**Average** is the default).
- **Raw Value** - Displays sensed temperature for each ZS or wireless temperature sensor's address
- **Calibration** - If needed, enter value to adjust the **Corrected Value** from the **Raw Value**, in order to calibrate an individual ZS or wireless sensor's sensed value.
- **Combination Algorithm** - Use **Average**, **Maximum**, or **Minimum** zone temperature to calculate the **Corrected Value** for temperature control.

D: **(Index) Area** - (1) Main Sensor
Use - checked
Calibration - 0
Combination Algorithm - Average
Input Smoothing - None
Show on Sensors - Calculated Value
Display Resolution - 1
COV Increment - .1

Zone Humidity - Configure additional ZS or wireless humidity sensors used on the VVT Zone II.


Sensor Configuration					
Rnet Tag: Zone Humidity (2)					
(Index) Area	Use	Raw Value	Calibration	Corrected Value	Status
(1) Main Sensor	<input type="checkbox"/>	32.772625	0	32.772	None
(2)	<input type="checkbox"/>	0	0	-999.000	No Comm
(3)	<input type="checkbox"/>	0	0	-999.000	No Comm
(4)	<input type="checkbox"/>	0	0	-999.000	No Comm
(5)	<input type="checkbox"/>	0	0	-999.000	No Comm

Combination Algorithm: **Maximum** Input Smoothing: **Medium**

- **Use** - Check to include ZS or wireless sensors' value in the **Combined Algorithm** (**Maximum** is the default).
- **Raw Value** - Displays sensed humidity for each ZS or wireless humidity sensor's address
- **Calibration** - If needed, enter value to adjust the **Corrected Value** from the **Raw Value**, in order to calibrate an individual ZS or wireless sensor's sensed value.
- **Combination Algorithm** - Use **Average**, **Maximum**, or **Minimum** ZS or wireless humidity to calculate the **Corrected Value** for humidity control.

D: **(Index) Area** - (1) Main Sensor
Use - unchecked
Calibration - 0
Combination Algorithm - Maximum
Input Smoothing - None
Show on Sensors - Calculated Value
Display Resolution - 1
COV Increment - 1

ZS Zone CO2 - Configure additional ZS CO₂ sensors used on the VVT Zone II.

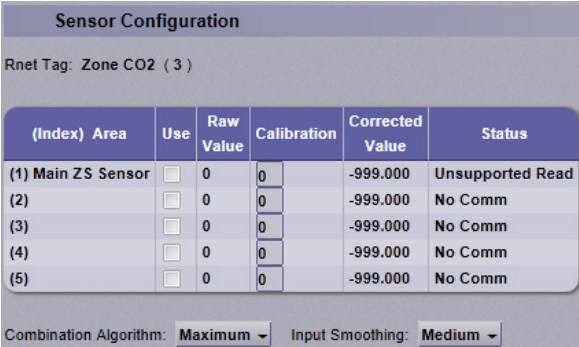

- **Use** - Check to include ZS sensors' value in the **Combined Algorithm** (**Maximum** is the default).
- **Raw Value** -Displays sensed CO₂ for each ZS CO₂ sensor's address
- **Calibration** - If needed, enter value to adjust the **Corrected Value** from the **Raw Value**, in order to calibrate an individual ZS sensor's sensed value.
- **Combination Algorithm** - Use **Average**, **Maximum**, or **Minimum** ZS CO₂ to calculate the **Corrected Value** for CO₂ control.

D: **(Index) Area** - (1) Main ZS Sensor
Use - unchecked
Calibration - 0
Combination Algorithm - Maximum
Input Smoothing - Medium
Show on Sensors - Calculated Value
Display Resolution - 1
COV Increment - 10

WS Battery Strength % — Displays charge strength indicated on the wireless space temperature sensor. If there are multiple wireless sensors, it displays the lowest value.	R: _%
WS Signal Strength % — Displays radio signal strength of the wireless space temperature sensor. If there are multiple wireless sensors, it displays the lowest value.	R: _%
Rnet Sensed Occupancy – Displays occupancy status detected by wireless infrared motion sensor.	R: Off/On
ZS model to show on graphic – Select the ZS model, from the drop-down list, that you want to display on the graphic.	D: ZS Pro model R: None ZS Pro model ZS Base model ZS Plus model
WS model to show on graphic – Select the wireless model, from the drop-down list, that you want to display on the graphic.	D: WS Plus model R: WS Base model WS Plus model WS Pro model
Net Space Temp to show on graphic — Select the type of sensor to display on graphic.	D: Equipment Touch R: Network Temp Equipment Touch
System Space Temperature – The current value of the controlling space temperature received over the network from another source. -999 indicates no value has been received and it will not be used.	R: -50 to 150 °F (-45.5 to 65.5 °C)
System Setpoint Adjustment – The space temperature setpoint adjustment value received over the network.	R: -5 to 5Δ °F (-2.7 to 2.7Δ °C)
System Space RH – The relative humidity received over the network. -999 indicates no value has been received and it will not be used.	R: 2 to 100%

System Space AQ – The indoor air quality received over the network. -999 indicates no value has been received and it will not be used.	R: 300 to 9999 ppm
System Cool Demand Level – The value received over the network and used by the demand limiting function to expand the cooling setpoint.	R: 0 to 3
System Heat Demand Level – The value received over the network and used by the demand limiting function to expand the heating setpoint.	R: 0 to 3
System Outdoor Air Temperature – The OAT received over the network.	R: -50 to 150 °F (-45.5 to 65.5 °C)
System Occupancy – The status of the System Occupancy network point.	D: Unoccupied R: Unoccupied/Occupied

Maintenance

Navigation: i-Vu® / Field Assistant: **Properties > Control Program > Maintenance**

Point Name/Description	Default/Range
Unit	
Occupancy Status – The controller's occupancy status as determined by a network schedule, a local schedule, or a timed override.	R: Unoccupied/Occupied
Temp Compensated Start or Learning Adaptive Start – Indicates the type of optimal start (if any) that is configured and whether the algorithm is active or inactive.	R: Inactive/Active
Space Temp Source – The source of the controlling space temperature value. Options: Sensor Failure – No valid space temperature or sensor status = failed. SPT Sensor – An SPT sensor is connected to the controller's Rnet port. T55/56 – A T55, T56, or T59 sensor is connected to the controller's I/O terminals. Network – A network temperature sensor is bound to the controller's space temperature AV. Airside Linkage – The space temperature from a linked terminal. Locked Value – The controller's space temperature input has been manually locked at a value. ZS Sensor – A ZS sensor is connected to the controller's Rnet port.	R: Sensor Failure SPT Sensor T55/T56 Network Airside Linkage Locked Value ZS Sensor
Setpoint Adjustment – The amount that a user has adjusted the setpoints on a zone sensor.	R: -20 to 20Δ °F (-11.1 to 11.1Δ °C)
Effective Heat Setpoint – The current heating setpoint. May include offsets from configured occupied/unoccupied setpoints resulting from Optimal Start to Demand Limit .	R: _ °F/C
Effective Cool Setpoint – The current cooling setpoint. May include offsets from configured occupied/unoccupied setpoints resulting from Optimal Start to Demand Limit .	R: _ °F/C

Point Name/Description	Default/Range
Relative Humidity Source – The source of the relative humidity value.	R: N/A Local Network Linkage Locked Value ZS Sensor
IAQ Source – The source of the indoor air quality value.	R: N/A Local Network Linkage Locked Value ZS Sensor
Outdoor Air Temperature Source – The source of the outdoor air temperature.	R: N/A Local Network Linkage Locked Value
Cooling Demand Level – The system cool demand level received over the network.	R: 0 to 3
Heating Demand Level – The system heat demand level received over the network.	R: 0 to 3
Heat Delay – The status of the terminal heat delay.	R: Inactive/Active
Remaining Heat Delay – If Heat Delay is Active , this is the remaining delay time.	R: 0 to 60 minutes
Calculated DCV Damper Position – If the controller is in IAQ Override mode, this is the calculated minimum damper position that will be maintained to satisfy the mode.	R: 0 to 100%
Calculated Dehumidify Dmpr Position – If the controller is in Dehumidify mode, this is the calculated minimum damper position that will be maintained to satisfy the mode.	R: 0 to 100%
Reset Filter Alarm – Set this to On to reset an active Filter Alarm and restart the Filter Service Alarm Timer . After the alarm returns to normal, this automatically changes to Off .	D: Off R: On/Off
Occupancy Contact State - The physical state of the Remote input.	R: Open/Closed
Cooling BTU's – Current Cooling Energy being delivered to the space.	R: 0 to 99999 BTU (0 to 99999 KJoules)
Heating BTU's – Current Heating Energy being delivered to the space.	R: 0 to 99999 BTU (0 to 99999 KJoules)
Occupancy	
BAS On/Off – Determines the occupancy state of the controller and can be set over the network by another device or third party BAS. Options: Inactive – Occupancy is determined by a configured schedule. Occupied – The controller is always in the occupied mode. Unoccupied – The controller is always in the unoccupied mode. NOTE If BAS On/Off is set to either Unoccupied or Occupied , the Optimal Start routine is automatically disabled.	D: Inactive R: Inactive Occupied Unoccupied
Schedules – The controller's occupancy status based on the local schedule.	R: Occupied/Unoccupied

Point Name/Description	Default/Range
Pushbutton Override – Active indicates if a user pushed the sensor's override button to override the occupancy state.	R: Off/Active
Override Time Remaining – The amount of time remaining in an override period.	R: 0 to 480 minutes
Occupancy Contact Status – The physical state of the controller's Remote input.	R: Inactive Active Unoccupied/Stdby
Global Occupancy – The System Occupancy network input's current state.	D: Unoccupied R: Unoccupied/Occupied

Local BACnet Schedule	R: Off/On
Configure ZS Sensors by setting the following options in the Local BACnet Schedule microblock popup. Click Local BACnet Schedule to access the microblock popup Properties page > Details tab. See the microblock Help for more detailed explanations.	
Sensor Configuration	
Allow Force Unoccupied: – Check to allow a user to save energy by forcing the zone into an unoccupied schedule on the ZS sensor. The user does this by holding the sensor's On/Off button for at least 3 seconds. This forced state remains in effect until the schedule transitions to unoccupied or until a user presses the sensor's On/Off button again.	D: Enabled R: Disabled/Enabled
Force Unoccupied without Delay: – Check to allow a user to force a zone to unoccupied immediately instead of the normal 3-second delay. NOTE This option is not available if Allow TLO Set During Occupied is checked.	D: Enabled R: Disabled/Enabled
Timed Local Override	
Increment: – Minutes that the microblock adds to the zone's occupied time for each click of the zone's local override button or switch.	D: 30:00 mm:ss
Maximum Duration: – Maximum value (up to 960 minutes) the microblock outputs, regardless of additional pulses from the controller's input.	D: 60:00 mm:ss R: 0 to 960:00 mm:ss

Environmental Index	
Environmental Index (EI) – Initial Occupied value is 100%. A value of 0% means the zone is Unoccupied . If the space temperature deviates from Effective Heat Setpoint and Effective Cool Setpoint range, the value is derated. EI supports an optional RH and/or CO ₂ sensor. The RH and/or CO ₂ values could also derate an EI.	R: 0 to 100%
EI Time Satisfied – Percentage of Occupied time during which a zone maintains an EI of 70% or higher.	R: 0 to 100%
Weighted EI – Determines the priority of a zone in an EI roll-up, which must be completed using a different control program.	R: 0 to 100000.0
EI Total Weight – Current EI Weighting Factor used to scale the Weighted EI .	R: 0 to 1000.0

<p>EI Decreased By – Source(s) of an EI value reduction.</p> <p>Options:</p> <p>Temp – EI decreased by Space Temperature</p> <p>Temp & RH – EI decreased by Space Temperature and Relative Humidity</p> <p>Temp, RH, & CO2 – EI decreased by Space Temperature, Relative Humidity, and CO2</p> <p>RH – EI decreased by Relative Humidity</p> <p>RH & CO2 – EI decreased by Relative Humidity and CO2</p> <p>CO2 – EI decreased by CO2</p> <p>Temp & CO2 – EI decreased by Space Temperature and CO2</p> <p>None – No source(s) decreasing Environmental Index value</p>	<p>R: Temp</p> <p>Temp & RH</p> <p>Temp, RH, & CO2</p> <p>RH</p> <p>RH & CO2</p> <p>CO2</p> <p>Temp & CO2</p> <p>None</p>
<p>EI Space Temp Setpoint Tolerance – Expands the ideal heating and cooling setpoint range for EI temperature sensitivity.</p>	<p>D: 0.5Δ °F (.27Δ °C)</p> <p>R: 0 to 5Δ °F (0 to 2.7Δ °C)</p>
<p>EI Humidity Low Limit – Setpoint value that relative humidity must drop below in order to decrease an EI Value.</p>	<p>D: 30%</p> <p>R: 0 to 100%</p>
<p>EI Weighting Factor – Creates a weighted average of a zone EI value by indicating the priority of that zone in an EI roll-up. A value of 0 disables the zone from an EI roll-up.</p>	<p>D: 1</p> <p>R: 0 to 1000.0</p>

Alarms

Navigation: i-Vu® / Field Assistant: **Properties > Control Program > Alarms**

Point Name/Description	Range
Space Temperature Alarm – Indicates if the space temperature exceeds the high or low alarm limit.	R: Normal/Alarm
Alarming Temperature – Indicates the space temperature value that caused the space temperature alarm. This value is only displayed when the Space Temperature alarm (above) is in Alarm .	R: -56 to 245 °F (-48.9 to 118.3 °C)
Alarm Limit Exceeded – Indicates the value of the space temperature alarm limit that caused the space temperature alarm condition. Value is only displayed when the Space Temperature alarm (above) is in Alarm .	R: -56 to 245 °F (-48.9 to 118.3 °C)
Space Temp Sensor – Indicates if the space temperature sensor fails.	R: Normal/Alarm
Wireless Battery Strength Alarm – Indicates one of the configured wireless space temperature sensors is displaying low charge strength.	R: Normal/Alarm
Wireless Signal Strength Alarm – Indicates one of the configured wireless space temperature sensors is displaying low radio signal strength.	R: Normal/Alarm
ZS/WS Sensor Configuration – Indicates if the ZS or wireless space temperature sensor is not configured correctly.	R: Normal/Alarm
Indoor Air Quality – Indicates if the occupied CO ₂ level exceeds the Occupied High CO2 Alarm Limit .	R: Normal/Alarm
Supply Air Temperature – Indicates if the supply air temperature exceeds the high temperature alarm limit or drops below the low temperature alarm limit.	R: Normal/Alarm

Point Name/Description	Range
Filter – Indicates if the filter's runtime hours exceeds the runtime alarm limit.	R: Clean/Dirty
Space Relative Humidity – Indicates if the relative humidity exceeds the high RH alarm limit.	R: Normal/Alarm
Network OAT - Indicates if the controller is not receiving a valid OAT value over the network.	R: Normal/Alarm
Airside Linkage Status – If the controller is the VVT Master, Alarm indicates that it lost Linkage communications with the air source. If the controller is a slave, Alarm indicates that it lost Linkage communications with the VVT master.	R: Normal/Alarm
Smart Valve Alarm – Indicates if the Smart Valve fails.	R: Normal/Alarm
Heat Valve Cycling – Indicates if the heating valve exceeds the limit of cycles per period.	R: Normal/Alarm
Heat Valve Fail – Indicates if the heating valve fails.	R: Normal/Alarm

Linkage


Navigation: i-Vu® / Field Assistant: **Properties > Equipment > Linkage**

Point Name/Description	Default/Range
Airside Linkage	
Click Linkage Collector/Linkage Provider to access the microblock popup's Summary and Details tabs. See the microblock popup's Help for more detailed explanations.	
Linkage Collector – Set the Number of Providers to the total number of controllers in the linked system, including the bypass and VVT Master.	D: 1 R: 1 to 32
Linkage Provider – Enter either the MS/TP Network Number and MAC Address or IP Network Number and IP Address of the linked Air Source controller. Network Number Address	D: 0 R: 0 to 65535 D: 0 R: 0 to 99
NOTE If you change the Network Number or Address , you must use the i-Vu® application or Field Assistant to cycle power to the controller for the changes to take effect.	
Airside Linkage Status – If Active , the controller is part of a linked system. If Not Active , the controller is a stand-alone device.	R: Not Active/Active

Point Name/Description	Default/Range
<p>Linkage Zone Type – Select whether the controller is a Master or a slave.</p> <p>Select VAV Master if the controller is the Master or a sub-master in a VAV application.</p> <p>Select VVT Master only if the controller is the Master in a VVT application. VVT applications do not support sub-masters.</p>	<p>D: Slave</p> <p>R: Slave VVT Master VAV Master</p>
<p>Inhibit Heating Call from this zone? - If Yes, the VVT Master ignores this controller as a heating caller.</p>	<p>D: No</p> <p>R: No/Yes</p>
<p>Active Heating Caller? – Displays if this zone is currently an active heat caller for the system.</p>	<p>D: Yes</p> <p>R: No/Yes</p>
<p>Inhibit Cooling Call from this zone? - If Yes, the VVT Master ignores this controller as a cooling caller.</p>	<p>D: No</p> <p>R: No/Yes</p>
<p>Active Cooling Caller? – Displays if this zone is currently an active cooling caller for the system.</p>	<p>D: Yes</p> <p>R: No/Yes</p>
<p>Linkage Callers – The minimum number of zones required to make the air source go into heating or cooling mode. 1 is typical for systems with 8 zones or less. For larger systems, increase the number by 1 for each 6 zones. For example, 3 linkage callers for a 20 zone system.</p>	<p>D: 1</p> <p>R: 1 to 32</p>
<p>System Mode Reselect Timer (minutes) – Applies only to a VVT master. Defines how long the system continues to operate in the current mode before it reassesses all zones while the current demand is still active.</p>	<p>D: 30</p> <p>R: 10 to 120</p>
<p>Linkage RH Type – Determines if the VVT or VAV Master sends to the air source the average or maximum values of all linked zone controllers that have a relative humidity (RH) sensor.</p>	<p>D: Avg</p> <p>R: Avg/Max</p>
<p>Linkage IAQ Type – Determines if the Master controller sends to the air source the average or maximum values of all linked zone controllers that have a CO₂ sensor for DCV and IAQ control.</p>	<p>D: Max</p> <p>R: Avg/Max</p>
<p>Air Source Mode – If Airside Linkage Status is Active, this is the current mode of the linked air source. If Airside Linkage Status is Not Active, this is the mode of the air source as determined by the zone controller's SAT sensor.</p>	<p>R: Off Warmup Heat Cool Freecool Pressure Evac Vent</p>
<p>Air Source Supply Air Temp – Displays the air source's SAT when Airside Linkage Status is Active.</p>	<p>R: -56 to 245°F (-48.9 to 118.3°C)</p>
<p>Air Source Static Pressure – Displays the air source's supply static pressure when Airside Linkage Status is Active.</p>	<p>R: 0 to 5.0 in wc (0 to 1.245 kPa)</p>
<p>Air Source Outdoor Air Temp – Displays the air source's OAT when Airside Linkage Status is Active.</p>	<p>R: -56 to 245°F (-48.9 to 118.3°C)</p>

I/O Points

Navigation: i-Vu® / Field Assistant: **Properties > I/O Points**

 **WARNINGS**

- Do not change the **Value, Offset/Polarity, Exp:Num, I/O Type, Sensor/Actuator Type, Min/Max, or Resolution** I/O configuration parameter for the points listed below. Changing these parameters could cause improper control and/or equipment damage.
- Use extreme caution if locking a point as this may also cause improper control and/or equipment damage.

Point Name/Description	Default/Range
SPT Sensor/Zone Temp SPT Sensor - (For the SPT Standard, SPT Plus, and SPT Pro sensors only). Sensor configurations on the microblock's Properties > Details tab are listed below. For more information, see the <i>Carrier Sensors Installation Guide</i> .	R: -56 to 245 °F (-48.9 to 118.3 °C)
Do not adjust the following settings: Min Present Value - Minimum present value the sensor transmits before indicating an alarm.	D: 45 °F (7.2 °C)
Max Present Value - Maximum present value the sensor transmits before indicating an alarm.	D: 96 °F (35.5 °C)
Setpoint Adjustment: Max Adjust - The amount that a user may adjust the setpoint at the sensors.	D: 5Δ °F (2.7Δ °C) R: 0 to 15Δ °F (0 to 8.3Δ °C)
Reset setpoint adjust to zero when unoccupied - Resets the setpoint bias to zero when the controller transitions to unoccupied.	D: Off
Timed Local Override: Allow Continuous (SPT Pro only) - If checked, a user can press the sensor's local override button until the Max Accum value is reached, then press one more time to have a continuous override until the next occupied period or until the user cancels the override. The display shows On during a continuous override.	D: Off R: Off/On
Each Pulse - The amount of time added to the total override time when a user pushes the sensor's override button.	D: 30:00 mm:ss R: 0:00 to 1440:00 mm:ss
Max Accum - The maximum amount of override time accumulated when a user pushes the sensor's override button.	D: 240:00 mm:ss R: 0:00 to 2000:00 mm:ss
Cancel override - How long a user must push the sensor's override button to cancel an override.	D: 3 seconds R: 0 to 60 seconds

Point Name/Description	Default/Range
<p>Sensor Array:</p> <p>Sensor calculation method - When using multiple SPT sensors, select the process variable to be passed to the controller.</p>	<p>D: Avg</p> <p>R: Avg, Min, Max</p>
<p>BACnet configuration:</p> <p>Network Visible - Must be enabled for other BACnet objects to read or write to this point, and for this point to generate alarms.</p>	<p>D: Enabled</p>
<p>Object Name - Do <u>not</u> change.</p>	<p>D: zone_temp</p>

<p>CO2 Sensor - The current voltage of the controller's RH/CO2 input.</p>	<p>R: 0 to 5 Vdc</p>
<p>RH Sensor - The current voltage of the controller's RH/CO2 input.</p>	<p>R: 0 to 5 Vdc</p>
<p>T55 Zone Temp - The value of the controller's T55 space temperature sensor input.</p>	<p>R: -56 to 245 °F (-48.9 to 118.3 °C)</p>
<p>SAT Sensor - The current value of the controller's SAT input.</p>	<p>R: -56 to 140 °F (-48.9 to 60 °C)</p>
<p>Smart Valve Pos - The value provided by the controller's Smart Valve.</p>	<p>R: _%</p>
<p>LUX - The value provided by the controller's ZS sensor to indicate lighting level.</p>	<p>R: 0 to 1020 lx</p>
<p>WS Battery Strength % - Displays charge strength indicated on the wireless space temperature sensor. If there are multiple wireless sensors, it displays the lowest value.</p>	<p>R: _%</p>
<p>WS Signal Strength % - Displays radio signal strength of the wireless space temperature sensor. If there are multiple wireless sensors, it displays the lowest value.</p>	<p>R: _%</p>
<p>Zone Humidity - The value provided by the controller's ZS or wireless sensor (if present). See details below.</p>	<p>R: _%</p>
<p>Zone Temp - The value provided by the controller's ZS or wireless sensor (if present).</p>	<p>R: _F°</p>
<p>ZS Zone CO2 - IAQ/CO2 signal received from CO2-enabled ZS Sensor(s).</p>	<p>R: _ppm</p>

ZS/WS Sensors	
<p>The following properties apply to the ZS or wireless Standard, ZS or wireless Plus, and ZS or wireless Pro only. Sensor configurations on the microblock's Properties > Details tab are listed below for:</p> <ul style="list-style-type: none"> • Zone Humidity • Zone Temp • ZS Zone CO2 	
<p>Default Value - The value that outputs when communication of all enabled sensors fails or during sensor startup. The default value is used for each sensor's corrected value in the i-Vu® system when the Valid? output is False (Off).</p>	<p>D: -999</p> <p>R: -999 to 999</p>

<p>Sensor Configuration table</p> <ul style="list-style-type: none"> (Index) Area – The Index number corresponds to the sensors defined in Configuration > Service Configuration > Sensor Binder. (Ctrl+click the property name. See Service Configuration.) 	<p>D: (1) Main ZS/WS Sensor R: (1) to (5)</p>
<ul style="list-style-type: none"> Use – Check Enable for each sensor that you want to include in the combination algorithm used to determine the output value. 	<p>D: Enabled index (1) R: checked or unchecked</p>
<ul style="list-style-type: none"> Calibration – If needed, enter a Calculated Value by adding the Calibration to the Raw Value for each ZS or wireless sensor. 	<p>D: 0 to 10</p>
<p>Combination Algorithm – If using more than one ZS or wireless sensor, select how the enabled sensors' values are to be combined to determine the output value. When the calculation is performed, only sensors with a valid value will be included.</p>	<p>D: Average R: Average Maximum Minimum</p>
<p>Input Smoothing – If the raw value from the sensor changes frequently, you can select one of the following options to send out an average of several readings on the output wire.</p> <ul style="list-style-type: none"> None - The raw value Minimum - The average of the last 2 readings Medium - The average of the last 5 readings Maximum - The average of the last 9 readings 	<p>D: Medium R: None Minimum Medium Maximum</p>
<p>Show on sensors – Select Local Value to have each enabled sensor display its individual sensed value, or Calculated Value to have each sensor display the value determined by the Combination Algorithm.</p>	<p>D: Calculated Value R: Calculated Value Local Value</p>
<p>Display Resolution – Defines the resolution of the value to be displayed on the sensor. For example, 1 displays only integers (e.g., 74) and 0.5 displays values to the nearest 0.5 (e.g., 74.5).</p>	<p>D: 1 R: 1000 100 10 1 0.5 0.1 0.01 0.001</p>
<p>COV Increment – To reduce Rnet traffic, you can force the microblock to update its output only when the sensed value changes by more than the COV Increment.</p>	<p>D: .1 R: 0 to 100</p>

Occupancy Contact State - Current hardware state of the controller's REMOTE input.	R: Open/Closed
Sensor Invalid – This internal input monitors the communication between the controller and the SPT sensor. Off indicates communication is normal.	R: Off/On
Rnet Sensed Occupancy – Displays occupancy status detected by wireless infrared motion sensor.	R: Off/On
Hot Water Valve - The current value of the controller's HWV/ACT output.	R: 0 to 100%
Smart Valve Cmd – The current value of the controller's output to the Smart Valve.	R: 0 to 100%


Heating Stage 1 - The current hardware state of the controller's HEAT1 output.	R: Off/On
Heating Stage 2 - The current hardware state of the controller's HEAT2 output.	R: Off/On
Fan S/S or EH 3 - The current hardware state of the controller's FAN/HEAT3 output. The function of this output depends on the terminal type.	R: Off/On

Appendix B: VVT terminal modes

Air Source Mode	Temperature Control Requirements	Terminal Type	Aux Heat	Terminal Mode	Damper Control (Damper Setpoint used)	Heat Control	Fan Control		
Off	None	All	N/A	Off	Hold Damper @65% (None)	Disable	Disable		
	Cooling	All	N/A	Off	Hold Damper @65% (None)	Disable	Disable		
	Heating	Single Duct	N/A	Off	Hold Damper @65% (None)	Disable	N/A		
		Series or Parallel Fan	No	Off	Hold Damper @65% (None)	Disable	Disable		
		Series Fan	Yes	Heating	Hold Damper @65% (None)	Enable	Enable		
		Parallel Fan	Yes	Heating	Close Damper (None)	Enable	Enable		
Vent	None	Single Duct	N/A	Vent	Vent Damper Position (Vent)	Disable	N/A		
		Series Fan	N/A	Vent	Vent Damper Position (Vent)	Disable	Enable		
		Parallel Fan	N/A	Vent	Vent Damper Position (Vent)	Disable	Disable		
	Cooling	Single Duct	N/A	Cooling	Modulate Damper Position (Cool)	Disable	N/A		
		Series Fan	N/A	Cooling	Modulate Damper Position (Cool)	Disable	Enable		
		Parallel Fan	N/A	Cooling	Modulate Damper Position (Cool)	Disable	Disable		
	Heating	Single Duct, Parallel Fan	Single Duct	No	Cooling	Minimum Damper Position (Cool)	Disable	Disable	
			Series Fan	No	Heating	Minimum Damper Position (Cool)	Disable	Enable	
			Single Duct	Yes	Reheat	Minimum Damper Position	Enable	N/A	
			Series or Parallel Fan	Yes	Heating	Minimum Damper Position (Cool)	Enable	Enable	
			Cooling	Single Duct	N/A	Cooling	Modulate Damper Position (Cool)	Disable	N/A
				Series Fan	N/A	Cooling	Modulate Damper Position (Cool)	Enable	Enable
Cool or Freecool	None	Single Duct	N/A	Vent	Minimum Damper Position (Cool)	Disable	N/A		
		Series Fan	N/A	Vent	Minimum Damper Position (Cool)	Disable	Enable		
		Parallel Fan	N/A	Vent	Minimum Damper Position (Cool)	Disable	Disable		
	Cooling	Single Duct	N/A	Cooling	Modulate Damper Position (Cool)	Disable	N/A		
		Series Fan	N/A	Cooling	Modulate Damper Position (Cool)	Enable	Enable		
		Parallel Fan	N/A	Cooling	Modulate Damper Position (Cool)	Disable	Disable		
Heating	Single Duct, Parallel Fan	Single Duct	No	Heating	Minimum Damper Position (Cool)	Disable	Disable		
		Series Fan	No	Heating	Minimum Damper Position (Cool)	Disable	Enable		
		Single Duct	Yes	Reheat	Minimum Damper Position	Enable	N/A		
		Series or Parallel Fan	Yes	Heating	Minimum Damper Position (Cool)	Enable	Enable		

Air Source Mode	Temperature Control Requirements	Terminal Type	Aux Heat	Terminal Mode	Damper Control (Damper Setpoint used)	Heat Control	Fan Control
Heat, Warmup	None	Single Duct, Parallel Fan	N/A	Heating	Minimum Damper Position (Heat)	Disable	Disable
		Series Fan	N/A	Heating	Minimum Damper Position (Heat)	Disable	Enable
	Cooling	Single Duct, Parallel Fan	N/A	Heating	Minimum Damper Position (Heat)	Disable	Disable
		Series Fan	N/A	Heating	Minimum Damper Position (Heat)	Disable	Enable
	Heating	Single Duct	No	Heating	Modulate Damper Position (Heat)	Disable	N/A
		Single Duct	Yes	Heating	Modulate Damper Position (Heat)	Enable	N/A
		Series or Parallel Fan	No	Heating	Modulate Damper Position (Heat)	Disable	Enable
		Series or Parallel Fan	Yes	Heating	Modulate Damper Position (Heat)	Enable	Enable
Pressurization (Linked air source only)	None	Single Duct, Parallel Fan	N/A	Pressurize	Maximum Damper Position (Cool)	Disable	Disable
		Series Fan	N/A	Pressurize	Maximum Damper Position (Cool)	Disable	Enable
	Cooling	Single Duct, Parallel Fan	N/A	Pressurize	Maximum Damper Position (Cool)	Disable	Disable
		Series Fan	N/A	Pressurize	Maximum Damper Position (Cool)	Disable	Enable
	Heating	Single Duct, Parallel Fan	No	Pressurize	Maximum Damper Position (Cool)	Disable	Disable
		Series Fan	No	Pressurize	Maximum Damper Position (Cool)	Disable	Enable
		Single Duct, Parallel Fan	Yes	Pressurize	Maximum Damper Position (Cool)	Disable	Disable
		Series Fan	Yes	Pressurize	Maximum Damper Position (Cool)	Disable	Enable
Evacuation/ Shutdown (Linked)	All	All	N/A	Evacuate	Close Damper	Disable	Disable

Appendix C: ZS Sensor display for VVT Zone II

Property	ZS Screen	Rnet Tag	Rnet Text ¹	Description
Active Alarms	Diagnostic	1550	-nonE StP-AL SPco2-AL SP_rH-AL Sat-AL	No Active Alarms Zone Temp Alarm Zone CO2 Alarm Zone Humidity Alarm Supply Air Temp Alarm
Active Maintenance	Diagnostic	1551	-nonE- SnSr-FLt Fltr-dtY Linc-FLt	No Active Maintenance Sensor Fault Dirty Filter Linkage Fault
Active Air Source Linkage Mode	Diagnostic	1552	OFF hEAt-uP hEAt cool FrEEcool PrESSrZE EuAcuATE vEnt no-Linc	Off Warm-up Heat Cool Freecool Pressurize Evacuate Vent Linkage Not Active
Supply Air Temp	Info	304		Air Source Supply Air Temp, if available
Air Flow Percentage of Nominal	Info	308		% of design air flow
Outdoor Air Temperature	Info	 F°		Outside Air Temp

¹ Rnet text is the scrolling text that appears on the ZS Pro Sensor's display.

NOTES

- To view properties on the **Diagnostic** Screen, hold the **i** button for 3 seconds. Tap the button to cycle through information to help troubleshoot your system.
- The Rnet tag is displayed on the ZS sensor display.
- To view properties on the Info Screen, press the **i** button. Tap the button to cycle through information.

Appendix D: BACnet points list

Point Name	Point Access	Units	Default Value	BACnet	
				BACnet Point Name	BACnet Object ID
Cool Min Damper Position	R	%		cl_min_dmp_pos	
Cool Max Damper Position	R	%		cl_max_dmp_pos	
Single Duct Reheat Damper Position	R	%		re_ht_min_dmp_pos	
Heat Min Damper Position	R	%		ht_min_dmp_pos	
Heat Max Damper Position	R	%		ht_max_dmp_pos	
Ventilation Position	R	%		vent_dmp_pos	
Occupied Cooling Setpoint	R/W	°F	75	occ_cl_stpt	AV:3001
Occupied Heating Setpoint	R/W	°F	70	occ_ht_stpt	AV:3002
Unoccupied Cooling Setpoint	R/W	°F	90	unocc_cl_stpt	AV:3003
Unoccupied Heating Setpoint	R/W	°F	60	unocc_ht_stpt	AV:3004
Occupancy Contact State	R	0=Open 1=Closed		occ_switch	BI:1001
Air Source Outdoor Air Temp	R	°F		link_ahu_oat	AV:2609
Air Source Static Pressure	R	in H2O		link_ahu_static	AV:2610
Air Source Supply Air Temp	R	°F		link_sat	AV:2608
Baseboard Heating Capacity	R	%		bas_bd_ht_cap	AV:2031
Cooling Demand Level	R			cool_demand_level	AV:9006
Damper Position	R	%		dpr_pos	AV:1013
Effective Cool Setpoint	R	°F		eff_cl_stpt	AV:3005
Effective Heat Setpoint	R	°F		eff_ht_stpt	AV:3006
Fan Off Delay	R/W	sec	120	fan_delay_off	AV:9024
Filter Runtime	R	hr		filter_rntm	AV:2015
Filter Service Alarm Timer	R/W	hr	0	filter_service_hrs	AV:2019
Heating Capacity	R	%		htg_cap	AV:2030
Heating Demand Level	R			heat_demand_level	AV:9036
Heating Lockout Temperature	R/W	°F	70	oat_ht_lockout	AV:9003
Indoor Air Quality CO2 (ppm)	R	ppm		iaq	AV:1009
lux sensor BACnet accessible	R			lux_bn	
Min Setpoint Separation	R/W	°^F	4	min_stpt_sep	
Occ Override Delay	R/W	min	15	occ_ovr_delay	AV:9028
Occupied Alarm Hysteresis	R/W	°^F	5	occ_spt_alm_hyst	
Occupied RH Control Setpoint	R/W	%rh	65	occ_dehum_stpt	AV:3011
Outdoor Air Temperature	R	°F		oa_temp	AV:1003
Override Time Remaining	R	min		ovrde_time	AV:2016
Power Fail Restart Delay	R/W	sec	60	start_delay	AV:9007
Setpoint Adjustment	R	°F		stpt_adj	AV:1006
Setpoint Adjustment Range	R/W	°^F	2	stpt_adj_range	AV:9015
Space Relative Humidity	R	%rh		space_rh	AV:1011
Space Temperature - Prime Variable	R	°F		space_temp	AV:2007
Standby Offset	R/W	°F	0	stdby_offset	AV:1017
Supply Air Temperature	R	°F		sa_temp	AV:1008
System Outdoor Air Temperature	R/W	°F	-999	system_oat	AV:1901
System Setpoint Adjustment	R/W	°F	-999	system_stpt_adj	AV:1913
System Space AQ	R/W	ppm	-999	system_iaq	AV:1903
System Space RH	R/W	%	-999	system_rh	AV:1904

Appendix D: BACnet points list

Point Name	Point Access	Units	Default Value	BACnet	
				BACnet Point Name	BACnet Object ID
Cool Min Damper Position	R	%		cl_min_dmp_pos	
System Space Temperature	R/W	°F	-999	system_spt	AV:1902
Airside Linkage Status	R	0=Not Active 1=Active		a_link_status	BV:2601
DCV Control	R/W	0=Disable 1=Enable	Inactive (0)	dcv_enable	
Fan	R	0=Off 1=On		sfan_status	BV:1003
Heat Enable	R/W	0=Disable 1=Enable	Active (1)	ht_enable	BV:1012
Occupancy Status	R	0=Unoccupied 1=Occupied		occ_status	BV:2008
Reset Filter Alarm	R/W	0=Off 1=On	Inactive (0)	filter_rntm_clr	BV:7517
RH Control	R/W	0=Disable 1=Enable	Inactive (0)	rh_enable	
Setpoint Adjustment	R/W	0=Disable 1=Enable	Active (1)	stpt_adj_enable	BV:1013
Shutdown	R/W	0=Inactive 1=Active	Inactive (0)	shutdown	BV:9001
Air Source Mode	R	1=Off 2=Warmup 3=Heat 4=Cool 5=Freecool 6=Pressure 7=Evac 8=Vent		link_ahu_mode	MSV:2005
BAS On / Off	R/W	1=Inactive 2=Occupied 3=Unoccupied	1	keypad_ovrde	MSV:1001
Optimal Start Type	R/W	1=None 2=Temp Compensated 3=Learning Adaptive	2	start_type	MSV:2009
Space Temp Source	R	1=Sensor Failure 2=SPT Sensor 3=T55 / T56 4=Network 5=Airside Linkage 6=Locked Value 7=ZS Sensor 8=Wireless Sensor		spt_status	MSV:2003
Terminal Mode	R	1=Off 2=Heating 3=Warm-Up 4=Vent 5=N/A 6=Cooling 7=Dehumidify 8=Reheat 9=Pressurize 10=Evacuate 11=Shutdown 12=IAQ Override 13=Air Balancing		terminal_status	MSV:2006
Terminal Type	R	1=Single Duct 2=Parallel Fan 3=Series Fan		terminal_type	MSV:2007

Point Name	Point Access	Units	Default Value	BACnet	
				BACnet Point Name	BACnet Object ID
Cool Min Damper Position	R	%		cl_min_dmp_pos	
Zone Type	R	1=Slave 2=VVT Master 3=VAV Master		zone_type	MSV:2008
Airside Linkage Status	R	0=Normal 1=Alarm		air_linkage_fail	BV:7030
Filter	R	0=Clean 1=Dirty		filter_alarm	BV:7017
High SPT	R	0=Normal 1=Alarm		spt_hi_alarm	BV:7011
Indoor Air Quality	R	0=Normal 1=Alarm		iaq_alarm	BV:7005
Low SPT	R	0=Normal 1=Alarm		spt_lo_alarm	BV:7012
Network OAT	R	0=Normal 1=Alarm		oat_fail	BV:7029
Space Relative Humidity	R	0=Normal 1=Alarm		sprh_hi_alarm	BV:7018
Space Temp Sensor	R	0=Normal 1=Alarm		spt_fail	BV:7001
Supply Air Temperature	R	0=Normal 1=Alarm		sat_alarm	BV:7004
Wireless Battery Strength Alarm	R	0=Normal 1=Alarm		ws_batt_alarm	BV:7064
Wireless Signal Strength Alarm	R	0=Normal 1=Alarm		ws_sig_alarm	BV:7065
ZS/WS Sensor Configuration	R	0=Normal 1=Alarm		zs_config_fail	BV:7055

Document revision history

Important changes to this document are listed below. Minor changes such as typographical or formatting errors are not listed.

Date	Topic	Change description	Code*
4/17/24	Introduction - Linkage	New topic	C-TS-AP-E-AP
	Appendix A - Linkage	Updated Linkage Provider	
4/15/24	Wiring field-supplied actuators to the analog input	Added note regarding external actuators	C-TS-CP-E
1/17/24	Specifications	Removed reference to USB ports	CO-TS-RD-E-RD
9/5/23	Specifications	Added Power Consumption section	X-PM-DD-R-DD
	Specifications	Added Australia and New Zealand to Compliance	X-PM-JW-R-BH
7/15/22	Appendix A: I/O Points	New rows - Smart Valve Pos, LUX, Smart Valve Cmd	C-AE-BB-O
	Appendix A: Alarms	New rows - Smart Valve Alarm, Heat Valve Cycling, Heat Valve Fail	
	Appendix A: Service Configuration	Changed "Combination Smart Valve" to "Combo Smart Valve"	
	Appendix A: Alarm Configuration	Changed "Smart Vlv1 Alarm Diff" to "Smart Valve Alarm Diff"	
	Appendix A: Setpoints	Under "Parallel Fan ON Value" - changed default to 25%, changed range to 0 to 100%	
	Appendix A: Unit Configuration	Changed "Max RH Override Position" to "Maximum RH Override Position" Changed "Act Net Vlv 1 Max Pos" to "Smart Valve Max Pos"	
	Appendix A: Status	New rows - "Hot Water Valve Cmd" Changed "Hot Wtr Vlv 1 Cmd" to "Smart Valve Cmd" Changed "Tot Wtr Vlv 1 Pos" to Smart Valve Pos"	
	FCC Compliance	Updated for next gen	X-PM-AB-R-BH
	CE and UKCA Compliance	Added UKCA compliance and updated for next gen	
	Specifications	Added Compliance row	
1/6/22	Specifications	"Physical" row changed to "Fire-retardant plastic ABS, UL94-5VA"	X-PM-BM-E
	I/O Points	Added "Timed Local Override" row. Under "ZS/WS Sensors", rephrased definition for "Occupancy Contact State".	C-AE-BB-O
	Appendix A > Maintenance	Added "Environmental Index" section. Removed "Remaining Heat Delay" row.	
	Appendix A > Service Configuration	Under PD (Pressure Dependent) Control, changed default value of "Damper Motor Travel Time" from 205 to 154 seconds	
	Appendix A > Alarm Configuration	Under Heating Valve Alarms, changed "Com Vlv1 Alarm Diff" to "Smart Vlv1 Alarm Diff". Changed "Heating Coil Valve Cycling Alarm" to "Heating Valve Cycling Alarm". Removed mention of SPT sensor.	
	Appendix A > Setpoints	Changed default value of "DCV Max Ctrl Setpoint" from 1050 to 1000 ppm. Under "Parallel Fan ON Value", "airflow control setpoint" changed to "target damper position".	
	Appendix A > Unit Configuration	New rows for "Act Net Vlv 1 Max Pos" and "Environmental Index Enable"	
	Zone Environmental Index	New section	
	Wiring devices to the VWT Zone II's Rnet port	Removed hybrid wiring configuration for Rnet port	X-TS-AK-E
2/16/21	Service Configuration	Removed "Two Position hot water only" from Valve Type	C-TS-CP-E
4/6/20	Wiring devices to the VWT Zone II's Act Net port	Clarified wiring guidelines.	X-TS-CP-E-EE

Important changes to this document are listed below. Minor changes such as typographical or formatting errors are not listed.

Date	Topic	Change description	Code*
12/12/19	Appendix A > Status, Unit Configuration, Alarm Configuration, Service Configuration	New properties added for i-Vu® Smart Valves.	C-A-MM-E
	Wiring devices to the VVT Zone II's Act Net port	New topic.	C-D
	To adjust driver properties > Act Net Network Details	Added i-Vu® Smart Valve information	C-D
	Specifications	Power specs expanded to include watts.	X-TS-TS-E-KC
8/30/19	Zone Airflow Control	Adjusted Damper Actuator travel time	C-TS-RD-E
	Unit Configuration	Removed limit on Setpoint Adjustment Range	C-TS-CP-E
1/25/19	Wiring devices to the VVT Zone II's Rnet port	Removed star configuration from the first paragraph.	X-TS-TS-0
	Specifications	Added surge CAUTION to Protection specification.	X-TS-AK-E-CC
12/17/18	Wiring the VVT Zone II for power > To wire the controller for power.	Added photograph of lifting up the cover.	X-H-RE-E-CC-JS
	Mounting the VVT Zone II > To mount the controller and actuator	Added caution stating that you must use the bushing, O-ring, and screws that are shipped with the VVT Zone II, along with applicable graphic.	X-H-RE-E-CC-JS
10/30/18	Wiring equipment to the VVT Zone II's outputs > Wiring diagram legend	Removed SPT sensors. Now shown as "Space temp sensor" in diagrams	C-D
	Wiring sensors to the VVT Zone II's inputs > To wire the T55 sensor to the controller	Removed reference to SPT sensors.	C-D
	Wiring sensors to the VVT Zone II's inputs	Removed ZS, SPT, and wireless sensors because they are wired to the Rnet port.	C-D
	Sequence of operation > Temperature sensors	Removed SPT sensors.	C-D
8/28/18	Wiring devices to the VVT Zone II's Rnet port	Added TruVu™ ET Display. Made one topic for overview and wiring for each device. Removed SPT sensor detail.	C-D
	Specifications	Reworded Rnet port specification and added power supplied by Rnet port. Added first paragraph to Protection specification.	X-H-JS-0
8/2/18	To wire the CO2 sensor to the controller	Diagram for the #33ZCT55CO2 corrected to show wiring to J5 - 3 and 2, not 1 and 2.	C-TS-CP-E-WB

* For internal use only



Carrier ©2024 · Catalog No. 11-808-603-01 · 4/17/2024