

**Wired Remote Controller  
7 Day Programmable Thermostat  
Ductless Systems  
KSACN0401AAA (High Wall/Console Models)  
KSACN0501AAA Cassette/Ducted/Console Models)**

## **INSTALLATION INSTRUCTIONS**



**NOTES:** Read the entire instruction manual before installing the unit.

# TABLE OF CONTENTS

	PAGE
SAFETY CONSIDERATIONS .....	2
COMPATIBILITY .....	5
INSTALLATION ACCESSORY .....	6
INSTALLATION .....	8
WIRING TO THE INDOOR UNIT .....	11
APPENDIX 1 .....	14
APPENDIX 2 .....	22
TROUBLESHOOTING .....	23
SPECIFICATION .....	24
TECHNICAL INDICATION AND REQUIREMENT .....	24

## SAFETY CONSIDERATIONS

Read these instructions thoroughly and follow all warnings or cautions included in the literature and attached to the unit. Consult local building codes and National Electrical Code (NEC) for special requirements.

Recognize safety information. This is the safety-alert symbol . When you see this symbol on the unit and in instructions or manuals, be alert to the potential for personal injury. Understand these signal words: **DANGER**, **WARNING**, and **CAUTION**. These words are used with the safety-alert symbol. **DANGER** identifies the most serious hazards which will result in severe personal injury or death. **WARNING** signifies hazards which could result in personal injury or death. **CAUTION** is used to identify unsafe practices which may result in minor personal injury or product and property damage. **NOTE** is used to highlight suggestions which will result in enhanced installation, reliability, or operation.



## CAUTION

### EQUIPMENT DAMAGE HAZARD

Failure to follow this caution may result in equipment damage or improper operation. Excessive torque can break the flare nut depending on installation conditions.



## CAUTION

Failure to follow this warning could result in personal injury or death.

Before beginning any modification or installation of this kit, ensure the main electrical disconnect is in the OFF position. Ensure power is disconnected to the fan coil unit. On some systems both the fan coil and the outdoor unit may be on the same disconnect. Tag the disconnect switch with a suitable warning label. There may be more than one to disconnect.



## CAUTION

### INSTALLATION

Entrust the distributor or authorized professionals to install the unit. Installation by unskilled persons may lead to improper installation, electric shock, or fire.

Re-installation must be performed by authorized professionals.

Non-compliance may lead to electric shock or fire.

**NOTES: Save this manual for future reference.**

- This manual provides a detailed description of the precautions that the user should be mindful of during operation.
- To ensure correct service of the wired controller, read this manual carefully before using the unit.
- Keep this manual, after reading it, for future reference.

**NOTES:**

1. Do not install the unit in a location vulnerable to flammable gas leaks. Once flammable gases are leaked and left around the wire controller, a fire may occur.
2. Do not operate with wet hands or allow water to enter the wire controller, otherwise an electric shock may occur.
3. The wiring should be a compatible connection cable for the current wired controller. Otherwise, electric leakage or heating may occur and result in a fire.
4. The specified cables shall be applied in the wiring. No external force may be applied to the connection wire terminal. Otherwise, a wire cut and heating may occur and result in a fire.

# COMPATIBILITY

## Compatibility

Type of Indoor Unit	Indoor Model Number	KSACN0401AAA	KSACN0501AAA
HIGH WALL	40MPHA	○	
	619PHA	○	
	DHMPHA	○	
	DLFPHA	○	
	40MAQ	○ †	
	619P*B	○ †	
	DHMSHA	○	
	DLFSHA		
	40MHH	○	
	DLFEHA	○	
CASSETTE	40MBQB*C		○
	40MBCQ		○
	DLFSCA		○
	DLFLCA		○
DUCTED	40MBQB*D		○
	40MBDQ		●
	DLFSDA		●
	DLFLDA		●
CONSOLE	40MBQB*F		
	40MBFQ	○ 9 -12 ‡	○ 18-58
	DLFSFA	○ 12	○ 18-24
	DLFLFA		○

○	Optional
●	Standard
	Not Compatible

### NOTES:

- + 7 Day programmable compatible with indoor units starting with Serial Number 0216V10001.
- ‡ Compatible with indoor units starting with Serial Number 0117V10001.
- Units built prior to these serial numbers require a Control Board Replacement on the Indoor unit.

# INSTALLATION ACCESSORY

## PREPARATION BEFORE INSTALLATION

1. Confirm the following required parts have been supplied.

### Parts

No.	Name	Qty.	Remarks
1	Wired controller	1	
2	Installation and owner's manual	1	
3	Screws	3	M4X20 (for mounting on the wall)
4	Wall plugs	3	For mounting on the wall
5	Screws	2	M4X25 (for mounting on the switch box)
6	Plastic screw bars	2	For fixing on the switch box
7	Battery	1	CR2032 3 VDC
8	Connection Extension Cable	1	19 feet (6 meters)
9	Adapter Board	1	Required for High Wall 40MAQ/619P*B/DHMPHA <b>Only</b>
10	Display Board	1	Required for High Wall 40MAQ/619P*B/DHMPHA <b>Only</b>

### NOTES:

Extension wire available through RCD (Replacement Components). Part Number: 17401204000769.

2. Prepare the following assemblies on site.

### Assemblies


No.	Name	QTY. (Embedded into Wall)	Specification (Only for Reference)	Remarks
1	Switch box	1		
2	Wiring tube (insulating sleeve and tightening screw)	1		

## WIRED CONTROLLER INSTALLATION PRECAUTION


1. This manual provides the wired controller installation method. Refer to the wiring diagram in this installation manual to wire the wired controller with the indoor unit.
2. The wired controller works in a low voltage loop circuit. Do not connect directly to 208/230V and 460V. Do not wire this kind of wire into a loop. Wiring clearance between the configured tubes should range 11.81–19.69 inches (30–50 cm) or above.
3. The shielded wire of the wired controller must be properly grounded.

**NOTES:** Upon completion of the wired controller connection, do not use a tramegger to test the insulation.

## CONTROLLER DIMENSIONS

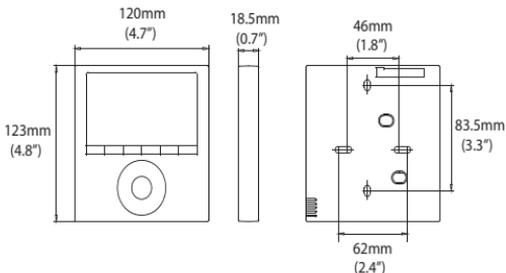


**Fig. 1 — Wired Remote Controller Dimensions**

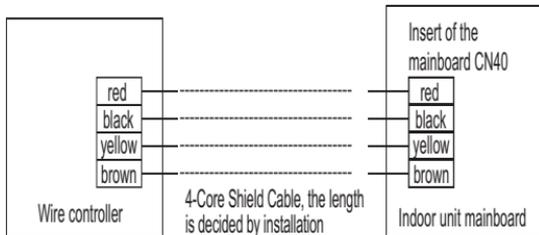

**Fig. 2 — Wiring Connection Diagram**

# INSTALLATION

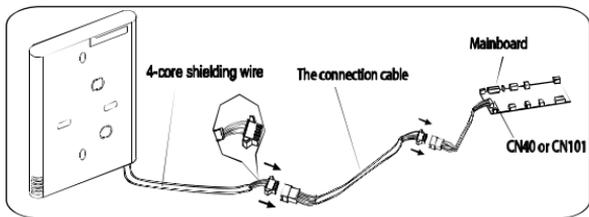


**Fig. 3 – Typical Wiring to Mainboard**

1. Connect the female joint of the wires group from the mainboard with the male joint of the connective wires group (see Fig. 3).
2. Connect the other side of the connective wires group with the male joint of the wires group leads from the wire controller (see Fig. 3).

**NOTES:** Follow the indoor unit installation manual for proper connection. See Appendix 1 for installation on High Wall 40MAQ/619P\*/DHMPHA Only.

## WIRED CONTROLLER UPPER PART REMOVAL

1. Insert a flat screwdriver into the slots in the lower part of the wire controller (2 places).
2. Remove the upper part of the wire controller (see Fig. 4).

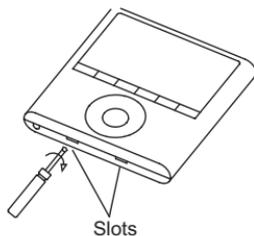


**Fig. 4 – Slots**

**NOTES:** The PCB is mounted in the upper part of the wired controller. Be careful not to damage the board with the screwdriver.


## FASTEN THE WIRED CONTROLLER BACK PLATE

1. For surface mounting, fasten the back plate on the wall with the 3 screws (M4x20) and plugs (see Fig. 5).

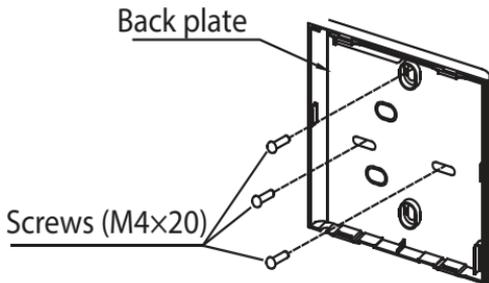

**Fig. 5 – Fasten Back Plate**


2. For switch box mounting, fasten the back plate on the switch box with 2 screws (M4x25) and fasten it on the wall with 1 screw (M4x20) (see Fig. 6).

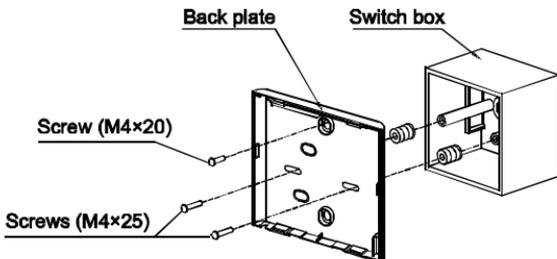

**Fig. 6 – Flush Mounting**

**NOTES:** Place on a flat surface. Be careful not to distort the wire controller's back plate by over-tightening the mounting screws.

## BATTERY INSTALLATION

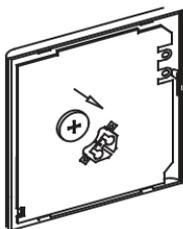


**Fig. 7 – Battery Installation**

1. Place the battery in the unit and ensure the positive side of the battery is in accordance with the polarity markings (see Fig. 7).
2. Set the correct time before operating. Batteries in the wired controller can maintain the correct time during a power failure. When the power is restored and the displayed time is not correct, replace the battery (CR2032 3VDC).

# WIRING TO THE INDOOR UNIT


There are three methods:

1. From the rear

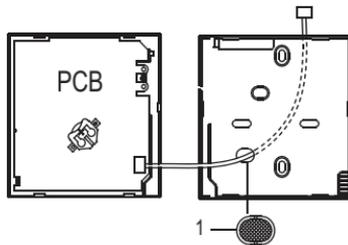

**Fig. 8 – From the rear**


2. From the bottom

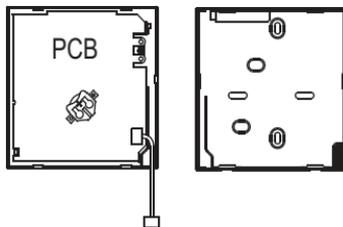

**Fig. 9 – From the bottom**

## WIRING TO THE INDOOR UNIT (CONT)


3. From the top

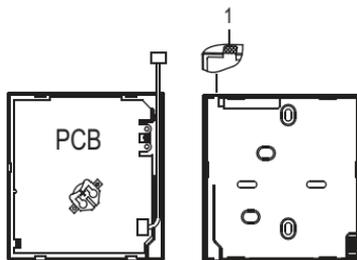

**Fig. 10 – From the top**

4. Notch the part for the wiring to pass through with a nipper tool.


**NOTES: DO NOT** allow water to enter the remote control. Use the trap and putty to seal the wires.

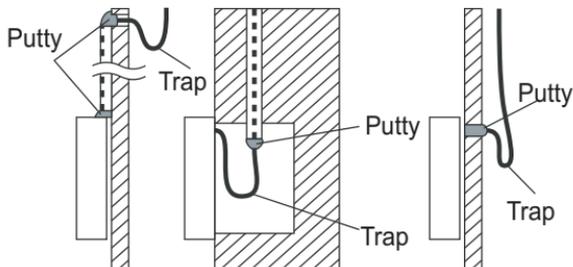

**Fig. 11 – Seal the wires**

## REATTACHING THE WIRED CONTROLLER'S UPPER PART

1. While adjusting and mounting the upper case, avoid clamping the wiring during installation (see Fig 12).

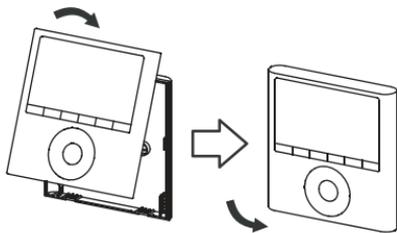


**Fig. 12 – Buckle the upper case**

**IMPORTANT:** The pictures in this manual are for illustration purposes only. Your wire controller may differ slightly.

## APPENDIX 1

### DISPLAY BOARD AND ADAPTER BOARD INSTALLATION ON 40MAQ/619P\*B/DHMPHA HIGH WALL ONLY

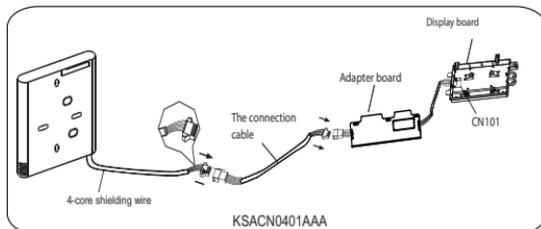

**Fig. 13 – Installation of KSACN0401AAA**

1. Install the Adapter Board and the Display Board only on the High Wall 40MAQ/619P\*/DHMPHA Only (see the Appendix for instructions).
2. Connect the female joint of the wires group from the adapter board with the male joint of the connective wires group. Next, connect the other side of the adapter board with the display board (see Fig. 13). Follow the instructions on the indoor unit's installation instructions for more details.
3. Connect the other side of the connective wires group with the male joint of the wires group leads from the wire controller (see Fig. 13).

## DISPLAY BOARD AND ADAPTER BOARD INSTALLATION ON 40MAQ/619P\*B/DHMPHA HIGH WALL ONLY (CONT)

1. Open the front panel.



**Fig. 14 – Front Panel**

2. Disconnect the wire from the main controller board.



**Fig. 15 – Main Controller Board**

## DISPLAY BOARD AND ADAPTER BOARD INSTALLATION (CONT)

3. Identify the components. Fig. 16 shows, from left to right, the wired controller, adapter board and the display board.



**Fig. 16 – Wired Controller, Adapter Board, and Display Board**

4. Identify connections on the Display Board.
  - CN201 is the display board connection to the main board wire (on the display board).



**Fig. 17 – CN201 Connection to the Main Control Board**

## DISPLAY BOARD AND ADAPTER BOARD INSTALLATION (CONT)

- CN101 is the display board connection to the Adapter board wire (on the display board).



**Fig. 18 – CN101 Connection to the Adapter Board**


5. Uninstall the display board from the front panel. Keep the display board holder.



**Fig. 19 – Display Board Holder**

6. Carefully bend and break off the rectangular section (upper left section with two diagonal holes) from the display board.

## DISPLAY BOARD AND ADAPTER BOARD INSTALLATION (CONT)

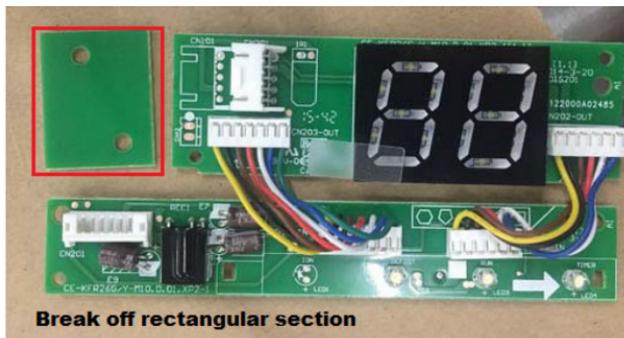

**Fig. 20 – Display Board**

**NOTES:** Break off the upper left hand rectangle (section with the two holes marked with a red rectangle).

7. Replace the old display board (for the New Display board provided) and secure with the clips. To uninstall the clips, push the clips inward.

**NOTES:** There are 4 clips just above the numeric display (88) which run the length of the holder.



**Fig. 21 – Display Board Installed on the Display Board Holder**

## DISPLAY BOARD AND ADAPTER BOARD INSTALLATION (CONT)

- Before assembling mounting back on the Front Panel, remove the display board's screen cover.



**Fig. 22 – Display Board Screen Cover**

- Connect the Wires to the Adaptor Board.
  - Connect the wire coming from the Display board to the Adaptor Board (this connection consists of 5 wires).



**Fig. 23 – Adaptor Board to Display Board Connection**

## DISPLAY BOARD AND ADAPTER BOARD INSTALLATION (CONT)

- b. Connect the wire coming from the Wired Remote Controller to the Adapter Board (this connection consists of 4 wires).



**Fig. 24 – Wired Controller port**

10. Once the ports are connected, install the cover.



**Fig. 25 – Adapter Board**

11. Mount the new display board and Adapter board to the Front Panel.

## DISPLAY BOARD AND ADAPTER BOARD INSTALLATION (CONT)

12. Connect the wired remote controller to the display board and the Adapter board.




**Fig. 26 – Front Panel with New Display Board and Adapter Board**


13. Connect the wire from the main controller board (see Fig. 2).

## APPENDIX 2

### INSTALLATION of KSACN0401AAA for CONSOLE INDOOR MODELS SIZES 9-12

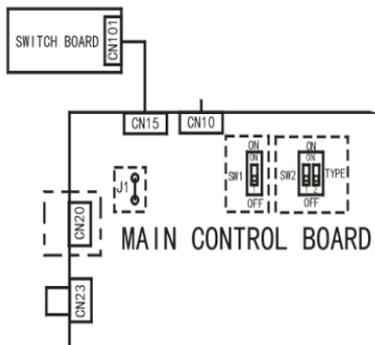

**Fig. 27 – Main Control Board**

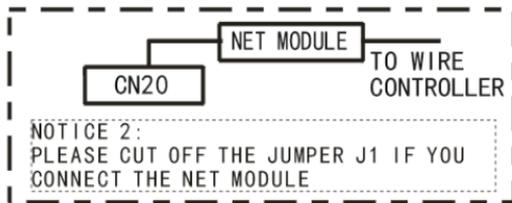

**Fig. 28 – Net Module**

1. Cut off the J1 jumper cable located on the Main Control Board (see Fig. 5).
2. Locate the net module connected to CN20 on the Main Control Board.
3. Connect the wired control with the net module.

# TROUBLESHOOTING

For ease of service, the systems are equipped with diagnostic code display LEDs on the Wired Remote Controller, indoor and outdoor units. The indoor diagnostic display is a combination of flashing LEDs on the display panel or the front of the unit.

Some indoor units display error codes specifying failure modes in the outdoor units. If possible, always check the diagnostic codes displayed on the indoor unit first. The diagnostic codes displayed in the indoor and wired remote controller are listed in the **Troubleshooting** table below.

## Troubleshooting

DISPLAY on IDU	DISPLAY on PROGRAMMABLE WIRED CONTROLLER	INDOOR UNIT ERROR CODE DEFINITION
N/A	F0	Communication error between wired controller and indoor unit
N/A	F1	The cassette faceplate is abnormal
E0	E7	Indoor unit EEPROM error
E1	E1	Communication error between indoor unit and outdoor units
E3	E8	Indoor fan speed error
E4	E2	Indoor Return air temperature sensor error
E5	E3	Indoor coil temperature sensor error
EC	EF	Low refrigerant
EE	EE	High water level alarm
E8	EF	Communication error in twins system
E9	EF	One unit failure in twins system
F1	E5	Outdoor ambient temperature sensor error
F2	E5	Outdoor coil temperature sensor error
F3	E5	Compressor discharge temperature sensor error
F4	Ed	Outdoor unit EEPROM error
F5	Ed	Outdoor unit fan speed error
F6	E4	Indoor coil outlet temperature sensor error
FA	EF	Communication error
P0	Eb	Inverter module IPM error
P7	EF	Outdoor IGBT temperature sensor error

# SPECIFICATION

## Specification

Input voltage	KSACN0401AAA: DC 5V KSACN0501AAA: DC 12V
Ambient temperature	23~110F (-5~43C)
Ambient humidity	RH40%~RH90%

## Wiring Specifications

WIRING TYPE	SIZE	MAXIMUM LENGTH
Sheathed vinyl cord or cable	0.029 in–0.74mm (0.75–1.25mm <sup>2</sup> )	KSACN0401AAA: 66 ft (20m)
		KSACN0501AAA: 164 ft (50m)

# TECHNICAL INDICATIONS AND REQUIREMENT

EMC and EMI comply with the CE certification requirements.